

***TM 5-4120-377-24P**
T.O. 35E9-241-4

TECHNICAL MANUAL

**UNIT, DIRECT SUPPORT AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST**

**AIR CONDITIONER, VERTICAL COMPACT
18,000 BTU/HR
208-VOLT, 3-PHASE, 400 HERTZ
KECO MODEL F18T4-2S
NSN 4120-01-127-0716
APPLIED MODEL 3788
NSN 4120-01-220-7381**

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

‘ This manual supersedes TM5-4120-377-24P, dated 30 November 1988.

**HEADQUARTERS, DEPARTMENTS OF THE
ARMY AND THE AIR FORCE**

1 APRIL 1991

TECHNICAL MANUAL
NO. 5-4120-377-24P

HEADQUARTERS
DEPARTMENTS OF THE ARMY AND THE AIR FORCE
WASHINGTON, D.C., 1 April 1991

**UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST**

**AIR CONDITIONER, VERTICAL COMPACT,
18,000 BTU/HR
208 VOLT, 3 PHASE, 400 HERTZ
KECO MODEL F18T4-2S NSN 4120-01-127-0716
APPLIED MODEL 3788 NSN 4120-01-220-7381**

Current as of 25 June 1990

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes, or if you know of a way to improve these procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, AITN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. You may also submit your recommended changes by E-mail directly to <mpmt%avma28@st-louis-emh7.army.mil>. A reply will be furnished directly to you. Instructions for sending an electronic 2028 maybe found at the back of this manual immediately preceding the hard copy 2028.

For Air Force, submit AFTO Form 22 (Technical Order System Publication Improvement Report and Reply) in accordance with paragraph 6-5, Section VI, T.O. 00-5-1. Forward to Commander, San Antonio Air Logistics Center, ATTN: SA-ALC/TIRTR, Kelly Air Force Base, TX 78241-5000.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

	PAGE	ILLUS/ FIGURE
SECTION I	INTRODCUTION	1
SECTION II	REPAIR PARTSS LIST	1
Group 01	COVERS, PANELS, GRILLES, SCREENS AND INFORMATION PLATES	
	Top, Front, and Left Side Outside Panels	1-1 1
	Right Side Rear Outside Panels	2-1 2
	Rear Panel	3-1 3
Group 02	FILTERS AND MIST ELIMINATOR	
	Filters and Mist Eliminator	4-1 4
Group 03	ELECTRICAL	
	Control Panel Assembly	5-1 5
	Block Off Assembly.	6-1 6
	Wiring Harnesses	7-1 7

*This manual supersedes TM 5-4120-377-24P, dated 30 November 1966.

	Junction Box	8-1	8
	Junction Box Cover and Wiring Harnesses	9-1	9
	Junction Box Internal Part	10-1	10
Group 04	HEATERS, EVAPORATOR FAN, CONDENSER FAN, AND MOTOR		
	Heaters and Related Parts	11-1	11
	Evaporator and Condenser Fans and Motor	12-1	12
	Evaporator and Condenser Fans Motor (Applied Mode 13788)	13-1	13
Group 05	REFRIGERATION SYSTEM		
	Pressure Switches	14-1	14
	Solenoid Valves and Compressor Piping	15-1	15
	Solenoid Valves and Compressor Piping (Applied Model 3788)	16-1	16
	Compressor	17-1	17
	Evaporator Coil Piping	18-1	18
	Evaporator Coil and Piping (Applied Mode 13788)	19-1	19
	Condensor Coil and Piping	20-1	20
	Condensor Coil and Piping (Applied Model 3788)	21-1	21
Group 06	CASING AND BOTTOM PANEL		
	Miscellaneous Casing and Bottom Panel Items	22-1	22
	Casing	23-1	23
Group 07	BULK MATERIAL	BULK-1	BULK
SECTION III	SPECIAL TOOLS LIST	24-1	
Group 08	SPECIALTOOLS		
	Special Tools	24-1	24
SECTION IV	CROSS-REFERENCE INDEXES	I-1	
	National Stock Number Index	I-1	
	Part Number Index	I-7	
	Figure and Item Number Index	I-27	

UNIT, DIRECT SUPPORT
AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

SECTION I. INTRODUCTION

1. SCOPE. This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit, direct support and general support maintenance of the Air Conditioner, KECO Model F18T4-2S, Applied Model 3788. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. GENERAL. In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown on the associated illustration(s) /figure(s).


b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. Cross-references Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item number in alphanumeric sequence and cross references NSN, CAGEC and part number.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

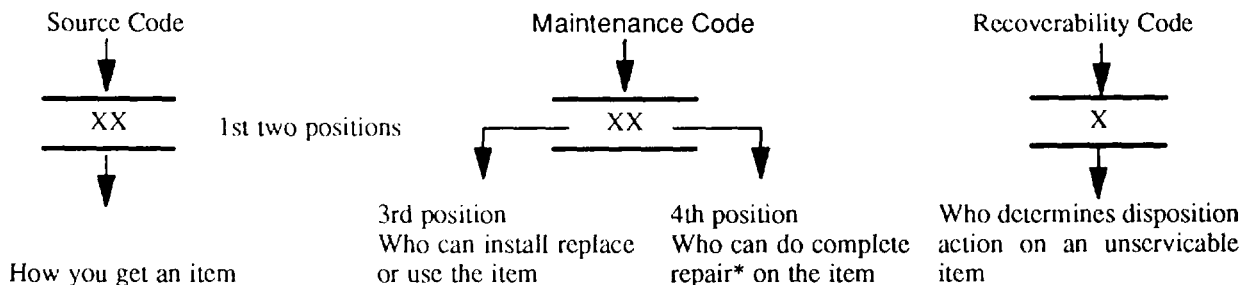

*Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

Code	Explanation
PA	Stocked items; use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3d position of the SMR code. **NOTE: Items coded PC are subject to deterioration.
PB	
PC**	
PD	
PE	
PF	
PG	
KD	Items with these codes are not to be requested/requisitioned individually They are part of a kit which is authorized to the maintenance category indicated in the 3d position of the SMR code. The complete kit must be requisitioned and applied.
KF	
KB	

	Explanation
MO — (Made at org AVUM Level)	Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION and USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in this RPSTL. If the item is authorized to you by the 3d position code of the SMR code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.
MF — (Made at DS/AVUM Level)	
MH — (Made at GS Level)	
ML — (Made at Specialized RepairActivity(SRA))	
MD — (Made at Depot)	