

*TM 5-4120-387-24P

TECHNICAL MANUAL

ORGANIZATIONAL, DIRECT AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST

AIR CONDITIONER,
VERTICAL, 6,000 BTU

NSN 4120-01-203-8656

Approved for public release. Distribution is unlimited.

*Supersedes TM 5-4120-387-24P, 21 October 1987, Including all changes.

HEADQUARTERS, DEPARTMENT OF THE ARMY

9 OCTOBER 1990

TECHNICAL MANUAL
NO. 5-4120-387-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 9 October 1990

ORGANIZATIONAL, DIRECT AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST

**AIR CONDITIONER, VERTICAL, 6,000 BTU
NSN 4120-01-203-6656**

Current as of 13 April 1990

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes, or if you know of a way to improve these procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, AITN: AMSAT-I-MP 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. You may also submit your recommended changes by E-mail directly to <daf2028@st-louis-emh7.army.mil>. A reply will be furnished directly to you.

The following format shall be used for electronic 2028s. The subject line must be exactly the same and all fields must be included; however only the following fields are mandatory: 1, 3, 4 5, 6, 7, 8, 9, 10, 13, 15, 16, 17, and 27.

From: "Whomever" <whomever@avma27.army.mil>
To: mpmt@avma27.army.mil

Subject: DA Form 2028

- | | |
|--|---|
| 1. From: Joe Smith | 15. Submitter Name: Smith |
| 2. Unit: home | 16. Submitter Phone: 123-123-1234 |
| 3. Address: 4300 Park | 17. Problem: 1 |
| 4. City: Hometown | 18. Page: 2 |
| 5. St: MO | 19. Paragraph: 3 |
| 6. Zip: 7777 | 20. Line: 4 |
| 7. Date Sent: 19-OCT-93 | 21. NSN: 5 |
| 8. Pub no: 55-2840-229-23 | 22. Reference: 6 |
| 9. Pub Title: TM | 23. Figure: 7 |
| 10. Publication Date: 04-JUL-85 | 24. Table: 8 |
| 11. Change Number: 7 | 25. Item: 9 |
| 12. Submitter Rank: MSG | 26. Total: 123 |
| 13. Submitter FName: Joe | 27. Text: |
| 14. Submitter MName: T | This is the text for the problem below line 27. |

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

*This manual supersedes TM 5-4120-387-24P, 21 October 1987, including all changes.

TABLE OF CONTENTS

SECTION		PAGE	ILLUS/ FIGURE
Section I	INTRODUCTION	1	
Section II	REPAIR PARTS LIST	1-1	
Group 01	Covers, Panels, Grilles, Screens and Information Plates and Guards		
	Panels, Grilles and Related Parts	1-1	1
Group 02	Filter and Mist Eliminator	2-1	2
Group 03	Electrical System		
	Junction Box and Components	3-1	3
	Control Panel and Components	4-1	4
	Wire Harness and Components	5-1	5
Group 04	Heaters, Evaporator Fan, Condenser Fan and Motor		
	Thermostats and Heaters	6-1	6
	Fans and Ring	7-1	7
	Evaporator and Condenser Fan Motor	8-1	8
Group 05	Refrigeration System		
	Pressure Switches	9-1	9
	Charging Valves	10-1	10
	Compressor	11-1	11
	Refrigeration Tubing and Fitting	12-1	12
Group 06	Casing and Bottom Panel		
	Condensation Trap and Drains	13-1	13
	Casing	14-1	14
	Insulation	15-1	15
	Fresh Air Damper	16-1	16
Group 07	Bulk Materials	Bulk-1	
Section III	Special Tools List (not applicable)		
Section IV	Cross Reference Indexes	1-1	
	National Stock Number Index	1-1	
	Part Number Index	1-6	
	Figure and Item Number Index	1-22	

UNIT, DIRECT SUPPORT
AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

SECTION I. INTRODUCTION

1. SCOPE. This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of organizational, direct support, general support maintenance of the air conditioner. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. GENERAL. In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown on the associated illustration(s) /figure(s),


b. Section III. Special Tools List. A list of special tools, special TM DE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. Cross-references Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item number in alphanumeric sequence and cross references NSN, CAGEC and part number.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

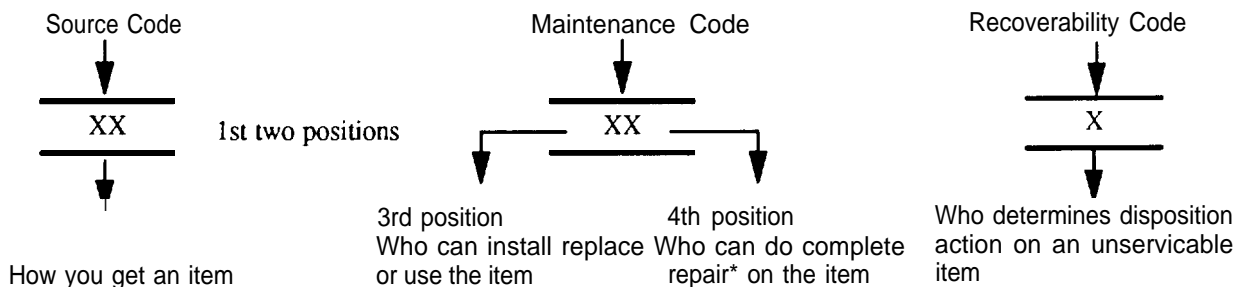

*Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

Code	Explanation
PA	Stocked items; use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3d position of the SMR code. **NOTE: Items coded PC are subject to deterioration.
PB	
PC**	
PD	
PE	
PF	
PG	
<div style="border: 1px solid black; padding: 5px; display: inline-block;"> KD KF KB </div>	Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3d position of the SMR code. The complete kit must be requisitioned and applied.

	Explanation
MO — (Made at org AVUM Level) MF — (Made at DS/AVUM Level) MH — (Made at GS Level) ML — (Made at Specialized Repair Activity (SRA)) MD — (Made at Depot)	Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION and USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in this RPSTL. If the item is authorized to you by the 3d position code of the SMR code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.

Code	Explanation
AO— (Assembled by org/AVUM Level)	Items with these codes are not to be requested/requisitioned individually. The parts that make up the assembled item must be requisitioned or fabricated and assembled at the level of maintenance indicated by the source code. If the 3d position code of the SMR code authorizes you to replace the item, but the source code indicates the items are assembled at a higher level, order the item from the higher level of maintenance.
AF — (Assembled by DS/AVIM Level)	
AH — (Assembled by GS Category)	
AL — (Assembled by SRA)	
AD — (Assembled by Depot)	

Code	Explanation
X A --	Do not requisition "XA" -coded item. Order its next higher assembly, (Also, refer to the NOTE below.)
X B - -	If an "XB" item is not available from salvage, order it using the CAGEC and part number given.
X C - -	Installation drawing, diagram, instruction sheet, field service drawing, that is identified by Reciprocating Compressor manufacturer's part number.
X D - -	Item is not stocked. Order an "XD" -coded item through normal supply channels using the CAGEC and part number given, if no NSN is available.

NOTE

Cannibalization or controlled exchange, when authorized, may be used as a source of supply for items with the above source codes, except for those source coded "XA" or those aircraft support items restricted by requirements of AR 750-1.

(2) Maintenance Code. Maintenance codes tells you the level(s) of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the SMR code as follows:

(a) The maintenance code entered in the third position tells you the lowest maintenance level authorized to remove, replace, and use an item. The maintenance code entered in the third position will indicate authorization to one of the following levels of maintenance.

Code	Application/Explanation
C —	Crew or operator maintenance done within organizational or aviation unit maintenance.
O —	Organizational or aviation unit category can remove, replace, and use the item.
F —	Direct support or aviation intermediate level can remove, replace, and use the item.
H —	General support level can remove, replace, and use the item.
L —	Specialized repair activity can remove, replace, and use the item.
D —	Depot level can remove, replace, and use the item.