


TECHNICAL MANUAL

**OPERATOR'S, UNIT, DIRECT
SUPPORT, AND GENERAL SUPPORT
MAINTENANCE MANUAL**

**AIR CONDITIONER, HORIZONTAL,
COMPACT, 36,000 BTU/HR,
MULTI-POWER INPUT
208V, 3 PHASE, 50/60/400 HZ
MODEL MH-40-MP
NSN 4120-01-330-6543**

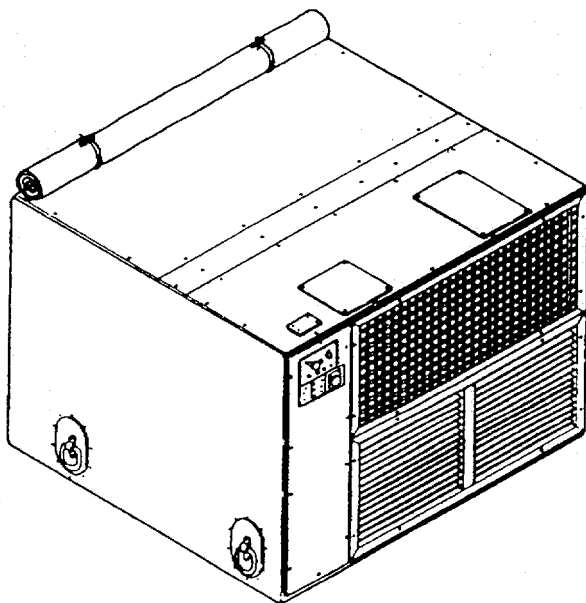

INTRODUCTION	1-1
---------------------	------------

OPERATING INSTRUCTIONS	2-1
-----------------------------------	------------

UNIT MAINTENANCE INSTRUCTIONS	3-1
--	------------

DIRECT SUPPORT MAINTENANCE INSTRUCTIONS	4-1
--	------------

GENERAL SUPPORT MAINTENANCE INSTRUCTIONS	5-1
---	------------

MAINTENANCE ALLOCATION CHART	B-1
---	------------

COMPONENTS OF END ITEM AND BASIC ISSUE ITEMS LISTS	C-1
---	------------

INDEX	INDEX-1
--------------	----------------

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

**HEADQUARTERS, DEPARTMENT OF THE ARMY
31 AUGUST 1994**

TECHNICAL MANUAL
NO. 9-4120-404-14

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON D. C., 31 August 1994

Operator's, Unit, Direct Support, and
General Support Maintenance Manual

For

AIR CONDITIONER, HORIZONTAL,
COMPACT, 36,000 BTU/HR,
MULTI-POWER INPUT
208V, 3 PHASE, 50/60/400 HZ,
MODEL MH-40-MP
NSN 4120-01-330-6543

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended changes to publications and Blank Forms) or DA Form 2028-2 located in the back of this manual direct to: Commander, U.S. Army Communications-Electronics Command & Fort Monmouth, ATTN: AMSEL-LC- LEO-D-CS-CFO, Fort Monmouth, NJ 07703-5006. Reply will be furnished to you.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

TABLE OF CONTENTS

	Page
CHAPTER 1. INTRODUCTION	1-1
Section I. General Information	1-1
Section II. Equipment Description and Data	1-2
Section III. Principles of Operation	1-9
CHAPTER 2. OPERATING INSTRUCTION	2-1
Section I. Description and Use of Operator's Control s and Indicators	2-2
Section II. Operator Preventive Maintenance Checks and Services (PMCS)	2-5
Section III. Operation Under Usual Conditions	2-10
Section IV. Operation Under Unusual Conditions	2-19

TABLE OF CONTENTS - Continued

	Page
CHAPTER 3. UNIT MAINTENANCE INSTRUCTIONS	3-1
Section I. Lubrication Instructions	3-3
Section II. Repair Parts, Special Tool, Test, Measurement, and Diagnostic Equipment (TMDE) and Support Equipment	3-3
Section III. Service Upon Receipt	3-3
Section IV. Unit Preventive Maintenance Checks and Services (PMCS)	3-18
Section V. Unit Troubleshooting Procedures	3-28
Section VI. Unit Maintenance Procedures	3-39
Section VII. Preparation for Storage or Shipment	3-135
CHAPTER 4. DIRECT SUPPORT MAINTENANCE INSTRUCTIONS	4-1
Section I. Repair Parts, Special Tool, Test, Measurement, and Diagnostic Equipment (TMDE) and Support Equipment	4-1
Section II. Direct Support Troubleshooting Procedures	4-1
Section III. Direct Support Maintenance Procedures	4-4
CHAPTER 5. GENERAL SUPPORT MAINTENANCE INSTRUCTIONS	5-1
Section I. General Support Maintenance Procedures	5-1
APPENDIX A. REFERENCES	A-1
APPENDIX B. MAINTENANCE ALLOCATION CHART	B-1
Section I. Introduction	B-1
Section II. Maintenance Allocation Chart	B-4
Section III. Special Tools and Test Equipment Requirements	B-11
Section IV. Remarks	B-12
APPENDIX C. COMPONENTS OF-END ITEM (COEI) AND BASIC ISSUE ITEMS (BII) LIST	C-1
Section I. Introduction	C-1
Section II. Components of End Item List	C-2
Section III. Basic Issue Items	C-4

TABLE OF CONTENTS - Continued

		Page
APPENDIX D.	ADDITIONAL AUTHORIZATION LIST (AAL)	D-1
Section I.	Introduction	D-1
Section II.	Additional Authorization List	D-1
APPENDIX E.	EXPENDABLE, DURABLE, SUPPLIES AND MATERIALS LIST (EDSML)	E-1
Section I.	Introduction	E-1
Section II.	Expendable and Durable Items List	E-2
APPENDIX F.	ILLUSTRATED LIST OF MANUFACTURED ITEMS	F-1
Section I.	Introduction	F-1
INDEX	Index-1

LIST OF ILLUSTRATIONS

Figure No.	Title	Page
1-1	Air Conditioner	1-0
1-2	Location of Major Components	1-6
1-3	Refrigeration Flow Schematic	1-10
1-4	Logic Box Assembly/Motor Controller Assembly Interface Schematic	1-12
1-5	Electrical Schematic	1-13
1-6	Electrical Wiring Diagram	1-14
2-1	Operator's Controls and Indicators	2-4
2-2	Routing Diagram for Operator PMCS	2-7
2-3	Location of Information Plates	2-14
2-4	Identification of Information Plates	2-15
3-1	Installation Dimensions	3-8
3-2	Remote Mounting of Control Module	3-11
3-3	Fabric Cover Removal	3-12
3-4	Alternate Input Cable Connector (J8) Locations	3-13
3-5	Ground Cable Connection	3-14
3-6	Fabric Cover	3-45
3-7	Access Panel	3-47
3-8	Conditioned Air Louver	3-49
3-9	Return Air Louver	3-51
3-10	Condenser Exhaust Louvers	3-53
3-11	Condenser Exhaust Louvers Disassembly.....	3-54

LIST OF ILLUSTRATIONS - Continued

Figure No.	Title	Page
3-12	Ventilation Guard and Ventilation Air Filter	3-56
3-13	Filter, Air Conditioning	3-58
3-14	Condenser Coil Guard.....	3-59
3-15	Information Plates	3-61
3-16	Metal Covers	3-63
3-17	Mist Eliminator	3-65
3-18	Heating Elements	3-68
3-19	Heater Cutout Switch	3-70
3-20	Heater Relay	3-74
3-21	Condensate Drain Assembly	3-76
3-22	Condenser Fan Motors	3-80
3-23	Louver Actuator Cables	3-83
3-24	Circuit Breaker (Cal)	3-86
3-25	Logic Box Assembly.....	3-89
3-26	Motor Controller	3-105
3-27	Transformer	3-107
3-28	Transformer Schematic	3-108
3-29	Rectifier	3-111
3-30	Control Panel Assembly	3-114
3-31	EMI Filter.....	3-118
3-32	Relay	3-121
3-33	Coil Frost Switch.....	3-123
3-34	Terminal Boards (TB 1), (TB2), and (TB3)	3-127
3-35	Coil (Solenoid Valve)	3-134
4-1	Refrigerant Equipment Set Up	4-6
4-2	Condensate Drain Assembly	4-17
4-3	Evaporator Fan Assembly	4-19
4-4	Evaporator Fan Scrolls	4-22
4-5	Evaporator Impeller Fans	4-24
4-6	Evaporator Motor	4-26
4-7	Evaporator Motor Bracket and Chassis	4-28
4-8	Condenser Fan Scrolls	4-30
4-9	Condenser Impeller Fans	4-33
4-10	Condenser Fan Braces and Support	4-36
4-11	Damper Actuator and Ventilation Damper	4-38
4-12	Dehydrator	4-42
4-13	Solenoid Valve	4-44
4-14	Damper Actuator Cylinder	4-47
4-15	Receiver	4-49
4-16	Pressure Relief Valve	4-51
4-17	Accumulator	4-53

LIST OF ILLUSTRATIONS

Figure No.	Title	Page
4-18	Pressure Switches (S5) and (S6)	4-55
4-19	Service Valves.....	4-58
4-20	Expansion Valve	4-62
4-21	Liquid Sight Indicator (Sight Glass)	4-64
4-22	Compressor Repair	4-69
4-23	Compressor(BI)	4-71
4-24	Evaporator Coil	4-74
4-25	Condenser Coil	4-77
4-26	Service Box	4-80
4-27	Lifting Ring and Clips	4-82

LIST OF TABLES

Table No.	Title	Page
1-1	Equipment Data	1-8
2-1	Operator Preventative Maintenance Checks and Services (PMCS)	2-6
3-1	Power Voltages for 208 VAC, 3 Phase	3-16
3-2	Unit Preventive Maintenance Checks and Services (PMCS)	3-19
3-3	Unit Troubleshooting	3-30
3-4	Wire List	3-40
4-1	Direct Support Troubleshooting	4-2
4-2	Pressure-Temperature Relationship of Saturated Refrigerant 22.....	4-12

HOW TO USE THIS MANUAL

GENERAL. This technical manual provides you with the information needed to operate and to maintain the 36000 Btu/hr air conditioner. By properly using this manual, you will be able to identify any problem you may have in operating the air conditioner and then locate the proper procedure needed to correct any problem found.

MANUAL ORGANIZATION. This manual has been organized in a manner that groups together the information that an operator or a maintenance technician will need to perform their duties. The following list indicates how this information has been organized.

- Chapter 1** This chapter contains a complete description of the air conditioner and includes such information as general equipment data, location/descriptions of major air conditioner components, and general theory of operations for the air conditioner.
- Chapter 2** The information needed to set up and to operate the air conditioner are included in this chapter. It includes assembly information, operator PMCS, and special instructions for unusual or emergency conditions.
- Chapter 3** In the event that unit level maintenance is required for the air conditioner, the required maintenance instructions can be found in this chapter.
- Chapter 4** The required maintenance instructions authorized for direct support level maintenance can be found in this chapter.
- Chapter 5** This chapter contains the maintenance procedures for general support maintenance personnel.
- Appendix A** Some of the procedures in this manual have references to other military technical manuals and forms. A complete list of all of these Reference Documents is included in this appendix.
- Appendix B** This appendix contains the Maintenance Allocation Chart for the air conditioner. This chart defines which of the items on the air conditioner will likely require maintenance and what military maintenance level is authorized to perform these maintenance procedures.
- Appendix C** The Components of End Item List containing a complete listing of all of the items required for a complete air conditioner and the Basic Issue Items List showing the essential items needed to operate the air conditioner are contained in (his appendix.
- Appendix D** If any additional items are authorized for support of the air conditioner, they will be shown on the Additional, Authorization List contained in this appendix.

- Appendix E** As you operate and maintain the air conditioner you will be required to use some special expendable items. The Expendable/Durable Supplies and Materials List in this appendix is a complete list of these items which appear elsewhere in the operating and maintenance procedures in this manual.
- Appendix F** Some components of the air conditioner must be manufactured from bulk or stock material before they can be replaced on the unit. A complete set of instructions required to manufacture these items from bulk stock is included in this Illustrated List of Manufactured Parts.

AIDS TO FINDING INFORMATION. The following aids have been placed within this technical manual to help you quickly locate the information you may need.

- Front Cover Index** To provide you with a quick reference to the most used portions of this manual, an index has been placed on the cover of this manual.
- Bleeder Edges On Pages** On the right edge of the front cover index of this manual you will see a black box area that goes to the edge of the front cover page. If you hold this manual with your left hand and bend back the outer right edges of the pages with your right hand, you will find that there are pages inside the technical manual that also have black boxes on the right edges of the page and that these boxes line up with the boxes on the front cover index. By turning to the page in the technical manual that lines up with the box on the front cover, you will be able to quickly turn to the topic shown in the front cover index.
- Table Of Contents and Boxed Titles** In the event that the front cover has been removed from this manual, the items that appear in the front cover index have also been placed in a **box** where they appear in the Table of Contents of this manual.
- Index** To assist you in locating any other information not found in the front cover index or the Table of Contents, an alphabetical index has been placed in the back of this manual to help you find any information you may need.

GENERAL MAINTENANCE METHOD. Although your local standard operating and maintenance procedure may vary, a simple method of using this technical manual to operate and maintain the air conditioner is shown in the following steps.

WARNINGS And CAUTIONS
Always Read, Understand, and Perform ALL WARNINGS and CAUTIONS
Found In This Technical Manual BEFORE Performing
The Step Immediately Following The
WARNING or CAUTION.


Throughout this technical manual there are certain procedures and operations that are hazardous to you or to the air conditioner. If you see a **WARNING**, pay special attention to the information stated in it because **all WARNINGS provide you with data that will prevent serious injury to you or others around You.** When you see a **CAUTION** read it carefully because the information given in it will keep you from damaging the air conditioner and making the air conditioner unable to fulfill its mission.

Equipment Set Up And Operation. Unpack and set up the air conditioner in accordance with the procedures shown in Chapter 2.


Preventive Maintenance Checks And Services (PMCS). Perform the operator PMCS procedures shown in Chapter 2.

Troubleshooting Procedures. If the air conditioner should not operate properly, refer to either the unit troubleshooting procedures in Chapter 3 or the direct support troubleshooting procedures in Chapter 4. The most likely air conditioner malfunctions have been placed within these troubleshooting procedures and a test and/or repair procedure paragraph has been indicated to correct the malfunction found. If a repair is required, refer to the maintenance paragraph shown in the troubleshooting procedure.

Maintenance Procedures. The complete repair procedures needed to correct a problem with the air conditioner have been included in Chapters 3, 4, and 5.

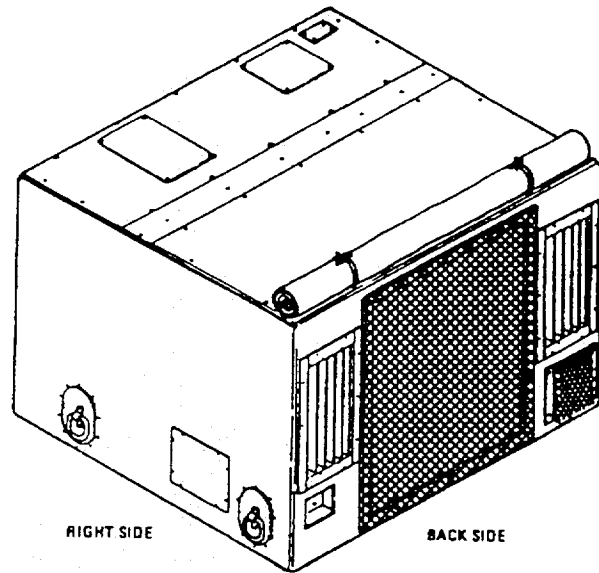

REAR THREE QUARTER VIEW
(With Fabric Cover Removed)

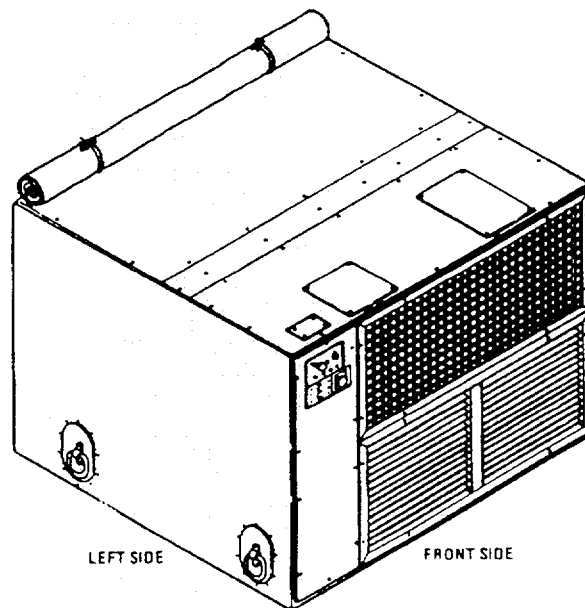

FRONT THREE QUARTER VIEW

Figure 1-1. Air Conditioner.

CHAPTER 1

INTRODUCTION

Section I. GENERAL INFORMATION

1-1. SCOPE.

a. Type of Manual, Operator's, Unit, Direct Support, and General Support Maintenance Manual.

b. Model Number and Equipment Name. AIRTACS Corporation Model MH-40-MP, Horizontal, Compact, Multiple Power Input (208 VAC, 3 Phase, 50/60/400 Hz), 36,000 Btu/hr Cooling, 31,200 Btu/hr Heating, Air Conditioner.

c. Purpose of Equipment, Cools, heats, and ventilates enclosed spaces. The unit covered by this manual is designed for cooling of equipment or personnel within the conditioned area.

1-2. MAINTENANCE FORMS AND PROCEDURES. Department of the Army forms and procedures used for equipment maintenance will be those prescribed by DA PAM 738-750 (The Army Maintenance Management System (TAMMS)) (Maintenance Management Update).

1-3. WARRANTY information. Refer to TB 9-4120-404-24.

1-4. REPORTING EQUIPMENT IMPROVEMENT RECOMMENDATIONS (EIR'S). If your Air Conditioner needs improvement, let us know. Send us an EIR. You, the user, are the only one who can tell us what you don't like about your equipment. Let us know why you don't like the design or performance. Put it on a SF 368 (Product Quality Deficiency Report). Mail it to us at; Commander, U.S. Army Aviation and Troop Support Command, Attention: AMSAT-I-MDO, 4300 Goodfellow Blvd., St. Louis, Missouri 63120-1798. We will send you a reply.

1-5. CORROSION PREVENTION AND CONTROL (CPC). Corrosion Prevention and Control of Army materiel is a continuing concern. It is important that any corrosion problems with this item be reported so that the problem can be corrected and improvements can be made to prevent the problem in future items.

While corrosion is typically associated with the rusting of metals, it can also include deterioration of other materials such as rubber and plastic. Unusual cracking, softening, swelling, or breaking of the materials may be a corrosion problem.

If a corrosion problem is identified, it can be reported using Standard Form 368, Product Quality Deficiency Report. Use of key words such as "rust", "deterioration", "corrosion", or "cracking" will insure that the information is identified as a CPC problem. The form should be submitted to the address specified in the DA PAM 738-750.

1-6. NOMENCLATURE CROSS-REFERENCE LIST. To simplify the use of certain terms used in this technical manual, some common names have been used to replace longer or more complex terms. The following list shows the common name used in this technical manual and the official nomenclature of the terms these common names replace.

<u>Common Name</u>	<u>Official Nomenclature</u>
Air Conditioner	Air Conditioner, Horizontal, Compact, 36,000 Btu/hr, Multi-Power Input, Model MH-40-MP

1-7. DESTRUCTION OF ARMY MATERIEL TO PREVENT ENEMY USE. Refer to TM 750-244-3, Procedures for Destruction of Equipment to Prevent Enemy Use.

1-8. PREPARATION FOR STORAGE OR SHIPMENT. Contact unit maintenance for air conditioning unit preparation for storage or shipment. Refer to Section VII, Chapter 3.

Section II. EQUIPMENT DESCRIPTION AND DATA

1-9. EQUIPMENT CHARACTERISTICS, CAPABILITIES, AND FEATURES.

a. Equipment Characteristics. This air conditioner is designed to ventilate, cool or heat, and to filter air in rooms or enclosures.

b. Capabilities and features.

(1) Provides a maximum of 36,000 Btu/hr of cooling or 31,200 Btu/hr of heating.

(2) This air conditioner unit is capable of accepting an external power source of 208 volts AC, 3 phase in frequencies of 50/60/400 Hz.

(3) Other external requirements are a suitable ground and an entry to a suitable condensation drain.

(4) Equipped with an electronic logic box assembly which accepts signals from the air conditioner control module, sends signals to the motor controller, and identifies electrical faults by means of integral fault lights.

(5) Equipped with a motor controller which provides "soft starts" to the air conditioner motors and automatic shutdown in the event of over/under input power voltage, output overcurrent, and over temperature of the motor controller.

(6) Provides source of filtered outside (fresh) ventilation air.

(7) Is self contained in a single cabinet that is ideally suited for van, shelter, or room installations.