

TECHNICAL MANUAL

**UNIT, DIRECT SUPPORT AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS
AND SPECIAL TOOLS LIST**

FOR

**AIR CONDITIONER,
VERTICAL, COMPACT, 36,000 BTU/HR,
208 VOLT, THREE PHASE,
50/60 OR 400 HERTZ
NSN 4120-01-359-0083**

MODEL F36T-MPI

This copy is a reprint which includes current
pages from Change 1.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

HEADQUARTERS, DEPARTMENT OF THE ARMY

30 JUNE 1995

TECHNICAL MANUAL

No. 9-4120-407-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON D.C., 30 JUNE 1995

TECHNICAL MANUAL

**Unit, Direct Support, and
General Support Maintenance
Repair Parts and Special Tools List
for
AIR CONDITIONER, VERTICAL, COMPACT, 36,000 BTU/HR
208 VOLT,
THREE PHASE,
50/60 OR 400 HERTZ,
NSN 4120-01-359-0083
MODEL F36T-MPI
Current as of 20 May 1996**

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes, or if you know of a way to improve these procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MP. 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. You may also submit your recommended changes by E-mail directly to <mpmt%avma28@st-louis-emh7.army.mil>. A reply will be furnished directly to you. Instructions for sending an electronic 2028 may be found at the back of this manual immediately preceding the hard copy 2028.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

		Illus/ Page Figure
Section I. INTRODUCTION		1
Section II. REPAIR PARTS LIST		1-1
Group 01 Covers, Panels, Grilles, Screens, and information Plates		
Right Side and Rear Outside Panels	1-1	1
Top, Front and Left Side Outside Panels	2-1	2
Condenser Discharge Air Deflector Door	3-1	3
Group 02 Filters, Mist Eliminator, and Damper		
Filters, Mist Eliminator, and Condensate Trap	4-1	4
Fresh Air Damper	5-1	5
Group 03 Electrical		
Control Panel Assembly	6-1	6
Electrical Leads	7-1	7
Wiring Harnesses J8 to P11A and P6A to J13	8-1	8
Upper Harnesses	9-1	9

TABLE OF CONTENTS - continued

	Page	Illus/ Figure
Lower- Harnesses.....	10-1	10
Logic Box and Motor Controller.....	11-1	11
EMI Filter (FL1).....	12-1	12
EMI Filter (FL2).....	13-1	13
Coil Frost Switch.....	14-1	14
Electrical Components Panel.....	15-1	15
Group 04 Evaporator Fans, Motors, and Heaters		
Right Evaporator Fan and Motor.....	16-1	16
Left Evaporator Fan and Motor.....	17-1	17
Motor Assembly, Evaporator Fan.....	18-1	18
Heaters and Related Parts.....	19-1	19
Group 05 Condenser Fans and Motor		
Condenser Fans and Motor.....	20-1	20
Motor Assembly, Condenser Fan.....	21-1	21
Group 06 Refrigeration System		
Actuating Cylinder.....	22-1	22
Safety Control Box Assembly.....	23-1	23
Condenser Coil and Piping.....	24-1	
Evaporator Coil.....	25-1	25
Compressor.....	26-1	26
Group 07 Casing and Bottom Panel		
Insulation.....	27-1	27
Casing and Bottom Panel.....	28-1	28
Group 08 Bulk Material		
Bulk.....	BULK-1	
Section III. SPECIAL TOOLS LIST		
Group 09 Special Tools List (Not Applicable)		
Section IV. CROSS REFERENCE INDEXES		
National Stock Number Index.....		
Part Number Index.....	I-1	
Figure and Item Number Index.....	I-26	

**UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST**

Section I INTRODUCTION

1. SCOPE. This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit, direct support, and general support maintenance of the Air Conditioner. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance, and recoverability (SMR) codes.

2. GENERAL. In addition to Section I, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown on the associated illustration(s)/ figure(s).


b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. Cross Reference Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National Stock Number (NSN) items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGEC, and part numbers.

3. EXPLANATION OF COLUMNS (Sections II and III).

a. Item No., Column (1). Indicates the number used to identify items called out in the illustration.

b. SMR Code, Column (2). The Source, Maintenance, and Recoverability (SMR) code is a five position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout.

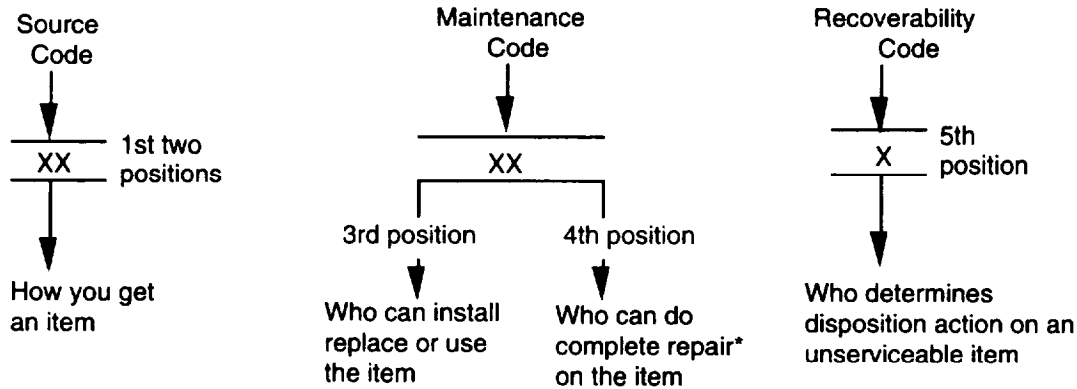

*Complete Repair: Maintenance capacity, capability, and authority to perform all the corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) **Source Code.** The source code tells you how you get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follow.

Code	Explanation
PA PB PC** PD	Stocked items; use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3rd position of the SMR code. **NOTE : Items coded PC are subject to deterioration.
PE PG	
KD KF KB	Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3rd position of the SMR code. The complete kit must be requisitioned and applied.

TM 9-4120-407-24P

Code	Explanation
MO - (Made at Unit AVUM level) MF - (Made at DS/AVUM level) MH - (Made at GS level) ML - (Made at Specialized Repair Activity (SRA)) MD - (Made at Depot)	} Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION and USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in the RPSTL. If the item is authorized to you by the 3rd position code of the SMR code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.
A0 - (Assembled by Unit AVUM Level) AF - (Assembled by DS/AVUM Level) AH - (Assembled by GS Category) AL - (Assembled by SRA) AD - (Assembled by Depot)	

Code Explanation

- XA -- Do not requisition an "XA"-coded item. Order its next higher assembly. (Also, refer to the NOTE below.)
- XB -- If an "XB" item is not available from salvage, order it using the CAGE Code and part number given.
- XC -- Installation drawing, diagram, instruction sheet, field service drawing, that is identified by manufacturer's part number.
- XD -- Item is not stocked. Order an "XD"-coded item through normal supply channels using the CAGE Code and part number given, if no NSN is available,

NOTE

Cannibalization or controlled exchange, when authorized, may be used as a source of supply for items with the above source codes, except for those source coded "XA" or those aircraft support items restricted by requirements of AR 750-1.