

**TECHNICAL MANUAL**

**UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT  
MAINTENANCE REPAIR PARTS AND  
SPECIAL TOOLS LISTS**

**TRUCK, LIFT, FORK: GED, PNEUMATIC TIRED  
WHEELS, 6000 LB CAPACITY, 168 IN. LIFT  
ALLIS-CHALMERS MODEL FP60-24PS  
ARMY MODEL MHE 213  
(NSN 3930-00-935-7979)**

**This manual supersedes TM 10-3930-618-20P, dated 9 November 1982, and  
TM 10-3930-618-34P, dated 10 November 1982, and all changes.**

**Approved for public release; distribution is unlimited.**

**UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT  
MAINTENANCE REPAIR PARTS AND  
SPECIAL TOOLS LISTS**

**TRUCK, LIFT, FORK: GED, PNEUMATIC TIRED  
WHEELS, 6000 LB CAPACITY, 168 IN. LIFT  
ALLIS-CHALMERS MODEL FP60-24PS  
ARMY MODEL MHE 213  
(NSN 3930-00-935-7979)**

Current as of 31 July 1991

**REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS**

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (*Recommended Changes to Publications and Blank Forms*), or DA Form 2028-2, located in the back of this manual, direct to: Commander, U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

	Page	Illus Fig
SECTION I. INTRODUCTION .....	1	
SECTION II. REPAIR PARTS LIST .....	1-1	
GROUP 01 ENGINE		
0100 - ENGINE ASSEMBLY .....	1-1	
ENGINE AND MOUNTS .....	1-1	1
0101 - CRANKCASE, BLOCK, CYLINDER HEAD .....	2-1	
CYLINDER BLOCK .....	2-1	2
CYLINDER HEAD .....	3-1	3
0102 - CRANKSHAFT .....	4-1	
CRANKSHAFT .....	4-1	4
0103 - FLYWHEEL ASSEMBLY .....	5-1	
FLYWHEEL AND HOUSING .....	5-1	5
0104 - PISTONS AND CONNECTING RODS .....	6-1	
PISTON AND CONNECTING ROD .....	6-1	6

\* This manual supersedes TM 10-3930-618-20P, 9 November 1982, and TM 10-3930-618-34P, 10 November 1982, and all changes

## TABLE OF CONTENTS (Con't)

	Page	Illus Fig
0105 - VALVES, CAMSHAFTS, AND TIMING SYSTEM.....	7-1	
ROCKER ARM COVER .....	7-1	7
ROCKER ARMS.....	8-1	8
VALVES AND RELATED PARTS .....	9-1	9
TIMING GEAR COVER.....	10-1	10
CAMSHAFT AND GEAR.....	11-1	11
0106 - ENGINE LUBRICATING SYSTEM .....	12-1	
OIL LEVEL GAGE AND FILLER CAP.....	12-1	12
OIL PAN .....	13-1	13
OIL PUMP .....	14-1	14
OIL PRESSURE RELIEF VALVE.....	15-1	15
OIL FILTER .....	16-1	16
0108 - MANIFOLDS.....	17-1	
INTAKE AND EXHAUST MANIFOLD .....	17-1	17
CRANKCASE VENTILATION .....	18-1	18
GROUP 03		
FUEL SYSTEM		
0301 - CARBURETOR, FUEL INJECTOR .....	19-1	
CARBURETOR .....	19-1	19
0302 - FUEL PUMPS .....	20-1	
FUEL PUMP.....	20-1	20
0304 - AIR CLEANER.....	21-1	
AIR CLEANER .....	21-1	21
0306 - TANKS, LINES, FITTINGS, HEADERS.....	22-1	
FUEL TANK.....	22-1	22
0308 - ENGINE SPEED GOVERNOR AND CONTROLS .....	23-1	
GOVERNOR ASSEMBLY .....	23-1	23
0309 - FUEL FILTERS.....	24-1	
FUEL FILTER.....	24-1	24
0312 - ACCELERATOR, THROTTLE, OR CHOKE CONTROLS .....	25-1	
ACCELERATOR .....	25-1	25
CHOKE CONTROL.....	26-1	26
GROUP 04		
EXHAUST SYSTEM		
0401 - MUFFLER AND PIPES.....	27-1	
MUFFLER AND EXHAUST.....	27-1	27
GROUP 05		
COOLING SYSTEM		
0501 - RADIATOR, EVAPORATIVE COOLER, OR HEAT EXCHANGER .....	28-1	
RADIATOR.....	28-1	28
GRILLE.....	29-1	29
0503 - WATER MANIFOLD, HEADERS, THERMOSTATS, AND HOUSING GASKET ....	30-1	
RADIATOR HOSES .....	30-1	30
THERMOSTAT AND HOUSING .....	31-1	31
0504 - WATER PUMP .....	32-1	
WATER PUMP .....	32-1	32
0505 - FAN ASSEMBLY .....	33-1	
FAN ASSEMBLY.....	33-1	33
GROUP 06		
ELECTRICAL SYSTEM		
0601 - GENERATOR, ALTERNATOR.....	34-1	
ALTERNATOR AND PULLEY.....	34-1	34
ALTERNATOR .....	35-1	35

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
0602 - GENERATOR REGULATOR .....	36-1	
REGULATOR AND CAPACITOR .....	36-1	36
0603 - STARTING MOTOR .....	37-1	
ELECTRICAL LEAD AND RELAY .....	37-1	37
STARTER.....	38-1	38
0605 - IGNITION COMPONENTS .....	39-1	
DISTRIBUTOR WIRING .....	39-1	39
DISTRIBUTOR, EXPLODED VIEW .....	40-1	40
0607 - INSTRUMENT OR ENGINE CONTROL PANEL .....	41-1	
INSTRUMENT PANEL.....	41-1	41
0608 - MISCELLANEOUS ITEMS .....	42-1	
BRAKE PRESSURE SWITCH .....	42-1	42
0609 - LIGHTS .....	43-1	
LIGHTS .....	43-1	43
0610 - SENDING UNITS AND WARNING SWITCHES .....	44-1	
FUEL TRANSMITTER .....	44-1	44
OIL PRESSURE TRANSMITTER .....	45-1	45
0611 - HORN, SIREN .....	46-1	
HORN BUTTON ASSEMBLY.....	46-1	46
HORN.....	47-1	47
0612 - BATTERIES, STORAGE .....	48-1	
BATTERY.....	48-1	48
GROUP 07		
TRANSMISSION		
0705 - TRANSMISSION SHIFTING COMPONENTS.....	49-1	
SHIFTING CONTROLS .....	49-1	49
0708 - TORQUE CONVERTER OR FLUID COUPLING .....	50-1	50
TORQUE CONVERTER .....	50-1	51
TORQUE CONVERTER HOUSING AND PUMP ASSEMBLY .....	51-1	
0710 - TRANSMISSION ASSEMBLY AND ASSOCIATED PARTS .....	52-1	
TRANSMISSION SHAFTS AND GEARS .....	52-1	52
0713 - INTERMEDIATE CLUTCH .....	53-1	
FORWARD AND REVERSE DISC ASSEMBLY .....	53-1	53
0714 - SERVO UNIT .....	54-1	
VALVE ASSEMBLY.....	54-1	54
0721 - COOLERS, PUMPS, MOTORS.....	55-1	
TRANSMISSION OIL FILTER AND RELATED PARTS .....	55-1	55
GROUP 09		
PROPELLER, PROPELLER SHAFTS, UNIVERSAL JOINTS, COUPLER, AND CLAMP ASSEMBLY		
0900 - PROPELLER SHAFTS .....	56-1	
PROPELLER SHAFT .....	56-1	56
GROUP 10		
FRONT AXLE		
1000 - FRONT AXLE ASSEMBLY .....	57-1	
STEERING AXLE.....	57-1	57
GROUP 11		
REAR AXLE		
1100 - REAR AXLE ASSEMBLY .....	58-1	
DRIVE AXLE HOUSING .....	58-1	58

## TABLE OF CONTENTS (Con't)

	Page	Illus Fig
1102 - DIFFERENTIAL .....	59-1	
DIFFERENTIAL.....	59-1	59
1103 - PLANETARY OR FINAL DRIVE .....	60-1	
DRIVE AXLE AND RELATED PARTS.....	60-1	60
GROUP 12		
BRAKES		
1201 - HANDBRAKES .....	61-1	
PARKING BRAKE LEVER AND CABLE .....	61-1	61
PARKING BRAKE .....	62-1	62
1202 - SERVICE BRAKES.....	63-1	
BRAKESHOES AND RELATED PARTS .....	63-1	63
1204 - HYDRAULIC BRAKE SYSTEM .....	64-1	
MASTER CYLINDER LINES, LEFT SIDE.....	64-1	64
MASTER CYLINDER LINE, RIGHT SIDE.....	65-1	65
MASTER CYLINDER.....	66-1	66
WHEEL CYLINDER .....	67-1	67
1206 - MECHANICAL BRAKE SYSTEM.....	68-1	
BRAKE CONTROLS .....	68-1	68
INCHING CONTROLS .....	69-1	69
GROUP 13		
WHEELS AND TRACKS		
1311 - WHEEL ASSEMBLY .....	70-1	
FRONT WHEELS .....	70-1	70
REAR WHEEL .....	71-1	71
HUB AND DRUM .....	72-1	72
1313 - TIRES, TUBES, TIRE CHAINS .....	73-1	
FRONT AND REAR WHEELS .....	73-1	73
GROUP 14		
STEERING		
1401 - MECHANICAL STEERING GEAR ASSEMBLY .....	74-1	
STEERING WHEEL AND SHAFT. ....	74-1	74
STEERING COLUMN MOUNTING PARTS .....	75-1	75
STEERING MECHANISMS .....	76-1	76
1405 - STEERING YOKES.....	77-1	
STEERING SPINDLE AND RELATED PARTS .....	77-1	77
1407 - POWER STEERING GEAR ASSEMBLY .....	78-1	
STEERING GEAR UNIT .....	78-1	78
1410 - HYDRAULIC PUMP OR FLUID MOTOR ASSEMBLY .....	79-1	
HYDRAULIC OIL FILTER .....	79-1	79
1412 - HYDRAULIC OR AIR CYLINDERS.....	80-1	
STEERING CYLINDER.....	80-1	80
1413 - TANKS, RESERVOIRS .....	81-1	
HYDRAULIC RESERVOIR .....	81-1	81
GROUP 15		
FRAME, TOWING ATTACHMENTS. DRAWBARS, AND ARTICULATION SYSTEMS		
1502 - COUNTERWEIGHTS .....	82-1	
COUNTERWEIGHT AND RELATED PARTS .....	82-1	82

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
	1503 - PINTLES AND TOWING ATTACHMENTS .....	83-1
GROUP 18	TOWING PIN .....	83-1 83
	BODY, CAB, HOOD, AND HULL	
	1801 - BODY, CAB, HOOD, AND HULL ASSEMBLIES .....	84-1
	OVERHEAD GUARD AND SIDE PANEL LATCH .....	84-1 84
	SEAT HOOD AND SIDE PANELS .....	85-1 85
	1802 - FENDERS, RUNNING BOARDS WITH MOUNTING AND ATTACHING PARTS, OUTRIGGERS, WINDSHIELD, GLASS, ETC .....	86-1
	FENDERS .....	86-1 86
	1805 - FLOORS, SUBFLOORS, AND RELATED COMPONENTS .....	87-1
	FLOORPLATES AND RELATED PARTS .....	87-1 87
	1806 - UPHOLSTERY, SEATS, AND CARPETS .....	88-1
GROUP 24	SEAT .....	88-1 88
	HYDRAULIC AND FLUID SYSTEMS	
	2401 - PUMP AND MOTOR .....	89-1
	HYDRAULIC PUMP AND COUPLING .....	89-1 89
	HYDRAULIC PUMP .....	90-1 90
	2402 - MANIFOLD AND/OR CONTROL VALVES .....	91-1
	HYDRAULIC CONTROL VALVE AND MOUNTING PARTS .....	91-1 91
	HYDRAULIC CONTROL VALVE .....	92-1 92
	2403 - HYDRAULIC CONTROLS AND/OR MANUAL CONTROLS .....	93-1
	CONTROL VALVE MOUNTING BRACKET AND RELATED PARTS .....	93-1 93
	2404 - TILT CYLINDERS AND TILT CRANK .....	94-1
	TILT CYLINDER .....	94-1 94
	2405 - MAST COLUMN .....	95-1
	CARRIAGE.....	95-1 95
	FORKS .....	96-1 96
	MAST AND RELATED PARTS .....	97-1 97
	LIFT CYLINDER .....	98-1 98
	2406 - STRAINERS, FILTERS, LINES, AND FITTINGS, ETC.....	99-1
	HYDRAULIC LINES AND FITTINGS .....	99-1 99
	TILT CYLINDER, LINES, AND FITTINGS .....	100-1 100
GROUP 94	REPAIR KITS	
	9401 - REPAIR KITS .....	KITS-1
	KITS .....	KITS-1 KITS
GROUP 95	GENERAL USE STANDARDIZED PARTS	
	9501 - BULK MATERIEL .....	BULK-1
	BULK MATERIEL .....	BULK-1 BULK
SECTION III.	SPECIAL TOOLS (NOT APPLICABLE)	
SECTION IV.	CROSS REFERENCE INDEXES	
	NATIONAL STOCK NUMBER .....	I-1
	PART NUMBER INDEX .....	I-12
	FIGURE AND ITEM NUMBER INDEX.....	I-45

**UNIT, DIRECT SUPPORT, AND  
GENERAL SUPPORT MAINTENANCE  
REPAIR PARTS AND SPECIAL TOOLS LISTS**

**SECTION I. INTRODUCTION**

**1. Scope.**

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (MDE); and other special support equipment required for performance of Unit, Direct Support, and General Support Maintenance of the Fork, Lift Truck. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

**2. General.**

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for reparable special tools are also listed in the section. Items listed are shown on the associated illustration(s)/figure(s).

b. *Section III. Special Tools List.* A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.


c. *Section IV. Cross-reference Indexes.* A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration/figure and item number appearance.

The figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE, and part numbers.

**3. Explanation of Columns (Sections II and III).**

a. *ITEM NO. (Column (1)).* Indicates the number used to identify items called out in the illustration.

b. *SMR CODE (Column (2)).* The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

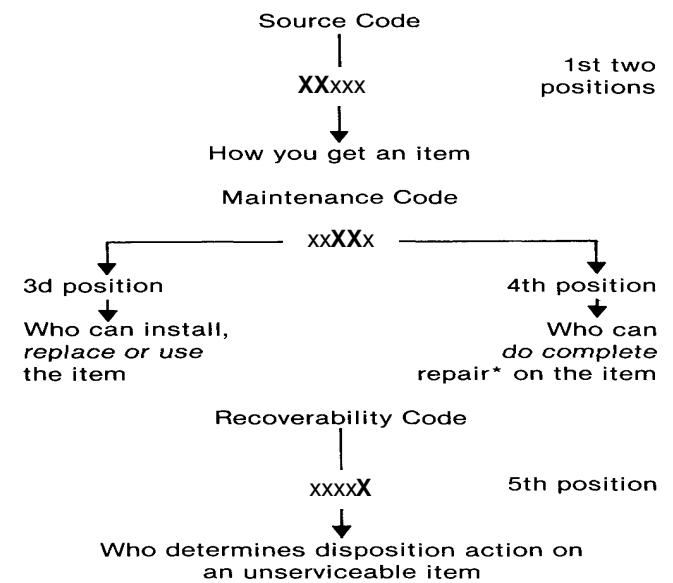

\**Complete Repair.* Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) *Source Code.* The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows: