

TECHNICAL MANUAL

DIRECT SUPPORT AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS LISTS

TRUCK, FORKLIFT, DIESEL ENGINE DRIVEN,
PNEUMATIC TIRED WHEELS, ROUGH TERRAIN,
6,000 LB CAPACITY, 24" LOAD CENTER
ANTHONY MODEL MLT 6-2
ARMY MODEL MHE 230
NSN 3930-00-327-1575

Technical Manual }
No. 10-3930-634-34P }

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, DC, 26 November 1982

DIRECT SUPPORT AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS LISTS

FOR

TRUCK, FORKLIFT, DIESEL ENGINE DRIVEN
PNEUMATIC TIRED WHEELS, ROUGH TERRAIN,
6,000 LB CAPACITY, 24" LOAD CENTER
ANTHONY MODEL MLT 6-2
ARMY MODEL MHE 230
NSN 3930-00-327-1575

Current as of 30 April 1982

REPORTING OF ERRORS

you can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail you letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to: US Army Tank-Automotive Command, ATTN: DRSTA-MB, Warren, MI 48090. A reply will be furnished to you.

Page

SECTION I. Introduction	1-1
II. Repair Parts List	2-1

		<u>Page</u>	<u>Illus Figure</u>
Group 0100	Roll Overprotective Structure	2-1	1
0200	Tool Box	2-3	2
0300	Seat Assembly	2-5	3
0400	Exhaust System	2-7	4
0500	Air Intake Assembly	2-9	5
0600	Floodlight Assembly	2-13	6
	Headlight Assembly	2-15	7
	Clearance Marker Light	2-17	8
	Blackout Headlight	2-19	9
	Stoplight	2-21	10
	Stoplight-Tailight, Blackout	2-23	11
	Horn and Buzzer	2-25	12
	Battery, Retainer and Cables	2-27	13
	Wiring Harness	2-29	14
	Instrument Panel	2-33	15
0700	Engine Hood and Panels	2-35	16
	Fenders and Side Panels	2-37	17
0800	Engine Control Group	2-41	18
0900	Console Covers and Controls	2-45	19
1000	Cockpit Covers and Floor Plate	2-49	20
1100	Manifold Plumbing	2-51	21
	Brake Valve Plumbing	2-55	22
	Brake Plumbing	2-57	23
	Brake Adjuster	2-59	24
	Brake Valve	2-61	25
	Steering and Selector Valve Plumbing	2-65	26
1200	Steering Plumbing	2-67	27
	Steering Cylinder	2-71	28
1300	Oscillating Cylinder, Plumbing	2-73	29
	Oscillating Cylinder	2-77	30
1400	Suction Line Plumbing	2-79	31
1500	Spool Valve Controls	2-81	32
1600	Hydraulic Return Manifold	2-83	33
1700	Side Shift Cylinder Plumbing	2-85	34
1800	Spool Control Valve	2-87	35
1900	Extension Cylinder Plumbing	2-91	36
	Extension Cylinder Assembly	2-93	37
2000	Slave Cylinder Plumbing	2-95	38
	Slave Cylinder Assembly	2-97	39
2100	Tilt Cylinder Plumbing	2-99	40
	Tilt Cylinder Assembly	2-101	41
2200	Lift Cylinder Plumbing	2-103	42
	Lift Cylinder Assembly	2-107	43
2300	Spool Control Valve	2-109	44
2400	Carriage Assembly	2-113	45
	Side Shift Cylinder Assembly	2-117	46
	Boom Assembly	2-119	47
2500	Engine and Transmission Plumbing	2-121	48
	Transmission Oil Filter	2-125	49
2600	Differential Lock Plumbing	2-127	50
	Differential Lock Pedal	2-129	51
	Differential Lock Cylinder Assembly	2-131	52

Group 2700	Hydraulic Brake Accumulator Assembly	2-133	53
2800	Hydraulic System Oil Tank	2-135	54
	Vacuum Pressure Relief Valve	2-137	55
2900	Fuel Tank Group	2-139	56
3000	Parking Brake	2-143	57
3100	Brake Pedal Linkage	2-147	58
3200	Axle Disconnect	2-149	59
3300	Throttle Linkage	2-151	60
	Throttle Pedal and Mounting Plate	2-153	61
3400	Transmission and Inching Controls	2-155	62
3500	Selector Controls	2-157	63
	Selector Valve	2-159	64
3600	Steering Gear	2-161	65
3700	Three Position Cylinder	2-165	66
3800	Steering Linkage and Valve	2-167	67
	Power Steering Valve	2-169	68
3900	Rear Drag Link	2-171	69
	Front Drag Link	2-173	70
	Steering Linkage	2-175	71
4000	Battery Hood and Support	2-177	72
4100	Cockpit	2-179	73
4200	Engine Hydraulic Pump	2-181	74
	Single Hydraulic Pump	2-183	75
	Double Hydraulic Pump	2-187	76
4300	Torque Converter to Transmission		
	Propeller Shaft	2-191	77
	Transmission to Rear Axle		
	Propeller Shaft	2-193	78
	Transmission to Front Axle		
	Propeller Shaft	2-195	79
4400	Transmission Assembly	2-197	80
	Inching Valve	2-201	81
	Transmission Brake	2-203	82
	Transmission Internal Parts	2-205	83
	Forward and 2nd Clutch	2-209	84
	4th Clutch	2-211	85
	Reverse and 3rd Clutch	2-213	86
	Low Clutch	2-215	87
	Disconnect Assembly	2-217	88
4500	Torque Converter	2-219	89
	Converter Charging Pump	2-223	90
4600	Radiator	2-225	91
4700	Rocker Arm Cover Vent	2-229	92
	Engine Supports and Lifting Bracket	2-231	93
4800	Fuel Filter and Lines (Secondary)	2-233	94
	Fuel Strainer (Primary)	2-235	95
4900	Voltage Regulator	2-237	96
5000	Generator	2-239	97
5100	Starter	2-241	98
5200	Oil Filter	2-245	99
5300	Belt Tightener	2-247	100
	Fan and Pulley	2-249	101

Group 5400	Thermostat and Water Connections	2-251	102
	Water Pump	2-253	103
5500	Rocker Arm Cover	2-255	104
5600	Manifold	2-257	105
5700	Oil Pan and Suction Tube	2-259	106
	Filler Pipe and Dipstick	2-261	107
5800	Governor and Fuel Pump	2-263	108
	Governor	2-265	109
	Governor Cover	2-267	110
	Limiting Speed Housing	2-269	111
5900	Blower Air Inlet Housing	2-271	112
	Blower	2-273	113
6000	Oil Cooler	2-277	114
6100	Injector Levers and Tubes	2-279	115
	Fuel Injectors	2-281	116
6200	Rocker Arms	2-283	117
6300	Cylinder Head	2-285	118
6400	Piston and Connecting Rod	2-287	119
6500	Oil Pump and Front Cover	2-289	120
6600	Front Cover and Balance Shaft Pulley	2-291	121
6700	Flywheel and Housing	2-293	122
6800	Idler Gear	2-295	123
6900	Crankshaft	2-297	124
7000	Camshaft and Balance Shaft	2-299	125
7100	Cylinder Block	2-301	126
7200	Tire and Wheel	2-303	127
7300	Axle Trunnions	2-305	128
7400	Tie Rod	2-307	129
	Planetary Drive, Hub and Gear	2-309	130
7400	Service Brake	2-313	131
	Steering Support and Axle	2-315	132
	Shift Control	2-317	133
	Differential Pinion Bearings	2-319	134
	Differential Carrier	2-321	135
7500	Main Frame and Related Parts	2-323	136
9501	Bulk Materiel	2-324	
SECTION III.	Special Tools List.	3-1	
IV.	National Stock Number and Parts Number Index.	4-1	

**DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST**

SECTION I. INTRODUCTION

1. Scope.

This manual lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of direct support, and general support maintenance of the rough terrain forklift truck. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the Source, Maintenance and Recoverability (SMR) codes.

2. General.

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in NSN sequence.

b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns.

a. Illustration (Column (1)). This column is divided as follows:

(1) ((a) FIG NO.) Figure Number. Indicates the figure number illustrating an exploded view of a functional group.

(2) ((b) ITEM NO.). Indicates the number used to identify items called out in the illustration.