


TECHNICAL MANUAL  
UNIT, DIRECT AND GENERAL SUPPORT  
PARTS MANUAL  
FOR  
GRADER, HEAVY, ROAD, MOTORIZED,  
DIESEL ENGINE DRIVEN

TYPE I (NONSECTIONALIZED)  
TYPE II (SECTIONALIZED)

NSN 3805-01-252-0128  
NSN 3805-01-251-8252

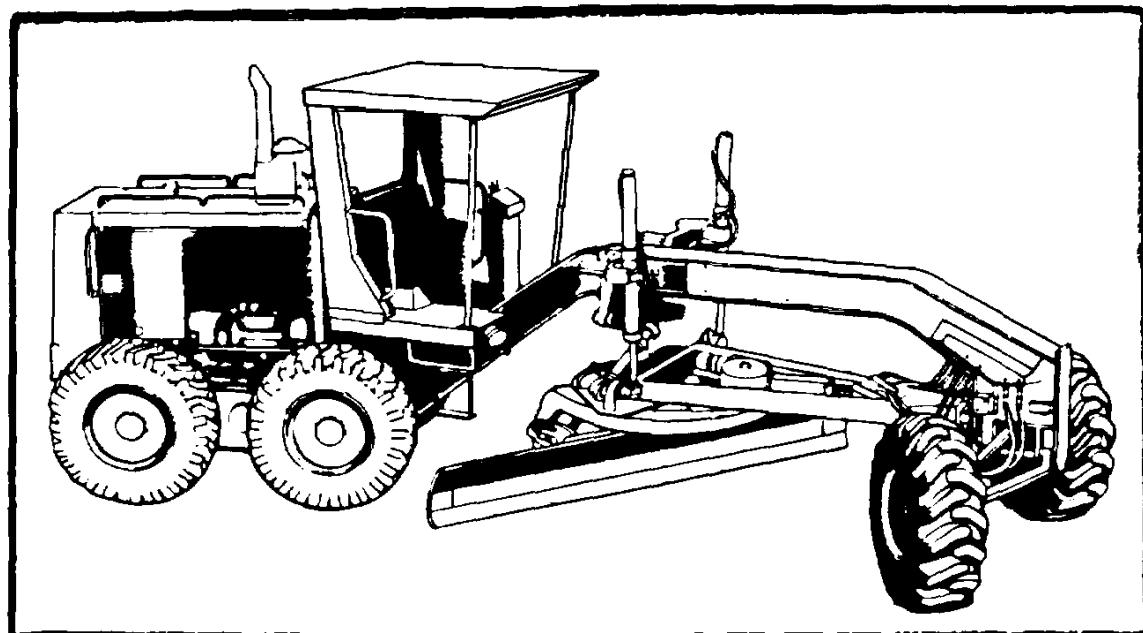

Approved for public release: distribution is unlimited.

---

HEADQUARTERS, DEPARTMENT OF THE ARMY  
APRIL 1989

**UNIT, DIRECT AND GENERAL SUPPORT  
PARTS- MANUAL  
FOR  
GRADER, HEAVY, ROAD, MOTORIZED,  
TYPE I NONSECTIONALIZED  
NSN 3805-01-252-0128  
TYPE II SECTIONALIZED  
NSN 3805-01-251-8252**

**REPORTING OF ERRORS**

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms) or DA Form 2028-2 located in the back of this manual direct to: Commander, US Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished direct to you.

**TABLE OF CONTENTS**  
General Description and Specifications

	PAGE
Replacement Items and Schematic .....	3
Basic Engine.....	7
Lubrication System.....	29
Cooling System .....	37
Intake and Exhaust System.....	47
Fuel System and Governor.....	59
Starting and Electrical System.....	81
Power Train - Power Transmission Unit.....	129
Brakes .....	157
Chassis.....	167
Blade Controls, Hyd. and Steering System .....	181
Implements .....	257
Cab, Gauges and Accessories.....	261
Specifications .....	312

This technical manual is an authentication of the manufacturers commercial literature and does not conform with the format and content specified in AR 310-3, Military Publications. This technical manual does, however, contain available information that is essential to the operation and maintenance of the equipment.

TABLE OF CONTENTS		
-------------------	--	--

ENGINE ARRANGEMENTS ARE LISTED STARTING ON PAGE 4

Name	Page	Name	Page		
<b>A</b>					
Actuator-Parking Brake .....	158	Blade Side Shift Cylinder and Mounting.....	248		
Adapter-Engine To Transmission .....	148	Blade Tip Lines .....	226		
Air Cleaner.....	46	Blade Tip Mounting and Cylinder.....	248		
Air Compressor .....	52	Blade Tip Cylinder.....	249		
Air Compressor Lines.....	54	Blower Fan .....	42		
Air Lines-Engine .....	47	Breather-Engine .....	36		
Air Reservoir Tank.....	165	<b>C</b>			
Alarm .....	100	Cab Wiring .....	113		
Alternator .....	88	Camshaft.....	12		
Alternator Assembly .....	88	Camshaft Assembly .....	62		
Alternator and Fan Support .....	167	Centershift Cylinder.....	202		
Articulation and Cylinder Mounting.....	251	Centershift Cylinder and Mounting .....	201		
Articulation Cylinder.....	252	Centershift Lock .....	197		
Articulated Hitch .....	73	Chain-Tandem Drive .....	156		
Articulation Indicator.....	286	Circle .....	181		
<b>B</b>					
Back-Up Warning .....	107	Circle Drive.....	183		
Balancer .....	12	Circle Motor Lines .....	186		
Battery .....	105	Clutch Control .....	149		
Battery Box .....	106	Connecting Rod and Piston .....	9		
Battery and Wiring.....	93	Coolant Outlet Plug .....	15		
Blackout Lighting .....	126	Covers and Tandem .....	155		
Blade .....	257	Crankshaft.....	10		
Blade Arrangement .....	256	Crankshaft Bearing Replacements.....	11		
Blade Float Control Wiring .....	119	Crankshaft Hub .....	22		
Blade Lift.....	244	Crankshaft Seal .....	11		
Blade Lift Cylinder .....	247	Cylinder and Mounting- Scarifier .....	255		
Blade Lift Mounting and Cylinder.....	246				
Blade Shift Lines.....	227				
Blade Side Shift Cylinder.....	250				

## TABLE OF CONTENTS - CONTINUED

Name	Page	Name	Page
Cylinder Block.....	7	Engine Trunnion.....	25
Cylinder Block Cover.....	9	Ether Starting Aid.....	92
Cylinder Head.....	13	Exhaust Extension .....	57
Cylinder Head Cover .....	14	Exhaust Manifold.....	56
Coolant Outlet Plug .....	15	Exhaust Manifold Fastener .....	55
Cylinder Head Fastener.....	16	Eyebolt ROPS Removal.....	263
Cylinder-Wheel Lean.....	253		
Cylinder-Scarifier .....	254		
<b>F</b>			
<b>D</b>			
Differential .....	153	Fan-Blower.....	42
Differential and Bevel Gear .....	151	Fan Drive.....	24
Differential Lock Control .....	150	Filter-Air Cleaner .....	46
Disconnect Switch Assembly.....	100	Filter-Fuel .....	73
Drain Extension-Radiator .....	38	Filter-Hydraulic Tank.....	203
Drawbar .....	182	Filter-Transmission .....	148
Drive Shaft Shield.....	168	Final Drive .....	154
Dust Ejector.....	58	Flood Lamp .....	112
<b>E</b>			
Electric Horn .....	290	Flood Lamp Lighting.....	109
Electric Starting Motor .....	80	Flywheel .....	26
Electronic Control .....	123	Flywheel Housing .....	25
End Bit and Cutting Edge .....	295	Frame and Case .....	175
End Bit Overlay.....	296	Front Axle.....	177
Engine Arrangements.....	4	Front Frame .....	176
Engine Lifting.....	18	Front Housing .....	19
Engine Mounting Hardware .....	22	Front Housing Cover .....	20
Engine Oil Cooler .....	44	Front Housing Fastener .....	20
Engine Oil Lines .....	34	Front Timing Gear .....	17
Engine Oil Pump.....	31	Front Tow Hook .....	179
Engine Oil Sampling.....	30	Fuel Drain Lines .....	68
Engine Support.....	21	Fuel Filter .....	73
Engine to Transmission Adapter .....	148	Fuel Injection Lines .....	68
		Fuel Injection Pump .....	62
		Fuel Lines.....	77
		Fuel Priming Pump and Filter.....	74
		Fuel Tank .....	78
		Fuel Transfer Pump .....	76
		Fumes Disposal .....	36

## TABLE OF CONTENTS - CONTINUED

<b>G</b>	Name	Page	
Name	Page		
Gasket-Cylinder Head .....	14	Hydraulic Pump Drive .....	208
Gasket Kits .....	294	Hydraulic Scarifier .....	259
Gauges .....	287	Hydraulic Tank .....	203
Gear Pump .....	147	Hydraulic Tank and Mounting .....	205
Gerotor Motor .....	185	Hydraulic Tank Cap .....	206
Governor .....	64		
Governor Control .....	70		
Governor and Fuel Injection Pump .....	59		
Grease Gun .....	296		
<b>I</b>			
Implement Pump and Mounting .....		Implement Pump and Mounting .....	209
<b>H</b>			
Harness-Heating and Mounting .....	293	Lamp-Blackout .....	127
Head Lamp .....	112	Lamp-Signal .....	1
Hood .....	170	Lamp-Tail, Stop and Turn .....	102
Hood Side Door .....	171	Leaning Wheel and Cylinder Mounting .....	251
Horn-Electric .....	290	Lever-Clutch .....	131
Hydraulic Articulation Lines .....	222	Lever-Hydraulic Unloading Valve .....	221
Hydraulic Centershift Lines .....	199	Lever-Valves .....	221
Hydraulic Leaning Wheel Lines .....	223	Lift Cylinder Lines .....	224
Hydraulic Lines-Blade Float .....	230	Lighting-Blackout .....	126
Hydraulic Oil Cooler .....	44	Lighting-Dome .....	116
Hand Tools .....	295	Lighting-Flood .....	109
Harness .....	101	Lighting-Light Bar .....	110
Harness-Battery and Wiring .....	93	Lighting-Rotating Warning .....	108
Harness-Blade Float Control .....	123	Lighting-Signal .....	108
Harness-Blade Float Control .....	119	Linkage-Governor Control .....	64
Harness-Blade Lift Accumulator .....	125	Linkage and Valve-Hydraulic Implement Controls .....	234
		Linkage-Transmission Control .....	136
		Literature-Chassis .....	180

## TABLE OF CONTENTS - CONTINUED

**M**

Name	Page
Magnetic Switch .....	123
Monitor Wiring .....	98
Motor-Circle Drive-Lines.....	186
Motor-Gerotor-Circle Drive .....	185
Mounting and Blade Tip	
Cylinder.....	248
Mounting and Monitor.....	288
Mounting and Pump .....	194
Mounting and Steering	
Cylinder.....	187
Muffler .....	56

**N**

Names Plates and Films .....	297
------------------------------	-----

**O**

Oil Drain Extension Hose .....	27
Oil Filler-Engine .....	29
Oil Filter .....	35
Oil Level Gauge-Engine .....	28
Oil Lines-Engine .....	34
Oil Pan.....	27
Oil Pan Fastener.....	26
Oil Pump-Engine .....	32
Oil (Transmission)	
Sampling .....	33
Operator Console .....	283

**P**

Pump-Metering-Steering	
Padlock-Engine Oil Gauge .....	28
Padlock-Hydraulic Tank	
Cap .....	216
Padlock-Radiator Cap .....	38

Name	Page
------	------

Padlock-Transmission	
Oil Filler .....	30
Paint and Lubricant .....	79
Panel .....	271
Parking Brake Control.....	158
Pedal Clutch Control .....	147
Pedal-Service Brake	
Control .....	162
Pilot Valve .....	141
Planetary Transmission.....	129
Power Blade Arrangements .....	289
Power Blade and Tip	
Arrangements .....	290
Power Train Schematic.....	2
Protection Cover .....	206
Pulley-Fan Drive.....	23
Pump Control Head-Slipper .....	213
Pump-Gear-Transmission.....	147
Pump Lines-Hydraulic .....	216
Control.....	188
Pump-Slipper and Gear	
Piston-Implement .....	210
Pump-Slipper-Implement .....	211
Push Plate.....	302
<b>R</b>	
Radiator.....	37
Radiator Guard and	
Support .....	166
Radiator Protection Cover.....	38
Radio Interference	
Suppression.....	125
Rear Bumper.....	169
Rear View Mirror .....	280
Regulator and Housing .....	45
Relief Control Valve .....	139
Replacement Items .....	1
ROPS-Enclosed .....	61

**V**

## TABLE OF CONTENTS – CONTINUED

<b>S</b>	Name	Page	
Name	Page		
Scarifier Cylinder .....	254	Transmission Control-	
Scarifier Cylinder and Mounting .....	255	Hydraulic.....	138
Scarifier-Hydraulic .....	259	Transmission Filter.....	148
Scarifier Hydraulic Lines.....	233	Transmission Oil Cooler.....	43
Seat .....	282	Transmission Oil Cooler Lines .....	43
Seat Belt.....	281	Transmission Oil Filler .....	31
Sensor Wiring .....	121	Transmission Oil Lines .....	146
Service Brake .....	164	Transmission-Planetary .....	129
Service Brake Control .....	160	Turbocharger .....	50
Signal Lamp.....	111	Turbocharger Oil Lines .....	49
Signal Lighting.....	108		
Shift and Link.....	274	<b>U</b>	
Slipper and Gear Piston Pump.....	210	Universal Joint- Hydraulic Pump .....	207
Solenoid Assembly .....	87		
Specifications .....	299	<b>V</b>	
Steering Cylinder and Mounting .....	187	Valve-Air Control- Centershift Lock.....	200
Steering Lines and Supplemental .....	192	Valve-Air Control- Service Brake .....	163
Steering Oil Lines .....	195	Valve-Air-Parking Brake.....	159
Step-Platform .....	169	Valve Assembly.....	141
Storage Box.....	174	Valve-Check .....	193
Swivel Joint-Blade Shift Lines .....	227	Valve-Check and Relief-Blade Cushion Accumulator .....	286
<b>T</b>	Lift Cylinder .....	225	
Tachograph Drive .....	289	Valve-Combination- Hydraulic Pump Lines.....	193
Tire .....	157	Valve-Control Articulation .....	240
Tool Box .....	3	Blade, Circle Drive and Side Shift .....	236
Tools.....	295	Blade Lift .....	239
Torque Control .....	63	Blade Tip .....	243
Transfer Case and Gear.....	132	Blade, Wheel Lean, Centershift, Scarifier and Articulation.....	237
Transmission Arrangement .....	128		
Transmission Case.....	135		
Transmission Control .....	136		

## TABLE OF CONTENTS - CONTINUED

Name	Page	Name	Page
Center Shift.....	241	Valve-Relief-	
Circle Drive.....	238	Steering Lines.....	197
Scarifier .....	239	Valve-Selector and Pressure	
Side Shift .....	242	Control-Transmission .....	143
Wheel Lean .....	241	Valve-Selector and Pressure	
Valve-Direct Operated		Reducing-Transmission .....	145
Relief-Pump Lines.....	215	Valve-Servo.....	214
Valve Follower.....	215	Valve-Unloading-Hydraulic	
Valve Mechanism .....	16	Lines .....	219
Valve Mechanism Cover .....	17	Vandalism Guard-Gauges .....	285
Valve-Pilot Operated Check-		Vee Scarifler	
Circle Motor.....	185	Arrangements .....	258
Hydraulic Lines .....	200		
Valve-Pilot Operated-		<b>W</b>	
Relief.....	200		
Valve-Pilot Selector and		Warning Lighting .....	107
Pressure Control-		Water Lines-Engine .....	41
Transmission .....	142	Water Pump .....	39
Valve-Pilot-		Weather Insulation .....	269
Transmission Control .....	141	Wheel .....	157
Valve-Pressure Reducing.....	214	Wheel Lean Cylinder.....	253
Valve-Quick Release-		Windshield Washer .....	276
Parking Brake .....	159	Windshield Wiper-Front .....	275
Valve-Relief and Check-		Windshield Wiper-Rear .....	273
Scarifier Lines .....	232	Windshield Wiper Shaft	
Valve-Relief Control-		Link Assembly .....	274
Transmission Control.....	139	Wiper-Linkage .....	277

**MACHINE  
IDENTIFICATION**

The CCE130G graders are identified with SERIAL NUMBERS. Serial numbers are assigned to the chassis and to the engine. The chassis and the engine may also carry ARRANGEMENT NUMBERS. These numbers are shown on the serial number plates and on the master plate in the operator's compartment. For the location of the serial number plates, refer to the Specification Section at the back of this Parts Book.

These numbers are required to determine which components are included on the machine as assembled at the factory. This permits accurate identification of replacement part numbers.

**ORDERING  
PARTS**

Replacement parts are available and include all parts required to protect and service the machines. When ordering parts, your order should specify the quantity, part number, part name and the serial number and arrangement number of the machine for which the parts are needed. If in doubt about the part number, please provide a complete description of the needed item.

**HOW TO USE THE  
PARTS BOOK**

Parts Books include illustrations of the groups or assemblies which make up the machine. These illustrations show the components which make up the machine. The alphabetical index located in the front part of the book should be used to determine the page number on which specific illustrations are shown. Reference to those pages will identify each of the individual serviceable parts.

**Captions** The caption under each illustration identifies the part number and name of the group or assembly shown.

Complex groups or assemblies may be broken up into several illustrations, these are identified as PARTS I, II, III or as required.

Captions provide additional information such as page numbers where illustrations of sub assemblies are shown, information regarding quantities used and other information intended to assist the user in determining parts needs.

**Indented Part Numbers** Within each illustration is a parts list identifying each serviceable part in the illustration. When a part name is indented in this list, it means that serviceable item is a part of the serviceable item under which it is indented.

**Abbreviations and Symbols**

▲ Used to call attention to additional information shown elsewhere within the illustration.

R.H.	Right Hand	Refers to the side of the machine as viewed from the operator's compartment.
L.H.	Left Hand	
C	Indicates changes from the previous illustration of the same group or assembly.	
O.D.	Outside Diameter	
I.D.	Inside Diameter	
N/S	Not Serviced	
Assem.	Assembly	
in.	Inch	
ft	Foot	
cm	Centimeter	
dm	Decimeter	

# QUICK REFERENCE GUIDE TO MAJOR SECTIONS

REPLACEMENT ITEMS  
AND SCHEMATIC

BASIC ENGINE

LUBRICATION SYSTEM

COOLING SYSTEM

INTAKE AND  
EXHAUST SYSTEM

FUEL SYSTEM  
AND GOVERNOR

STARTING AND  
ELECTRICAL SYSTEM

POWER TRAIN -  
POWER TRANSMISSION UNIT

BRAKES

CHASSIS

BLADE CONTROLS, HYD.  
AND STEERING SYSTEM

IMPLEMENTS


CAB, GAUGES  
& ACCESSORIES

**REPLACEMENT ITEMS**

The following chart provides a convenient listing of those items which require occasional replacement during normal operation or maintenance.

	PART NO.	QTY. USED	PAGE NO.
<b>BATTERIES</b> – 12 Volt	7N7200 or	2	
Heavy Duty – 12 Volt	4S9261	2	105
<b>BREATHERS</b>			
Crankcase – Breather Assem.	8S248	1	36
Transmission	8S5820	1	132
<b>COOLING SYSTEM</b>			
Relief Valve Assem.– Cap	321464	1	37
<b>FILTERS</b>			
Air Cleaner			
Element Assem. – Primary	8N5389	1	46
Element Assem. Secondary	2S19RS	1	46
	2P4004	1	35
Crankcase – Filter Assem.			
Fuel			
Filter Assem.	1W8633	1	73
Hydraulic			
Screen — Filler	8D5489	1	203
Tank — Element Assem.	9M9740 or	2	203
(Use with Fire Resistant Fluid)	1 U2093	2	203
Seal	5H6734	2	203
Transmission			
Element Assem.	9M9740 or	1	148
(Use with Fire Resistant Fluid)	1U2093	1	148
Seal	2S8439	1	148
Screen – Transfer Case	85S9130	2	132
Filter – Transfer Case	8S9129	2	132
<b>GASKETS</b>			
Hydraulic Filler Cap	9H6454	1	204
Radiator Filler Cap	321464	1	37
Valve Cover	8S1606	1	17
<b>HOSES</b> – Fumes Disposal	1N4102	8.00 cm	36
<b>LAMPS</b>			
Flood – Sealed Unit	1M5898	1	112
Front & Rear – Sealed Units			
<b>SEAT BELT</b>	1 M5899	1	112
<b>VEE BELTS</b>	6G1606	1	
Alternator & Fan	7M4702	(Includes 2 Belts)	23

## CATERPILLAR 130G MOTOR GRADER

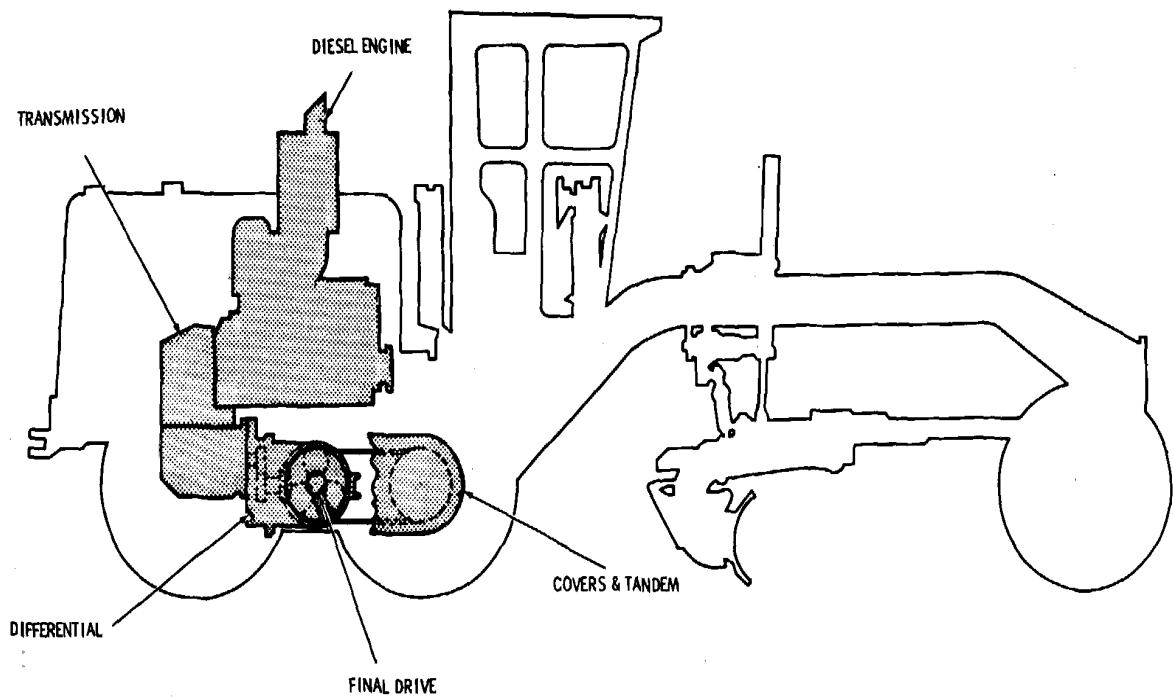

POWER TRAIN ARRANGEMENT

Consists of      Page

GENERAL STRUCTURE

1	7N6553	Cylinder Block Group .....	6
1	2W102	Cylinder Block Cover Group.....	9
1	6N8080	Crankshaft Group.....	10
1	2P6224	Crankshaft Seal Group.....	11
4	1W6588	Connecting Rod and Piston Group .....	9
1	1N4436	Single Camshaft Group.....	12
1	1W2872	Balancer Group .....	12

UPPER STRUCTURE

1	7N6544	Cylinder Head Group.....	13
1	7N9534	Cylinder Head Fastener Group .....	16
1	7N8024	Valve Mechanism Group.....	16
1	8N4446	Valve Mechanism Cover Group .....	17
1	7N9122	Engine Lifting Group.....	18
1	2P6530	Cylinder Head Cover Group.....	14

FRONT STRUCTURE

1	8N0303	Front Housing Group.....	19
1	2P6529	Front Housing Cover Group .....	20
1	8N0872	Front Housing Fastener Group .....	20
1	1W5634	Front Timing Gear Group .....	17
1	7N9589	Engine Trunnion Group.....	25
1	8N5585	Engine Support Group.....	21
1	3P103	Crankshaft Hub Group .....	22

REAR STRUCTURE

1	2P6166	Flywheel Housing Group .....	25
1	1P9581	Flywheel Group .....	26

LOWER STRUCTURE

1	4W2314	Oil Pan Group.....	27
1	2P6189	Oil Pan Fastener Group .....	26
1	2P6491	Oil Level Gauge Group.....	28

LUBRICATION SYSTEM

1	2P1784	Engine Oil Pump Group .....	31
1	2P6512	Engine Oil Lines Group .....	34
1	2P6475	Oil Filter Group .....	35
1	2P6855	Oil Filler Group .....	29
1	1P4244	Breather Group .....	36

2W821 ENGINE ARRANGMENT—Part 1

NOTE: WHEN ORDERING PARTS GIVE ENGINE ARRANGEMENT NUMBER AND SERIAL NUMBER

Consists of

Page

COOLING SYSTEM

1	7N6206	Water Pump Group .....	9
1	1N4219	Water Lines Group.....	2
1	2P6215	Engine Oil Cooler Group .....	4
1	2P6508	Transmission Oil Cooler Group.....	3

INTAKE AND EXHAUST SYSTEM

1	7N4144	Air Lines Group .....	8
1	2P6571	Exhaust Manifold Group.....	6
1	1W3793	Exhaust Manifold Fastener Group .....	5
1	7N4650	Turbocharger Group.....	1
1	1W558	Turbocharger Oil Lines Group .....	9

FUEL SYSTEM (NSFS)

1	W517	Governor and Fuel Injection Pump Group .....	9
1	2W3286	Secondary Filter Group .....	3
1	2W4012	Drain Lines Group .....	8
1	1W5374	Primary Fuel Filter Group.....	4
1	8N2772	Fuel Injection Lines Group .....	8
1	2W4160	Fuel Transfer Pump and Mounting Group .....	6

MISCELLANEOUS


1	7N9912	Air Compressor Group .....	2
1	7N9919	Air Compressor Lines Group.....	4
1	8S3899	Paint and Lubricant Group .....	9
1	8N9033	Coolant Outlet (Cylinder Head) Plug .....	5

NOTE: REFER TO INDEX FOR PAGE LOCATION OF GASKET KITS

2W821 ENGINE ARRANGEMENT--Part 2


NOTE: WHEN ORDERING PARTS GIVE ENGINE ARRANGEMENT NUMBER  
AND SERIAL NUMBER

## CATERPILLAR 130G MOTOR GRADER

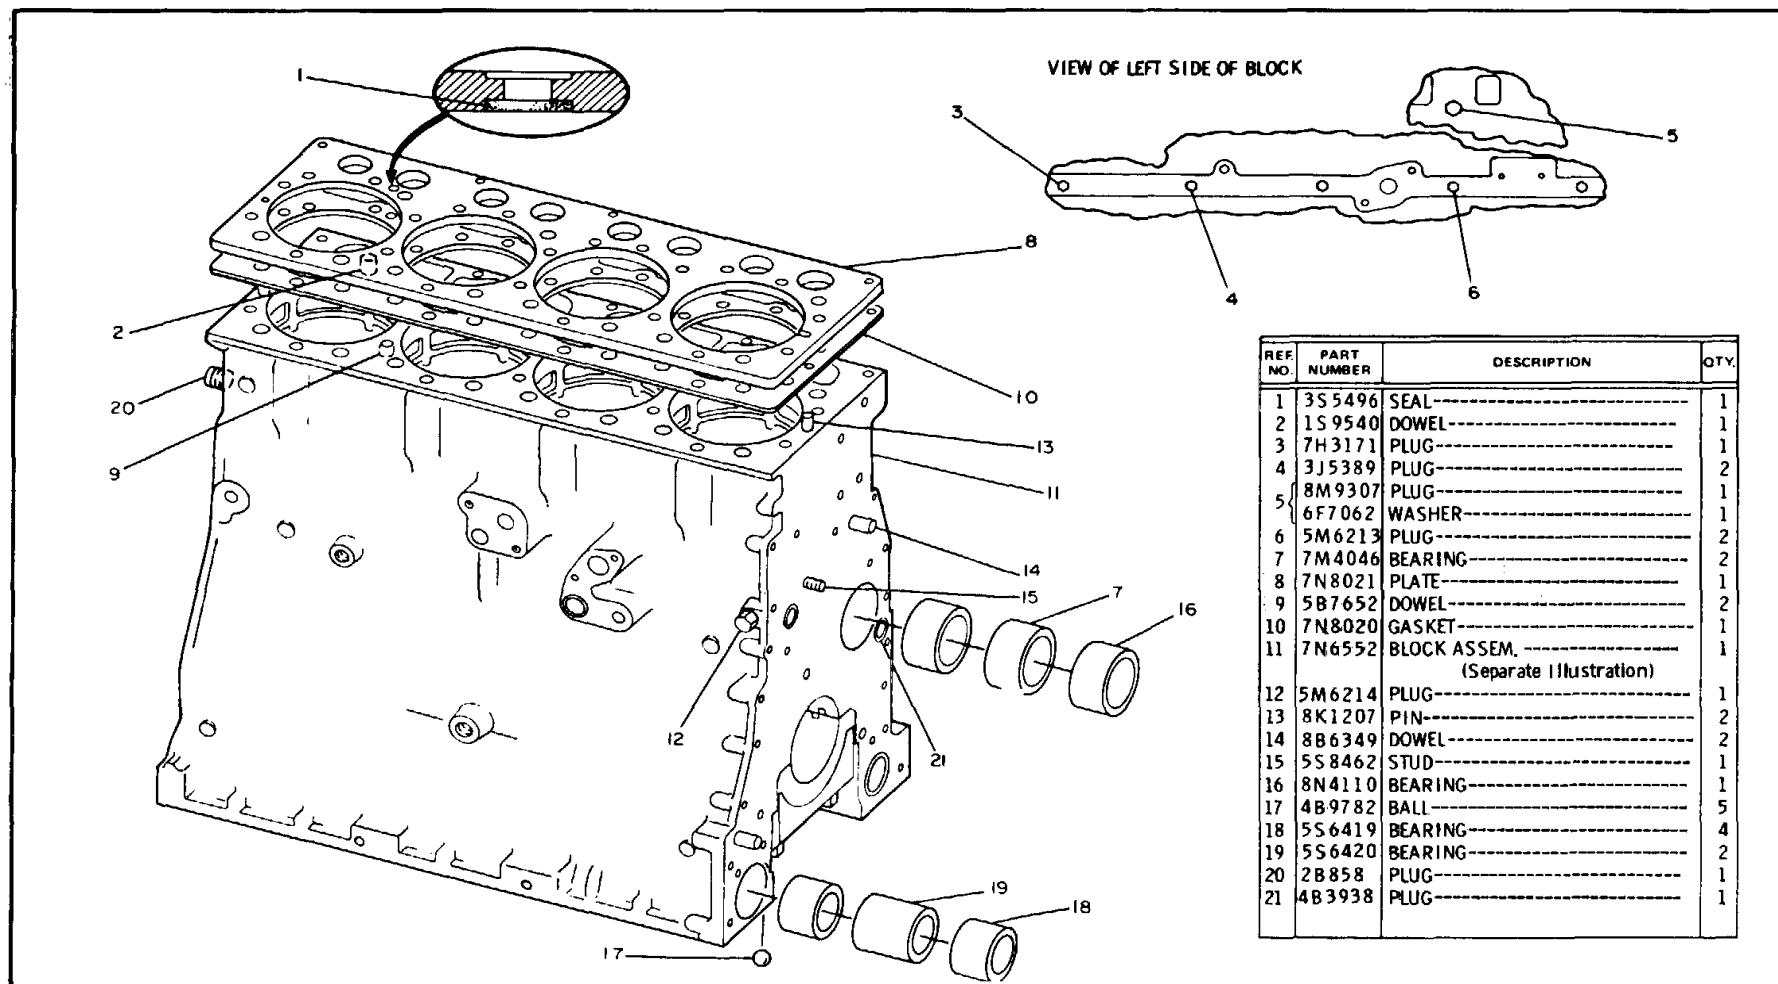


7N6553 CYLINDER BLOCK GROUP  
7N6552 Block parts are shown on Page 7

## BASIC ENGINE

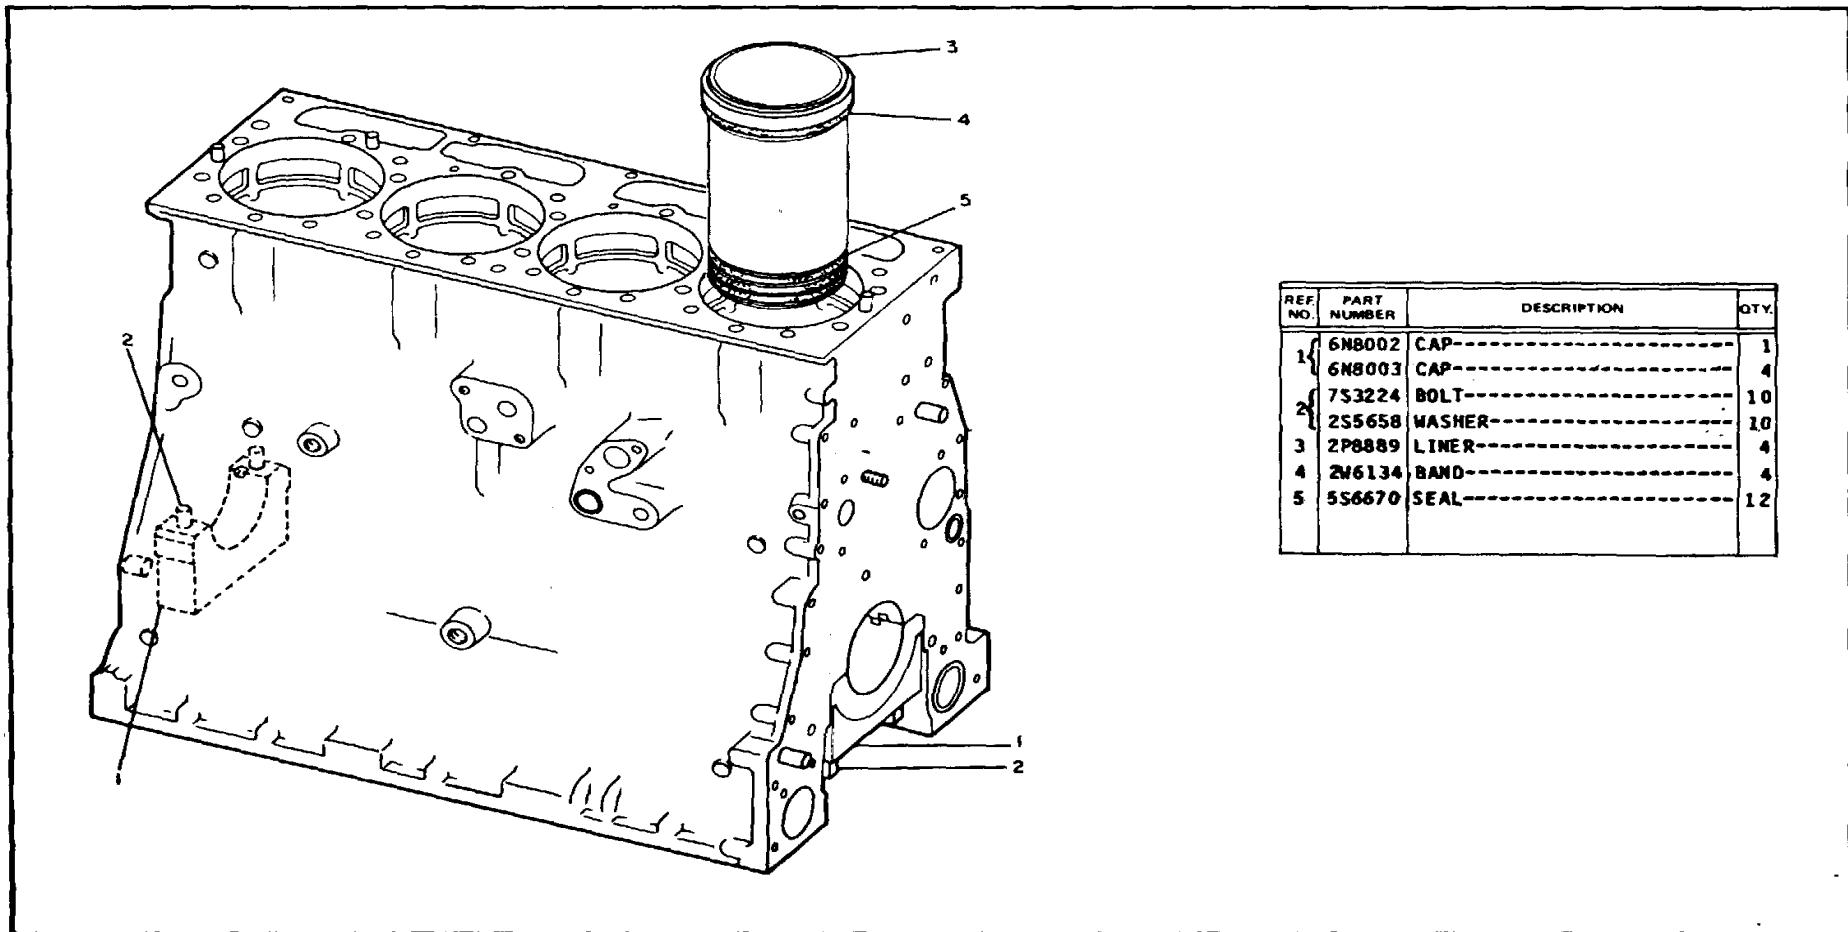

7N6552 CYLINDER BLOCK ASSEMBLY  
 Part of 7N6553 Cylinder Block Group shown on Page 6  
 For Field Replacement order 1N3574 shown on Page 8


## CATERPILLAR 130G MOTOR GRADER

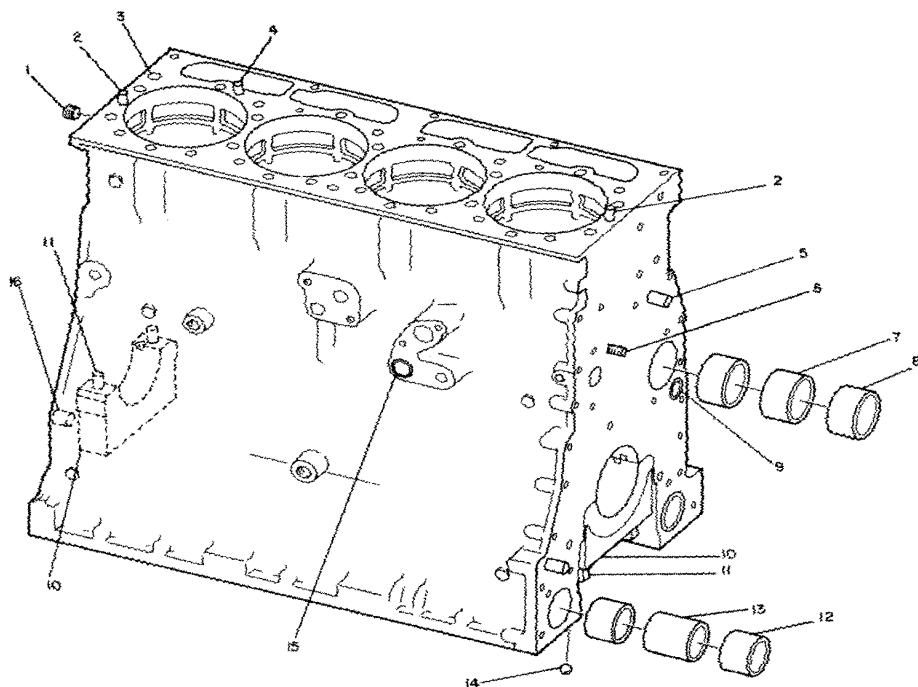


REF. NO.	PART NUMBER	DESCRIPITON	QTY
1	2B858	PLUG	1
2	8K1207	PIN	2
3	5B7652	DOWEL	2
4	1S9540	DOWELL	1
5	8B6349	DOWEL	2
6	5S8462	STUD	1
7	7M4046	BEARING	2
8	8N4110	BEARING	1
9	4B3938	PLUG	2
10	6N8003	CAP	5
11	7S3224	BOLT	10
11	2S5658	WASHER	10
12	5S6419	BEARING	4
13	5S6420	BEARING	2
14	4B9782	BALL	5
15	9L7657	PLUG	1
16	2A3798	DOWEL	2

*1N3574 CYLINDER BLOCK GROUP  
 Provides Field Replacement for 7N6552 shown on Page 7*

## BASIC ENGINE

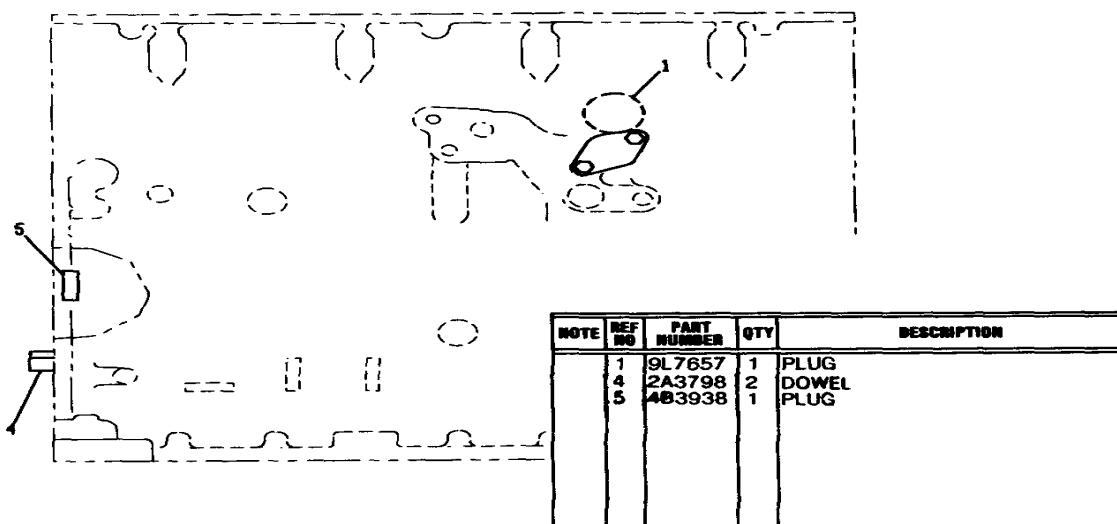


2W102 CYLINDER BLOCK COVER GROUP

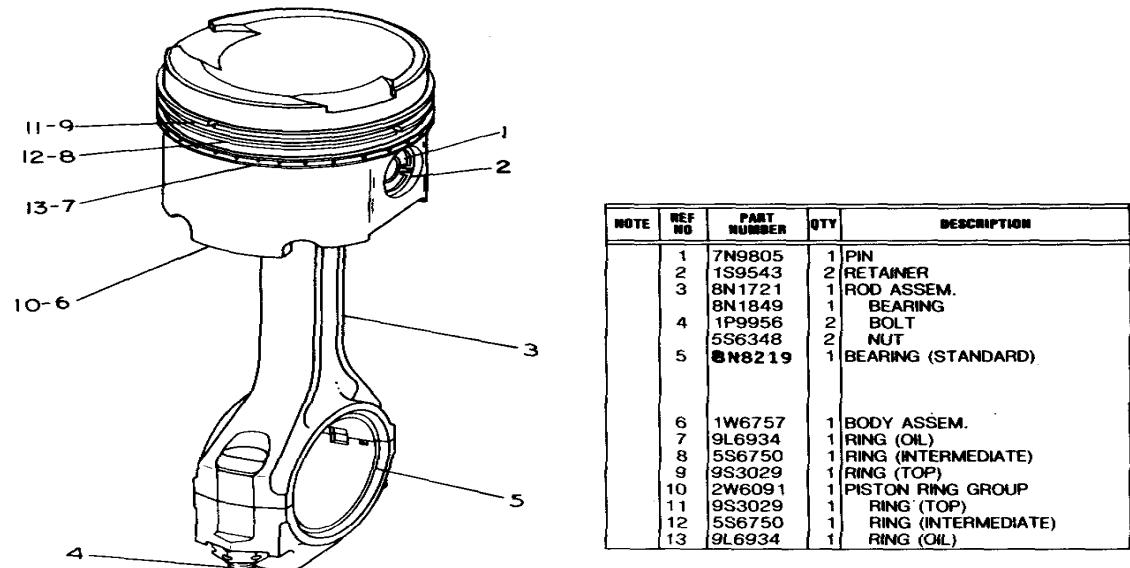


1W6588 CONNECTING ROD AND PISTON GROUP -4 REQUIRED

## CATERPILLAR 130G MOTOR GRADER

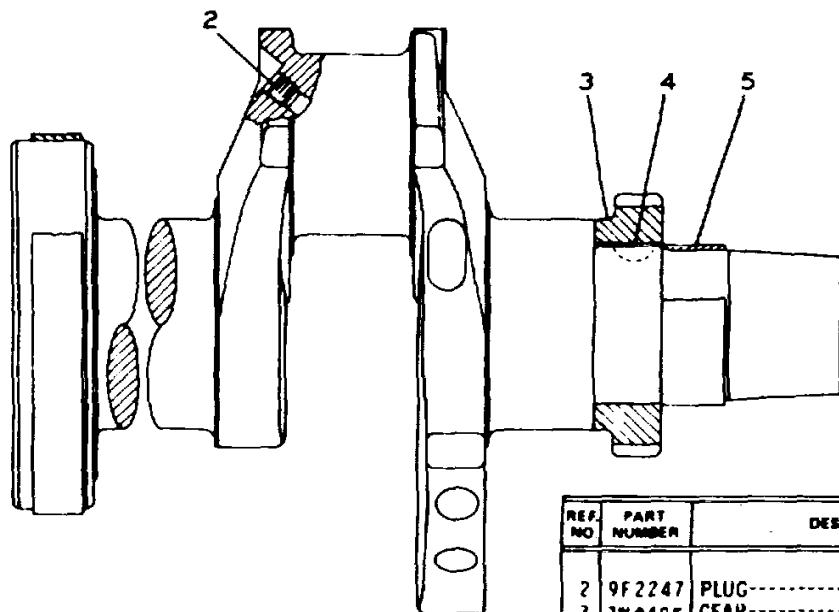

REF. NO.	PART NUMBER	DESCRIPTION	QTY
2	9F2247	PLUG-----	4
3	2W4405	GEAR----- (40 teeth)	1
4	5H2671	KEY-----	1
5	2P3859	SLEEVE-----	1


6N8080 CRANKSHAFT GROUP  
For Field Replacement of 4N7695 order 4N7692

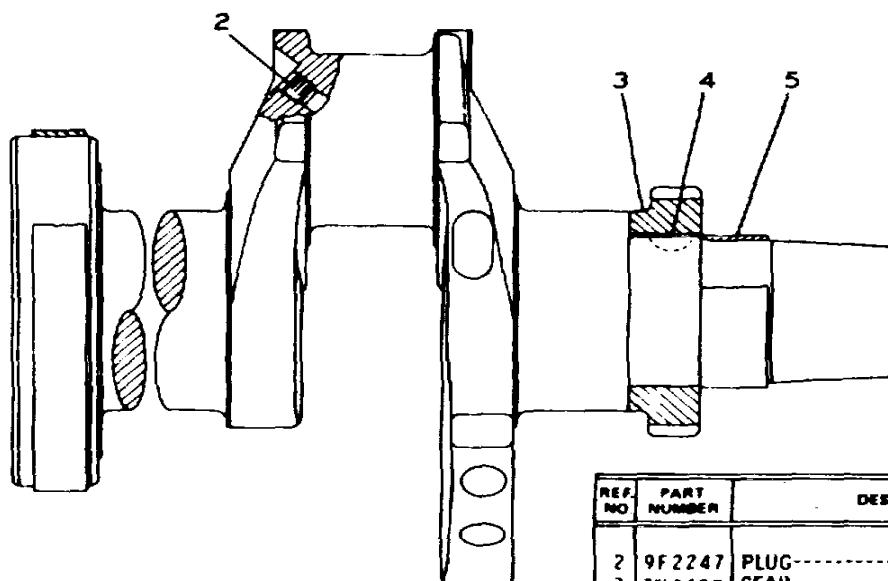

REF. NO.	PART NUMBER	DESCRIPTION	QTY
2	9F2247	PLUG-----	4
3	2W4405	GEAR----- (40 teeth)	1
4	5H2671	KEY-----	1
5	2P3859	SLEEVE-----	1

4N7692 CRANKSHAFT ASSEMBLY - Field Installation

## BASIC ENGINE

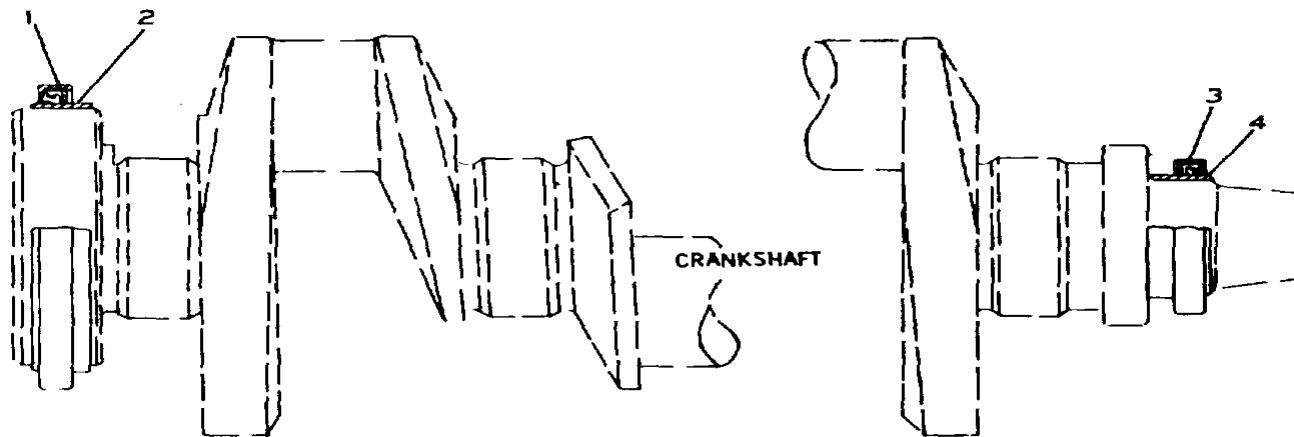

REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	1N3216	SEAL GROUP----- (Includes)	1
1	9S3111	SEAL-----	1
2	2P3858	SLEEVE-----	1

3	5S6296	SEAL-----	1
4	2P3859	SLEEVE-----	1

228583

2P6224 CRANKSHAFT SEAL GROUP