

**TECHNICAL MANUAL**

**DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE  
REPAIR PARTS AND SPECIAL TOOLS LISTS**

**FOR**

**ENGINE, DIESEL (MULTIFUEL):  
TURBOCHARGED, FUEL INJECTED,  
WATER COOLED, 6-CYLINDER  
ASSEMBLY (MILITARY MODELS  
LDT-465-1D, 2815-01-214-8820;  
LDS-465-1A, 2815-00-239-5819,  
AND CLUTCHES)**

Approved for Public Release; Distribution is Unlimited

---

**HEADQUARTERS, DEPARTMENT OF THE ARMY**

JUNE 1998

TECHNICAL MANUAL  
NO. 9-2815-210-34P

DEPARTMENT OF THE ARMY  
Washington D.C., 1 June 1998

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE  
REPAIR PARTS AND SPECIAL TOOLS LIST

ENGINE, DIESEL (MULTIFUEL):  
TURBOCHARGED, FUEL INJECTED,  
WATER COOLED, 6-CYLINDER ASSEMBLY  
(MILITARY MODELS LDT-465-1D, 2815-01-214-8820;  
LDS-465-1A, 2815-00-239-5819, AND CLUTCHES)

Current as of February 1998

REPORTING OF ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes, or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2, located in the back of this manual directly to: Commander, U.S. Army Tank-automotive and Armaments Command, ATTN: AMSTA-AC-NML, Rock Island, IL 61299-7630. A reply will be furnished to you. You may also provide DA Form 2028-2 information via data fax or e-mail:

- E-mail: amsta-ac-nml@ria-emh2.army.mil
- Fax: DSN 793-0726 or commercial (309) 782-0726

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

		Page	Illus. Figure
Section I	INTRODUCTION .....	1	
Section II	REPAIR PARTS LIST .....	1-1	1
GROUP 01	ENGINE		
	0100 Engine and Container .....	1-1	1
	0100 Crankcase and Related Parts .....	2-1	2
	0101 Cylinder Head Assembly and Related Parts .....	3-1	3
	0102 Crankshaft, Main Bearing, and Related Parts .....	4-1	4
	0103 Flywheel, Flywheel Housing, Transmission Adapter, and Related Parts (LDS465-1A) .....	5-1	5
	0103 Flywheel, Flywheel Housing, Transmission Adapter, and Related Parts (LDT465-1D) .....	6-1	6

\* This manual supersedes TM 9-2815-210-34P, 31 May 1974

TABLE OF CONTENTS - Continued

	Page	Illus. Figure
0104 Piston, Connecting Rods, and Related Parts .....	7-1	7
0105 Timing Gear Cover and Camshaft .....	8-1	8
0105 Camshaft Access Cover and Expansion Plug .....	9-1	9
0105 Crankcase, Front Plate, and Related Parts .....	10-1	10
0105 Cylinder Head Covers, Valves, and Related Parts .....	11-1	11
0106 Oil Cooler and Related Parts .....	12-1	12
0106 Oil Pump and Related Parts (LDT465-1D) .....	13-1	13
0106 Oil Pump Assembly .....	14-1	14
0106 Oil Pump and Related Parts (LDS465-1A) .....	15-1	15
0106 Crankcase Breather System and Related Parts .....	16-1	16
0106 Oil Filter, Oil Pressure Regulator, and Related Parts .....	17-1	17
0106 Oil Pan and Oil Pump Idler Gear .....	18-1	18
0108 Intake and Exhaust Manifolds and Related Parts .....	19-1	19
GROUP 02 CLUTCH		
0200 Clutch Assembly and Related Parts (LDT465-1D) .....	20-1	20
0200 Clutch Assembly and Related Parts (LDS465-1A) .....	21-1	21
GROUP 03 FUEL SYSTEM		
0301 Fuel Injector Lines and Related Parts .....	22-1	22
0302 Fuel Injector Pump, Driven Gear, and Related Parts .....	23-1	23
0302 Cap and Plug Set, Engine Fuel System .....	24-1	24
0305 Turbocharger, Oil Inlet and Drain Tubes, and Related Parts .....	25-1	25
0309 Fuel Filters and Related Parts .....	26-1	26
GROUP 05 COOLING SYSTEM		
0503 Thermostat, Housing, and Related Parts .....	27-1	27
0503 Water Manifold and Related Parts .....	28-1	28
0504 Water Pump and Related Parts .....	29-1	29
0505 Engine Fan Drive and Related Parts .....	30-1	30
GROUP 06 ELECTRICAL SYSTEM		
0601 60-Ampere Alternator .....	31-1	31
0603 Starting Motor and Related Parts .....	32-1	32
0610 Oil Pressure and Water Temperature Sending Units .....	33-1	33
GROUP 12 BRAKES		
1209 Air Compressor and Related Parts .....	34-1	34
GROUP 14 STEERING		
1410 Hydraulic Pump and Related Parts (LDS465-1A) .....	35-1	35
GROUP 22 ACCESSORY ITEMS		
2210 Data Plates .....	36-1	36
GROUP 33 SPECIAL PURPOSE KITS		
3301 Engine Shipping and Storage Container Assembly .....	37-1	37
GROUP 47 GAGES (Non-Electrical)		
4701 Tachometer Drive and Related Parts .....	38-1	38

TABLE OF CONTENTS - Continued

	Page	Illus. Figure
GROUP 94		
KITS		
9401 Repair Kits.....	KIT-1	
GROUP 95		
GENERAL USE STANDARDIZED PARTS		
9501 Bulk .....	BULK-1	
Section III.		
SPECIAL TOOLS		
GROUP 26		
SPECIAL TOOLS AND TEST EQUIPMENT		
2604 SpecialTools.....	39-1	39
2604 SpecialTools.....	40-1	40
2604 SpecialTools.....	41-1	41
2604 Mechanical Puller Kit and Compression Tester Gauge Equipment .....	42-1	42
2604 Special Tools and Equipment.....	43-1	43
2604 Engine Overhaul Stand and Mounting Brackets.....	44-1	44
2604 Camshaft Bushing-Type Bearing Remover and Replacer Kit.....	45-1	45
Section IV		
CROSS REFERENCE INDEXES		
National Stock Number Index.....	I-1	
Part Number Index .....	I-8	

## DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

### SECTION I. INTRODUCTION

**1. Scope.**

a. This Repair Parts and Special Tools List (RPSTL) lists and authorizes spare and repair parts; special tools; test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of direct support and general support maintenance of the LDT465-1D and LDS465-1A Multifuel Diesel Engine Assemblies. It authorizes the requisitioning, issue, and disposition of spares, repair parts, and special tools as indicated by the Source, Maintenance, and Recoverability (SMR) codes.

b. TM 9-2320-211-20P and TM 9-2320-361-20P contain repair parts for unit maintenance.

**2. General.**

In addition to Section I, Introduction, this RPSTL is divided into the following sections:

a. **Section II. Repair Parts List.** A list of spare and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for reparable special tools are also listed in this section. Items listed are shown on the associated illustration(s)/figure(s).


b. **Section III. Special Tools List.** A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. **Section IV. Cross-Reference Index.** A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGEC, and part numbers.

**3. Explanation of Columns (Sections II and III).**

a. **Item No. (Column (1)).** Indicates the number used to identify items called out in the illustration.

b. **SMR Code (Column (2)).** The SMR code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

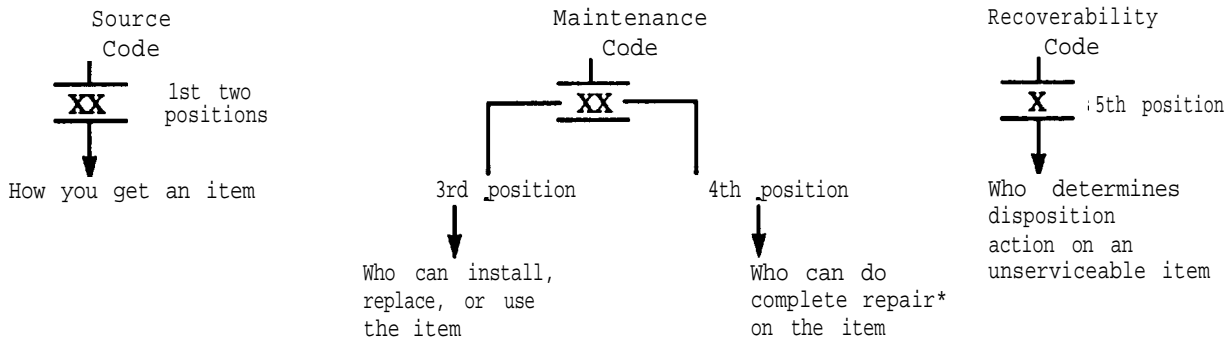

\* Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the repair function in a use/user environment in order to restore serviceability to a failed item.