

TM 5-4210-222-14&P-1

TECHNICAL MANUAL

OPERATOR'S, ORGANIZATIONAL, DIRECT SUPPORT  
AND GENERAL SUPPORT MAINTENANCE MANUAL  
[INCLUDING REPAIR PARTS AND SPECIAL TOOLS LIST]

FOR

TRUCK, FIREFIGHTING, DRY CHEMICAL AFFF

NSN 4210-00-484-5729

VOLUME I

This copy is a reprint which includes current  
pages from Change 1.

---

HEADQUARTERS, DEPARTMENT OF THE ARMY

14 APRIL 1986

## VOLUME I

PARTS MANUALTABLE OF CONTENTS

<u>SECTION</u>	<u>PAGE(S)</u>
<b>PARTS CATALOG - S-SERIES MODEL INTERNATIONAL HARVESTER</b>	
GROUP INDEX .....	1001
A. GENERAL INFORMATION .....	1002
B. FRAME	
Bumper, Front .....	1026
Crossmember, Intermediate .....	1028
Sidemember, Chart .....	1030
C. FRONT AXLE	
Axle, Front, Driving, Dana FA64 9000 lb. ....	1031
Spring, Front, Mounting, Dana FA64 9000 lb. ....	1036
Flanges.....	1038
Light, Warning, Installation .....	1039
D. ENGINE	
Light, Warning, Installation .....	1041
E. CHASSIS SPRINGS	
Shock Absorber, Installation .....	1042
F. BRAKES	
Compressor, Piping, Air and Governor Mounting.....	1043
Compressor, Mounting and Piping, Air .....	1045
Strainer, Air Compressor .....	1047
Compressor, Air Midland Ross EL 740 .....	1048
Governor, Air Compressor .....	1050
Valve, Parking Brake Control .....	1051
Valve, Brake Pedal and Control .....	1052
Compressor, Mounting and Hosing Air Midland Ross EL 740 .....	1053
Shield Heat .....	1055
Valve, Double Check .....	1056
Switch, Stoplight .....	1057
Schematic System Diagram .....	1058
Bracket, Manifold Block, Button Plug, Chart .....	1059
Chamber, Air Brake MGM 30 in. - Emergency .....	1060
Valve, Check .....	1061
Chart, Connections, Elbows and Fittings .....	1062
Tank, Mounting and Hosing, Air .....	1067
Hoses, Tubes, Clamps, Chart .....	1069
Adjuster, Auto-Slack Repair Kits - Rear Axle.....	1071
Chamber, Air Brake, MGM 30 in. - Service .....	1072
Valve, Safety .....	1073
Valve, Quick Release .....	1074
Dryer, Mounting and Hosing, Air-Breakmaster Model 62.....	1075

## VOLUME I

PARTS MANUALTABLE OF CONTENTS

<u>SECTION</u>		<u>PAGE(S)</u>
F. BRAKES - CONTINUED		
Dryer, Air-Breakmaster Model 62 .....	1077	
Brake Mounting, Rear .....	1078	
Brake, Rear .....	1079	
Gauge, Switch Valve Chart .....	1081	
G. STEERING GEAR		
Chart, Hoses and Fittings .....	1085	
Column, Steering and Wheel - Standard .....	1088	
Gear, Steering and Drag Link Installation .....	1091	
Pump, Power Steering Installation .....	1093	
Pump, Power Steering 2050 psi - Eaton 781.....	1094	
Link, Drag .....	1096	
Gear, Steering - Ross HFB 64 .....	1097	
H. PROPELLER SHAFTS .....	1099	
J. EXHAUST SYSTEM		
Muffler, Tail Pipe, Exhaust and Mounting .....	1114	
K. ELECTRICAL SYSTEM		
Terminals, Solderless - Standard .....	1117	
Terminals, Solderless and Butt Splices - Standard .....	1118	
Connector Bodies and Terminals - Standard .....	1119	
Clips, Extensions and Straps - Standard .....	1121	
Switches - Standard .....	1123	
Wiring Harness, Battery Cables and Miscellaneous .....	1124	
Clamps, Extension Clips - Standard .....	1126	
Lamps, Bulbs, Indicators - Standard .....	1127	
Horns, Buzzers, Warning .....	1128	
Harness and Cables - Standard .....	1129	
Light, Instrument Panel, Product Graphic .....	1130	
Panel, Instrument Cluster with Speedometer		
Tachometer, Gauges and Bezels .....	1132	
Flasher, Fuses and Circuit Breakers .....	1134	
Harness, Turn Signal Light and Horn Hi-Note .....	1135	
Harness, Automatic Transmission Wiring, Oil		
Temperature Gauge, Switches, Back-Up Light,		
Neutral Safety .....	1138	
Harness, Stop, Tail, Turn and Back-Up Light .....	1141	
Light, Turn Signal and Parking .....	1144	
Light, Head with Bezel .....	1145	
Cable and Mounting, Tachometer .....	1146	
Motor, Starting 12V Delco .....	1148	
Harness, Engine Wiring for D9.OL Engine with		
12V Start.....	1151	

## VOLUME I

PARTS MANUALTABLE OF CONTENTS

<u>SECTION</u>		<u>PAGE(S)</u>
K.	ELECTRICAL SYSTEM - CONTINUED	
	Light, Stop, Tail, Turn .....	1155
	Light, License Plate .....	1156
	Battery Cable and Mounting with Frame Mounted Batteries.....	1157
	Light, Clearance, Roof Mounting .....	1161
	Light, Dome .....	1162
	Switch, Turn Signal .....	1163
	Pulley, Belt, Alternator and Mounting for D9.OL Engine .....	1164
	Horn, Mounting, Dual Air .....	1165
	Harness, Headlights, Turn Signals, Horns .....	1168
L.	FRONT SHEET METAL	
	Hood and Grille .....	1170
	Guard, Splash .....	1172
	Step .....	1173
	Fender Extension and Hood Bumper Installation .....	1175
	Deflector, Stone .....	1177
	Fender, Rubber Extension .....	1178
	Cable, Hood .....	1179
M.	SPEEDOMETER	
	Product Graphic and Miscellaneous Graphics .....	1180
	Cable, Speedometer Drive .....	1182
N.	ENGINE	
	Radiator, Collar and Stay Rod Mounting .....	1184
	Crossmember, Engine Mounting Front - Standard.....	1186
	Accelerator, Control Throttle .....	1188
	Bracket, Engine Mounting Rear .....	1189
	Cover, Oil Pan Insulator .....	1191
	Tank, Daeaeration Mounting .....	1192
	Vent, Crankcase .....	1193
	Gasket Sets, Engine .....	1194
	Injector, Fuel Nozzle and Nozzle Holder.....	1195
	Pump, Fuel Injection .....	1196
	Filter, Fuel Mounting .....	1198
	Head, Cylinder and Related Parts .....	1199
	Piping, Fuel Injector .....	1201
	Pump, Fuel Injection and Mounting .....	1203
	Crankcase and Related Parts .....	1204
	Governor, Fuel Injection Pump .....	1206
	Pump, Water Outlet and Thermostat .....	1209
	Cooler, Oil Filter .....	1210
	Pump, Oil .....	1212

## VOLUME I

PARTS MANUALTABLE OF CONTENTS

<u>SECTION</u>		<u>PAGE(S)</u>
N.	ENGINE - CONTINUED	
	Manifold, Intake and Crossover .....	1214
	Fan, Clutch Drive Mounting .....	1215
	Hosing, Radiator and Degaeration Tank Mounting .....	1216
	Cleaner, Air Mounting and Piping .....	1218
	Engine Shutdown .....	1220
	Radiator, Mounting .....	1222
	Piping, Air Compressor and Governor .....	1223
	Pulley, Idler Belt and Mounting .....	1225
O.	TRANSMISSION	
	Transfer Case - Rockwell - Standard .....	1226
	Product Graphics, Shifting .....	1229
	Valve, Air Shift Selector .....	1230
	Control, Auto, Transmission Mounting .....	1231
	Control, Transfer Case Lever .....	1234
	Valve, Transfer Case Control .....	1236
	Angle, Transfer Case Mounting .....	1237
	Adapter, Transmission to Engine .....	1238
	Hosing, Oil Filter .....	1239
	Filter, Oil .....	1240
	Products Graphic, Shifting Diagram .....	1241
	Gauge, Temperature Sender .....	1242
	Flanges .....	1243
	Valve, Chart .....	1246
	Gauge, Oil Level .....	1247
	AT545 Transmission Pictorial Index .....	1249
	Kit, Service .....	1255
	Torque Converter and Oil Pump .....	1257
	Forward Clutch and Turbine Shaft .....	1260
	Fourth Clutch .....	1262
	Third Clutch, Center Support and Second Clutch .....	1264
	Gear Unit and Output Shaft .....	1266
	First Clutch .....	1269
	Transmission Case, Governor and Vacuum Modulator .....	1271
	Control Valve Body Assembly .....	1274
	Oil Pan, Oil Filter, Governor and Speedometer	
	Drive Gears .....	1279
	Supplemental Parts Information .....	1283
	Transmission Vent Assembly and Breather Shroud .....	1284
	Front Support .....	1286
	MY'79 Metric Converter .....	1288
	Fourth Clutch Housing Assembly .....	1291
	Fourth Clutch Trim in Reverse .....	1294
	Control Valve Body Rework .....	1295

## VOLUME I

PARTS MANUALTABLE OF CONTENTS

<u>SECTION</u>		<u>PAGE(S)</u>
O.	TRANSMISSION - CONTINUED	
	Control Valve Body and Separator Plate Reference .....	1297
	Stator Shaft Bushing Replacement .....	1298
	Consolidation of Control Valve Body .....	1300
P.	REAR AXLE	
	Crossmember, Rear Spring and Mounting .....	1302
	Axle, Rear, IH/Dana .....	1305
Q.	FUEL TANK	
	Tank, Fuel, 30 Gallon .....	1308
	Pump, Submerged Fuel .....	1309
	Tank, Fuel, 30 Gallon with Step .....	1311
	Chart, Clamp, Cable Strap, Union, Plug, Fittings, Grommet, Connectors, Nipple, Adapter, Tee, Elbow, Hose, Tube and Conduit .....	1313
R.	CAB AND BODY	
	Fittings, Clamps, Hoses, Conduit, Cable Straps, Shut-Off Valves, Button Plugs, Grommets and O-Rings .....	1316
	Mat, Floor .....	1319
	Handle, Grab .....	1321
	Emblem, Model Designation .....	1322
	Panel, Roof and Cowl .....	1323
	Panel, Back and Underbody .....	1324
	Panel, Underbody .....	1325
	Panel, Side .....	1326
	Panel, Roof, Inner .....	1327
	Mounting, Cab, Low .....	1328
	Door, Cab .....	1329
	Trim, Interior and Window Installation .....	1332
	Panel, Instrument .....	1334
	Wiper, Electric .....	1336
	Visor, Sun .....	1338
	Mirror, Rear View, Beach - Standard .....	1339
	Plate, Master Cylinder Mounting .....	1340
	Heater .....	1341
	Seat, Driver and Passenger .....	1346
	Belt, Seat .....	1348
	Duct, Heater .....	1349
	Washer, W/S.....	1350
S.	WHEELS	
	Rim, Tubeless, Tires .....	1352
	Wheels, Drum or Rotor .....	1353

## VOLUME I

PARTS MANUALTABLE OF CONTENTS

<u>SECTION</u>	<u>PAGE(S)</u>
ROCKWOOD TWIN AGENT 1500/250 DRY CHEMICAL AFFF UNIT .....	1355
Section I - Twin Agent Unit .....	1356
1. Self Contained Dry Chemical System .....	1357
2. Self Contained AFFF System .....	1359
3. Dry Chemical/AFFF System Schematic .....	1361
Section II - Data Sheets for Components Supplied .....	1362
Section III - Discharge Devices .....	1373
1. Twin Agent Handline .....	1374
2. Remote Manual Twin Agent Turret .....	1379
3. Shaper - AFFF .....	1386
4. Dry Chemical Nozzle .....	1388
5. Hose Reel .....	1392
TWIN AGENT SKID SYSTEM SCHEMATICS .....	1393-1396
130 AMP LEECE-NEVILLE ALTERNATOR .....	1397
DYNAMOTE INVERTER .....	1400
HURST JAWS OF LIFE .....	1407
HURST POWER UNIT .....	1411
SIGNAL MODEL PA300* ELECTRONIC SIREN .....	1415
RESCUE CRASH TOOL KIT .....	1421
PARTNER SAW AND ATTACHMENTS .....	1422
BODY SCHEMATIC .....	1423
BRUSH GUARD .....	1425
ELECTRONIC SCHEMATIC .....	1427
SKID UNIT AIR CHARGING SYSTEM .....	1439
LAMP, QUARTZ WITH TELESCOPING POLE .....	1441
SPOTLIGHT.....	1442
LAMP, QUARTZ, 500 WATT .....	1444
HYDRAULIC RESCUE KIT, 10 TON .....	1445
INDEX.....	1446

## VOLUME I

PARTS MANUALLIST OF ILLUSTRATIONS

<u>TITLE</u>	<u>IDENTIFICATION</u>	<u>PAGES(S)</u>
	<u>ILLUSTRATION</u>	
PARTS CATALOG S-SERIES MODEL, INTERNATIONAL HARVESTER GROUP INDEX		
FRAME		
Bumper, Front .....	01-002	1026
Crossmember, Intermediate .....	01-004	1028
Sidemember, Chart .....	01-011	1030
FRONT AXLE		
Axle, Front, Driving, Dana FA64 9000 lbs. ....	02-001	1031
Axle, Front, Driving, Dana FA64 9000 lbs. ....	02-001	1032
Spring, Front and Mounting Dana FA 64 9000 lbs. ....	02-002	1036
Light, Warning Installation .....	02-004	1039
Light, Warning Installation .....	02-004	1040
CHASSIS SPRINGS		
Shock Absorber, Installation IH FA78 .....	03-006	1042
BRAKES		
Compressor, Piping, Air and Governor Mounting .....	04-076	1043
Compressor, Mounting and Piping, Air .....	04-077	1045
Strainer, Air Compressor .....	04-078	1047
Compressor, Air Midland Ross EL 740 .....	04-079	1048
Governor, Air Compressor .....	04-080	1050
Valve, Parking Brake Control .....	04-109	1051
Valve, Brake Pedal and Control.....	04-110	1052
Compressor, Mounting and Hosing, Air Midland Ross EL 740 .....	04-114	1053
Shield, Heat .....	04-126	1055
Valve, Double Check .....	04-127	1056
Switch, Stoplight .....	04-129	1057
Schematic - System Diagram.....	04-130	1058
Bracket, Manifold Block, Button Plug, Chart .....	04-131	1059
Chamber, Air Brake MGM 30 in.		
Emergency .....	04-153	1060
Valve, Check .....	04-162	1061
Chart, Connections, Elbows and Fittings .....	04-164	1062

## VOLUME I

PARTS MANUALLIST OF ILLUSTRATIONS

<u>TITLE</u>	<u>IDENTIFICATION</u>	<u>PAGES(S)</u>
	<u>ILLUSTRATION</u>	
<b>BRAKES - CONTINUED</b>		
Chart, Connections, Elbows and Fittings .....	04-164	1063
Tank, Mounting and Hosing, Air.....	04-180	1067
Hoses, Tubes, Clamps, Chart .....	04-186	1069
Adjuster, Auto-Slack Repair Kits - Rear Axle .....	04-239	1071
Chamber, Air Brake, MGM 30 in. Service .....	04-248	1072
Valve, Safety .....	04-281	1073
Valve, Quick Release .....	04-295	1074
Dryer, Mounting and Hosing Air-Breakmaster Model 62 .....	04-317	1075
Dryer, Air-Breakmaster .....	04-318	1077
Brake Mounting, Rear .....	04-319	1078
Brake, Rear .....	04-377	1079
Gauge, Switch, Valve Chart .....	04-378	1081
<b>STEERING GEAR</b>		
Chart, Hoses and Fitting .....	05-001	1085
Column, Steering and Wheel Standard .....	05-007	1088
Gear, Steering and Drag Link Installation .....	05-025	1091
Pump, Power Steering Installation .....	05-026	1093
Pump, Power Steering 2050 psi Eaton 781 .....	05-031	1094
Link, Drag .....	05-043	1096
Gear, Steering, Ross HFB 64 .....	05-054	1097
<b>EXHAUST SYSTEM</b>		
Muffler, Tail Pipe, Exhaust and Mounting .....	07-029	1114
<b>ELECTRICAL SYSTEM</b>		
Terminals, Solderless - Standard .....	08-001	1117
Terminals, Solderless and Butt Splices - Standard.....	08-002	1118
Connector Bodies and Terminals - Standard .....	08-004	1119
Clips, Extensions and Straps - Standard .....	08-005	1121
Switches - Standard .....	08-007	1123
Wiring Harness, Battery Cables and Miscellaneous .....	08-009	1124

## VOLUME I

PARTS MANUALLIST OF ILLUSTRATIONS

<u>TITLE</u>	<u>IDENTIFICATION</u>	<u>PAGES(S)</u>
	<u>ILLUSTRATION</u>	
ELECTRICAL SYSTEM - CONTINUED		
Clamps, Extension Clips -		
Standard .....	08-012	1126
Light, Instrument Panel		
Product Graphic .....	08-018	1130
Panel, Instrument Cluster with		
Speedometer, Tachometer, Gauges		
and Bezels .....	08-029	1132
Flasher, Fuses and Circuit		
Breakers .....	08-031	1134
Harness, Turn Signal Light and		
Horn Hi-Note .....	08-033	1135
Harness, Automatic Transmission		
Wiring, Oil Temperature, Gauge,		
Switches, Back-Up Light,		
Neutral Safety .....	08-034	1138
Harness, Stop, Tail, Turn and		
Back-Up Light .....	08-036	1141
Light, Turn Signal and Parking.....	08-037	1144
Light, Head with Bezel .....	08-038	1145
Cable and Mounting, Tachometer.....	08-043	1146
Motor, Starting 12V Delco .....	08-052	1148
Harness, Engine Wiring for		
D9.OL Engine with 12V Start .....	08-053	1151
Light, Stop, Tail, Turn,		
Back-Up .....	08-054	1155
Light, License Plate at Frame.....	08-055	1156
Battery Cable and Mounting		
with Frame Mounted Batteries.....	08-057	1157
Light, Clearance, Roof .....	08-059	1161
Light, Dome .....	08-060	1162
Switch, Turn Signal .....	08-065	1163
Pulley, Belt, Alternator and		
Mounting .....	08-090	1164
Horn, Mounting .....	08-101	1165
Horn, Relay and Back-Up .....	08-106	1167
Harness, Headlights, Turn		
Signals, Horns .....	08-143	1168
FRONT SHEET METAL		
Hood and Grille .....	09-001	1170
Guard, Splash .....	09-005	1172
Step .....	09-007	1173
Fender Extension and Hood		
Bumper Installation .....	09-008	1175

## VOLUME I

PARTS MANUALLIST OF ILLUSTRATIONS

<u>TITLE</u>	<u>IDENTIFICATION</u>	<u>PAGES(S)</u>
	<u>ILLUSTRATION</u>	
FRONT SHEET METAL - CONTINUED		
Deflector, Stone .....	09-009	1177
Fender, Rubber Extension .....	09-013	1178
Cable, Hood .....	09-017	1179
SPEEDOMETER		
Product Graphic and Miscellaneous		
Graphics .....	10-002	1180
Cable, Speedometer Drive .....	10-003	1182
ENGINE		
Radiator, Collar and Stay Rod		
Mounting .....	12-017	1184
Crossmember, Engine Mounting		
Front - Standard .....	12-020	1186
Accelerator, Control Throttle.....	12-022	1188
Bracket, Engine Mounting Rear .....	12-048	1189
Cover, Oil Pan Insulator .....	12-051	1191
Tank, Deaeration Mounting .....	12-054	1192
Vent, Crankcase .....	12-073	1193
Injector, Fuel Nozzle and		
Nozzle Holder .....	12-095	1195
Pump, Fuel Injection .....	12-096	1196
Filter, Fuel Mounting .....	12-097	1198
Head, Cylinder and Related		
Parts .....	12-098	1199
Piping, Fuel Injector .....	12-099	1201
Pump, Fuel Injection Drive		
and Mounting .....	12-100	1203
Crankcase, and Related Parts .....	12-101	1204
Governor, Fuel Injection Pump .....	12-102	1206
Pump, Water Outlet and Thermostat.....	12-103	1209
Cooler, Oil Filter .....	12-104	1210
Pump, Oil .....	12-105	1212
Manifold, Intake and Crossover.....	12-107	1214
Fan, Clutch Drive Mounting.....	12-108	1215
Hosing, Radiator and Deaeration		
Tank Mounting .....	12-109	1216
Cleaner, Air Mounting and		
Piping .....	12-110	1218
Engine Shutdown .....	12-112	1220
Radiator, Mounting .....	12-115	1222
Piping, Air Compressor and		
Governor .....	12-119	1223
Pulley, Idler Belt and Mounting.....	12-204	1225

## VOLUME I

PARTS MANUALLIST OF ILLUSTRATIONS

<u>TITLE</u>	<u>IDENTIFICATION</u>	<u>PAGES(S)</u>
	<u>ILLUSTRATION</u>	
<b>TRANSMISSION</b>		
Transfer Case - Rockwell		
Standard .....	13-002	1226
Product Graphics, Shifting .....	13-003	1229
Valve, Air Shift Selector .....	13-035	1230
Control Automatic Transmission		
Mounting .....	13-049	1231
Control, Transfer Case Lever .....	13-059	1234
Valve, Transfer Case Control .....	13-062	1236
Control, Transfer Case and		
Mounting .....	13-065	1237
Adapter, Transmission to Engine.....	13-070	1238
Hosing, Oil Filter .....	13-093	1239
Filter, Oil .....	13-096	1240
Products Graphics, Shifting		
Diagram .....	13-104	1241
Gauge, Temperature Sender .....	13-109	1242
Valve, Chart .....	13-120	1246
Gauge, Oil Level .....	13-121	1247
AT545 Transmission Pictorial		
Index .....	-----	1251
Torque Converter and Oil Pump .....	Figure 1	1256
Forward Clutch and Turbine		
Shaft .....	Figure 2	1260
Fourth Clutch .....	Figure 3	1262
Third Clutch, Center Support		
and Second Clutch .....	Figure 4	1264
Gear Unit and Output Shaft .....	Figure 5	1266
First Clutch .....	Figure 6	1269
Transmission Case, Governor and		
Vacuum Modulator .....	Figure 7	1271
Control Valve Body Assembly .....	Figure 8	1274
011 Pan, Oil Filter, Governor		
and Speedometer Drive Gears .....	Figure 9	1279
Model AT545 Transmission		
Cross Section .....	F.O. 2	1282
<b>TRANSMISSION SUPPLEMENTAL PARTS</b>		
<b>INFORMATION</b>		
Transmission Vent Assembly .....	Figure 1	1284
Breather Shroud .....	Figure 2	1284
Front Support .....	Figure 1	1287
MY'79 Metric Converter .....	Figure 1	1289
Fourth Clutch Housing Assembly .....	Figure 1	1291

## VOLUME I

PARTS MANUALLIST OF ILLUSTRATIONS

<u>TITLE</u>	<u>IDENTIFICATION</u>	<u>PAGES(S)</u>
	<u>ILLUSTRATION</u>	
TRANSMISSION SUPPLEMENTAL PARTS INFORMATION - CONTINUED		
Tanged vs. Tangless Pistons .....	Figure 2	1291
Fourth Clutch Trim in Reverse .....	Figure 1	1294
Control Valve Body Rework Area .....	Figure 2	1295
Typical Control Valve Body		
Rework .....	Figure 3	1296
Control Valve Body and Separator		
Plate Reference .....	Figure 4	1297
Stator Shaft Bushing Replacement.....	Figure 1	1299
REAR AXLE		
Crossmember, Rear Spring and		
Mounting .....	14-003	1302
Axele, Rear, IH/Dana .....	14-007	1305
FUEL TANK		
Tank, Fuel 30 Gallon .....	15-007	1308
Pump, Submerged Fuel .....	15-008	1309
Tank, Fuel 30 Gallon with Step .....	15-012	1311
Chart, Clamp, Cable Strap,		
Union, Plug, Fitting, Grommet,		
Connector Nipple, Adapter, Tee,		
Elbow, Hose and Conduit .....	15-057	1313
CAB AND BODY		
Fittings, Clamps, Hoses, Conduit,		
Cable Straps, Shut-Off Valves,		
Button Plugs, Grommets and		
O-Rings .....	16-001	1316
Mat, Floor .....	16-004	1319
Grab, Handle .....	16-012	1321
Emblem, Model Designation .....	16-014	1322
Panel, Roof and Cowl .....	16-020	1323
Panel, Back and Underbody .....	16-021	1324
Panel, Underbody .....	16-022	1325
Panel, Side .....	16-023	1326
Panel, Roof, Inner .....	16-024	1327
Mounting, Cab, Low .....	16-026	1328
Door, Cab .....	16-027	1329
Trim, Interior and Window		
Installation .....	16-028	1332
Panel, Instrument .....	16-029	1334
Wiper, Electric, American Bosh.....	16-030	1336
Visor, Sun .....	16-031	1338

## VOLUME I

PARTS MANUALLIST OF ILLUSTRATIONS

<u>TITLE</u>	<u>IDENTIFICATION</u>	<u>PAGES(S)</u>
	<u>ILLUSTRATION</u>	
CAB AND BODY - CONTINUED		
Mirror, Rear View, Beach -		
Standard .....	16-032	1339
Plate, Master Cylinder		
Mounting .....	16-035	1340
Heater, Control .....	16-036	1341
Heater .....	16-037	1343
Seat, Driver and Passenger .....	16-045	1346
Belt, Seat .....	16-049	1348
Duct, Heater .....	16-084	1349
Washer, W/S.....	16-085	1350
WHEELS		
Rim, Tubeless Tires .....	17-002	1352
Wheels, Drum or Rotor .....	17-037	1353
PARTS MANUAL - ROCKWOOD TWIN AGENT		
1500/250 DRY CHEMICAL/AFFF UNIT		
Schematic .....	----	1361
Ball Type Check Valve .....	----	1363
Liquid Pressure Relief Valve .....	----	1364
M-Series Valve .....	----	1366
M-Series Parts List .....	----	1367
105DT Valve .....	----	1369
105DT Valve Parts List .....	----	1370
Nitrogen Regulator .....	----	1371
1½ Inch M-Series Ball Valve with Air Actuator .....	----	1372
Dual Agent Hand Line Foam/ Dry Powder .....	----	1376
Turret Remote Manual Twin Agent .....	----	1381
Remote Manual Turret .....	----	1383
Shaper - AFFF .....	----	1386
Dry Chemical Nozzle .....	----	1388
Hose Reel .....	----	1392
Twin Agent System Schematics .....	----	1393
PARTS MANUAL 130 AMP LEECE-NEVILLE		
ALTERNATOR		
Schematic .....	----	1398
PARTS MANUAL DYNAMOTE INVERTER		
Schematic .....	----	1404
Wiring Diagram .....	----	1405
Unit - Schematic .....	----	1406


## VOLUME I

PARTS MANUALLIST OF ILLUSTRATIONS

<u>TITLE</u>	<u>IDENTIFICATION</u>	<u>PAGES(S)</u>
	<u>ILLUSTRATION</u>	
PARTS MANUAL HURST JAWS OF LIFE		
Rescue Tool .....	-----	1408
Accessories .....	-----	1409
PARTS MANUAL HURST POWER UNIT		
4 Cycle Unit .....	-----	1412
PARTS MANUAL SIGNAL MODEL PA300*		
ELECTRONIC SIREN		
Chassis Removal .....	Figure 6-1	1417
Internal View .....	Figure 6-2	1417
Component Location Diagram .....	Figure 6-3	1418
Schematic Diagram .....	Figure 6-4	1419
MISCELLANEOUS EQUIPMENT .....	-----	1421
FIRE BODY .....	Figure 1	1423
BRUSH GUARD .....	Figure 2	1425
ELECTRICAL SCHEMATICS .....	Figure 3	1427
SKID UNIT AIR CHARGING SYSTEM .....	Figure 4	1439
LAMP, QUARTZ WITH TELESCOPING POLE.....	Figure 5	1441
SPOTLIGHT .....	Figure 6	1442
LAMP, QUARTZ, 500 WATT .....	Figure 7	1444
HYDRAULIC RESCUE KIT, 10 TON .....	Figure 8	1445

**MT145 GROUP INDEX**  
**MT-145**

**PARTS CATALOG**  
**S - SERIES MODELS**

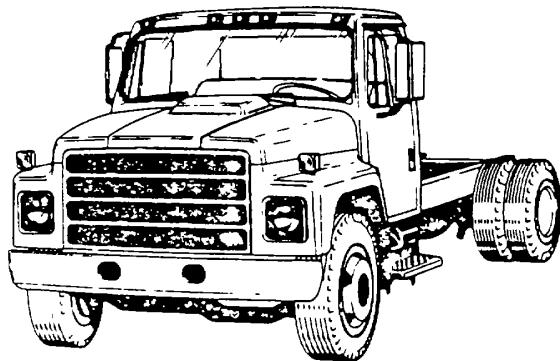

**INTERNATIONAL**  
**TRUCKS**

<b>GROUP INDEX</b>		
<b>INDEX</b>	<b>DESCRIPTION INDEX</b>	
<b>FRAME</b>		1026
<b>FRONT AXLE</b>	/ENGINE WARNING /LIGHT INSTALLATION	1031 1041
<b>CHASSIS SPRINGS</b>		1042
<b>BRAKES</b>		1043
<b>STEERING GEAR</b>		1085
<b>PROPELLER SHAFTS</b>		1099
<b>EXHAUST</b>		1114
<b>ELECTRICAL</b>	STANDARD HORMS STANDARD WIRING COMPONENTS	1117
<b>FRONT SHEET METAL</b>		1170
<b>SPEEDOMETER</b>		1180
<b>ENGINE</b>		1184
<b>TRANSMISSION</b>		1226
<b>REAR AXLE</b>		1302
<b>FUEL TANKS</b>		1308
<b>CAB &amp; BODY</b>		1316
<b>WHEELS</b>		1352



## GENERAL INFORMATION

### A BRIEF GUIDE TO USING THIS MASTER PARTS CATALOG

	Page
I. VEHICLE AND ITS SPECIFICATIONS .....	2-6
A. Where to Locate Specific Information .....	2
o Line Setting Ticket (LST) .....	2
- Loose Copy in Vehicle	
- Copy Sent to Selling Location	
- Copy Sent to Selling Location Parts Department	
- Copy Available through IH Printing and Distribution Service - Westmont	
o Service Unit Record - A record of Vehicle Identification and Specifications for all IH trucks built each year. Available on microfiche only. ....	3
B. What Specific information is Available on Line Set Ticket .....	4-6
o Vehicle Model Number .....	4
o Vehicle Identification Number .....	4
o Component Codes or Unit/Division .....	5
o Chassis Build Data .....	6
C. How Does This Relate to the Catalog .....	
II. IDENTIFYING SPECIFICATIONS WITH OR WITHOUT LINE SET TICKET .....	7-14
A. Determine the Appropriate Group With or Without Line Set Ticket.....	7-9
o Alphabetical Parts Index Guide .....	7
o Unit/Division Identification .....	8
o Group Indexes .....	9
- Alphabetical Figure Title Index	
- Vendor Model Index	
- Unit/Division Index	
B. Identify Group Without Line Set Ticket .....	10-14
o Individual Group Information .....	10-14
o Supplier When Applicable .....	14
o Supplier Model and Serial Number .....	14
o Numerical Parts Index .....	14
o Alphabetical Parts List .....	14



## GENERAL INFORMATION

---

	Page
III. General.....	14-16
A. Identifying Parts With a Figure .....	15-16
o Illustration and Parts List .....	15
o Attaching Parts .....	15
o Kits .....	15
o Bulk Material .....	15
o Build Date for Design Changes .....	15
o Special Equipment .....	15
o Vendor Part Number .....	15
o Ordering by Description .....	16
B. Support Publications	
o Index of Part Numbers .....	16
o Vendors Cross Reference Parts List .....	16
o Supersedence Parts List .....	16
o Accessories for International Trucks .....	16
o Fast Moving Truck Parts .....	16
o Expandable Catalog Binder .....	16
C. List of Abbreviations .....	17-19
D. List of General Descriptions and Group Location .....	20-24

NOTE: Current catalogs are generated from production bills of material. If a part or group of parts (unit or division) has been revised and/or added to production within 60 days of publication, this information will be included in the next catalog revision. If critical items or service information is omitted due to the time lapse, we often provide special reports through timely releases of Parts Information Letters (PIL) and Advanced Information to District Servicemen (AIDS).

## I. VEHICLE AND ITS SPECIFICATIONS

### A. WHERE TO LOCATE SPECIFIC INFORMATION

#### o LINE SETTING TICKET

For trucks built prior to 1973, the Line Setting Ticket (LST) must be used to determine needed information. The LST is the document required to determine which components are ordered and used to build a truck. Copies are made available in several places.



## GENERAL INFORMATION

---

- Loose copy in vehicle -  
Every vehicle leaves the plant with a full size LST copy included in the papers in the vehicle. This is very important and the customer should be encouraged to use it for parts ordering and retain it in the vehicle.
- Copy sent to selling location -  
A copy is printed on the back of the Customer Service Record Card-BH-894-sent to the dealer selling the truck.
- Copy sent to Parts Department -  
A copy is sent to the selling locations Parts Department for their records.
- Copy Available through IH Printing and Distribution Service-  
Copies of LST's can be purchased through IH Printing and Distribution Service-Westmont.

### o SERVICE UNIT RECORD

To determine the Model Number, Vehicle Identification Number and Component Codes for any IH truck manufactured in 1973 or later, the Service Unit Record should be used. This record covers every truck manufactured in each model year and is available in microfiche. You can order your own copy of this record. Availability through Westmont order Form. The example shows all information available and the layout of service unit records by chassis serial number.

Example:

CGA24869VIN24947CGA24869, NAME OF COF-4070A, WB 152, ENG 538729  
NTC-350 12435, TRANS RTO-12513 13468, RA 4.10 R/S SQHD 14333,  
SUSP DAY 4 SPRG 14625, FA IH 12000# WIDE TRD 02139, STG M49  
05044, TANK DUAL SIDE AL 15532, TIRES 11.00X20

01078. 1406	270821. 7198	12704. 1413	16593. 1404
01616. 1402	07031. 1405	12762. 1401	16626. 1401
02139. 1400	08000. 1407	12783. 1401	16749. 1401
03110. 1444	08133. 1403	SE13000. 1437	16956. 1401
03503. 1400	08535. 1402	SE13468. 1401	16961. 1401
04311. 1408	08617. 1420	SE13860. 1401	17040. 1437
04595. 1405	08670. 1401	14333. 1423	170415. 0002
04642. 1401	09000. 1410	14625. 1401	19040. 1492
04809. 1411	10000. 1440	14850. 1411	190415. 0008
05272. 1407	10589. 0001	15532. 1404	614015. 0231
06100. 1422	SE11249. 1407	16000. 1411	29274. 1411
260722. 1180	12433. 1401	16155. 1408	