

**TECHNICAL MANUAL**  
**OPERATOR'S, ORGANIZATIONAL, DIRECT SUPPORT**  
**AND GENERAL SUPPORT MAINTENANCE MANUAL**  
**INCLUDING REPAIR PARTS AND SPECIAL TOOLS LIST**

**FOR**

**TRUCK, FIREFIGHTING DRY CHEMICAL AFF**  
**NSN 4210-00-484-5729**

**VOLUME III**

---

**HEADQUARTERS, DEPARTMENT OF THE ARMY**

**14 APRIL 1986**

TECHNICAL MANUAL  
No. 5-4210-222-14&P-3

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 14 April 1986

Operator's, Organizational, Direct Support,  
and General Support Maintenance Manual  
(Including Repair Parts and Special Tools List)

for

TRUCK, FIREFIGHTING, DRY CHEMICAL AFFF  
NSN 4210-00-484-5729

This manual consists of 3 volumes.

Each volume has its own table of contents. The index found in Volume I pertains only to Volume I.

VOLUME I is the Illustrated Parts Breakdown for the entire truck.

VOLUME II contains the Operation, Maintenance, and Repair Manual for:  
ENGINE, TRANSMISSION, CHASSIS, CAB and RELATED ITEMS

VOLUME III contains the Operation, Maintenance and Repair Manual for:  
TWIN AGENT UNIT, INVERTER, HYDRAULIC RESCUE TOOL (Jaws of Life),  
POWER UNIT, RESCUE SAW 10 TON HYDRAULIC RESCUE KIT,  
ELECTRONIC SIREN

NOTE: Throughout these manuals, information has been deleted which is not pertinent.

#### **REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS**

You can help improve this manual. If you find any mistake or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, U.S. Army Troop Support Command, ATTN: AMSTR-MCTS, 4300 Goodfellow Boulevard, St. Louis, MO 63120-1798. A reply will be furnished directly to you.

#### **REPORTING EQUIPMENT IMPROVEMENT RECOMIENDATIONS (EIR)**

If your fire truck needs improvement, let us know. Send us an EIR. You, the user, are the only one who can tell us what you don't like about your equipment. Let us know why you don't like the design. Put it on an SF 368 (Quality Deficiency Report). Mail it to us at Commander, U.S. Army Troop Support Command, ATTN: AMSTR-QX, 4300 Goodfellow Boulevard, St. Louis, MO 63120-1798. A reply will be furnished to you.

**OPERATION, MAINTENANCE AND REPAIR MANUAL**

VOLUME III

**TABLE OF CONTENTS**

<u>SECTION</u>	<u>PAGE</u>
<u>ROCKWOOD INSTRUCTION AND SERVICE MANUAL</u>	
<u>TWIN AGENT 1500/250 DRY CHEMICAL/AFFF—UNIT</u> .....	4001
SECTION I TWIN AGENT UNIT (DRY CHEMICAL AND AFFF) .....	4002
Stand-By Mode .....	4003
Operation Instructions, Hose Reel.....	4005
Operation Instructions, Turret.....	4005
System Purging Operation, Dry Chemical.....	4006
System Purging Operation, AFFF .....	4006
Bleeding Operation, Dry Chemical .....	4008
Bleeding Operation, AFFF .....	4008
Filling Instructions, Dry Chemical .....	4009
Filling Instructions, AFFF .....	4009
Parts List and Schematic.....	4010
Dry Chemical Unit.....	4011
Scope .....	4011
Introduction .....	4011
Principle of Operation .....	4011
System Components.....	4012
Maintenance .....	4015
Troubleshooting .....	4015
Spare Parts .....	4016
AFFF Unit .....	4017
Scope .....	4017
Introduction .....	4017
Principle of Operation .....	4017
System Components.....	4017
Maintenance .....	4020
Troubleshooting .....	4020
Spare Parts .....	4021
SECTION II DATA SHEETS FOR COMPONENTS SUPPLIED .....	4023
1+ Inch M Series Ball Valve with Air Actuator .....	4023
Hannay Hose Reel.....	4029
SECTION III DISCHARGE DEVICES .....	4034
Twin Agent Handline Index.....	4036
Scope.....	4037
Nozzle Data .....	4037
Description.....	4037
Operating Instructions .....	4038
Maintenance .....	4038
Spare Parts.....	4038

# OPERATION, MAINTENANCE AND REPAIR MANUAL

## VOLUME III

### TABLE OF CONTENTS

<u>SECTION</u>	<u>PAGE</u>
Remote Manual Twin Agent Turret Foam/ Dry Powder Index .....	4043
Scope .....	4044
Introduction .....	4044
Figures .....	4044
Operating Instructions .....	4045
Maintenance .....	4045
Spare Parts.....	4046
 DYNAMOTE "A-30" INVERTER OPERATING, INSTALLATION AND SERVICE MANUAL .....	 4062
 SECTION I DYNAMOTE LIMITED WARRANTY .....	 4063
 SECTION II GENERAL INFORMATION .....	 4065
Introduction and Principle of Operation .....	4065
Specifications .....	4066
Product Configuration.....	4066
 SECTION III INSTALLATION INSTRUCTIONS.....	 4068
Instructions .....	4068
Route Harness to Alternator .....	4069
Install Automatic Throttle .....	4071
Attach Harness to Alternator .....	4071
Checkout of Harness Installation.....	4074
Checkout Inverter Operation .....	4082
 SECTION IV SERVICE AND TROUBLESHOOTING INSTRUCTIONS .....	 4084
General Information.....	4084
Inverter Removal from Vehicle for Servicing .....	4084
Troubleshooting Guide .....	4085
Inverter Parts List .....	4097

**OPERATION, MAINTENANCE AND REPAIR MANUAL**

VOLUME III

**TABLE OF CONTENTS**

<u>SECTION</u>	<u>PAGE</u>
4 CYCLE HURST POWER UNIT INSTRUCTION MANUAL .....	4113
Parts List .....	4115
Assembling Instructions.....	4116
Operating Instructions .....	4120
Troubleshooting Instructions .....	4126
HURST JAWS OF LIFE MODEL 32b INSTRUCTION MANUAL.....	4130
Parts List .....	4132
Assembling Instructions.....	4133
Troubleshooting Instructions .....	4137
Maintenance .....	4137
Operating Instructions .....	4139
Cutting Instructions.....	4143
PARTNER K-1200 RESCUE SAW SERVICE MANUAL.....	4148
Safety Precautions.....	4149
Fitting Cutter Arm .....	4151
Turning Cutter Arm .....	4152
Replacing Belt.....	4153
Fuel Mixture .....	4153
Fuel Tank.....	4153
Controls .....	4153
Starter Unit .....	4154
Air Filter .....	4154
Carburetor .....	4154
Maintenance .....	4155
Technical Data.....	4156
PARTNER K-1200 RESCUE SAW OPERATOR'S MANUAL.....	4157
Table of Contents .....	4158
Forward .....	4159
Parts Description .....	4161
Pre-Checkout.....	4163
Cutter Wheels.....	4166
Diamond Blades .....	4167
Carbide-Tipped Blades .....	4169
Operation.....	4170
Safety Regulations.....	4176
10 TON HYDRAULIC PORTO-POWER RESCUE KIT OPERATING INSTRUCTIONS .....	4178
Troubleshooting Chart Solution.....	4180
Troubleshooting Chart.....	4180

**OPERATION, MAINTENANCE AND REPAIR MANUAL**

VOLUME III

**TABLE OF CONTENTS**

<u>SECTION</u>	<u>PAGE</u>
10 TON HYDRAULIC PORTO-POWER RESCUE KIT OPERATING INSTRUCTIONS - Continued	
Function .....	4181
Operating Instructions .....	4181
Maintenance .....	4182
Inspection .....	4182
SIGNAL MODEL PA300* ELECTRONIC SIREN INSTALLATION AND SERVICE INSTRUCTIONS .....	4186
Section I     General Description.....	4187
Section II    Specifications .....	4188
Section III   Installation .....	4189
Section IV    Operation.....	4193
Section V     Circuit Description .....	4195
Section VI    Service and Maintenance .....	4198

OPERATION, MAINTENANCE AND REPAIR MANUAL

VOLUME III

LIST OF ILLUSTRATIONS

<u>TITLE</u>	<u>IDENTIFICATION/ ILLUSTRATION</u>	<u>PAGE(S)</u>
<u>ROCKWOOD INSTRUCTION AND SERVICE MANUAL</u>		
<u>TWIN AGENT 1500/250 DRY CHEMICAL/ AFFF UNIT</u>		
Rockwood Twin Agent RTA 1500/250 System Schematic.....	510-2120-1	4010
1" M Series Ball Valve with Air Actuator.....	C-509-0663	4023
Hannay Hose Reel .....	ISO-72	4029
Installation Instructions.....	6185-1	4032
Wiring Diagram (Hose Reel) .....	6185-1	4033
Dual Agent Handline Foam/Dry Powder.....	Figure I	4039
Turret Remote Manual Twin Agent .....	Figure I	4047
Turret Remote Manual Twin Agent Assembly .....	Figure 1A	4049
Remote Manual Turret .....	Figure II	4051
Shaper - AFFF.....	Figure III	4054
Dry Chemical Nozzle.....	Figure IV	4056
Twin Agent 1500/250 Dual Agent System.....	510-2120	4058 to 4061
 <u>INVERTER, DYNAMOTE A-30</u>		
Inverter Off .....	2.0.2A	4065
Inverter On .....	2.0.2B	4065
A30 Dimensions .....	2.2.5B	4067
Mounting Configuration .....	2.2.6A	4067
Belt Alignment .....	3.3.2A and 3.3.2B	4070
High Amperage By-Pass Installation.....	3.5.1A	4071
Diagram of Leece-Neville 4000AA Series Alternator.....	3.5.4C	4073
SCR Checkout Procedure .....	----	4091
Diode Checkout Procedure and Readings .....	4.3.10A	4095
A30-70D Unit Wire Diagrams .....	2075	4101
A30-70D Unit Schematic .....	2075-1	4102
 <u>HURST 4 CYCLE POWER UNIT</u>		
4 Cycle Schematic.....	----	4114
 <u>HURST JAWS OF LIFE</u>		
Rescue Tool Schematic .....	----	4131
Accessories .....	----	4132

OPERATION, MAINTENANCE AND REPAIR MANUAL

VOLUME III

LIST OF ILLUSTRATIONS

<u>TITLE</u>	<u>IDENTIFICATION/ ILLUSTRATION</u>	<u>PAGE(S)</u>
<u>PARTNER K-1200 RESCUE SAW</u>		
Rescue Saw Schematic .....	----	4150, 4160
Fitting the Cutter Arm .....	----	4151
Turning the Cutter Arm.....	----	4152
Tools .....	----	4155
Safety Regulations .....	----	4176
<u>10 TON HYDRAULIC PORTO-POWER RESCUE KIT</u>		
Spongy Effect .....	Figure 1	4180
Ram Won't Retract .....	Figure 2	4180
Clamps .....	Figure 3	4182
<u>SIGNAL MODEL PA300* ELECTRONIC SIREN</u>		
Model PA300 Electronic Siren .....	Figure 1-1	4187
Rear View of PA300 .....	Figure 3-2	4190
Control Cable Wiring Diagram .....	Figure 3-3	4190
Horn Ring Connections .....	Figure 3-4	4190
Press and Hold Modification .....	Figure 3-5	4192
Relative PA Loudness Adjustment.....	Figure 3-6	4192
Model PA300 Front View .....	Figure 4-1	4193
Functional Block Diagram .....	Figure 5-1	4195
Chassis Removed .....	Figure 6-1	4199
Internal View .....	Figure 6-2	4199
Component Location Diagram.....	Figure 6-3	4200
Schematic Diagram .....	Figure 6-4	4201



OPERATION, MAINTENANCE AND REPAIR MANUAL

VOLUME III

LIST OF TABLES

<u>TITLE</u>	<u>IDENTIFICATION/ ILLUSTRATION</u>	<u>PAGE(S)</u>
ROCKWOOD TWIN AGENT 1500/250 DRY CHEMICAL/AFFF UNIT		
Pressure vs Temperature Chart .....	Table 1	4022
DYNAMOTE INVERTER		
Harness and Alternator .....	3.6.2A	4081

ROCKWOOD TWIN AGENT  
1500/250 DRY CHEMICAL/AFFF UNIT

ROCKWOOD INSTRUCTIONS  
LOG NO. RIM 1554

KOVATCH CORPORATION  
500-600 WEST CATAWISSA ST.  
NESQUEHONING, PA 18240  
SALES ORDER C100360

MARCH, 1985

REVISED:  
JULY, 1985

**4001**

ROCKWOOD SYSTEMS CORPORATION  
640 East Main Street  
Lancaster, Texas 75146