

TECHNICAL MANUAL

**UNIT AND DIRECT SUPPORT
MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LIST**

KITCHEN, FIELD, TRAILER MOUNTED

MKT-75	NSN 7360-00-138-7782	EIC: YBC
MKT-75A	NSN 7360-01-092-0470	EIC: YBL
MKT-82	NSN 7360-01-155-6020	EIC: YBM
MKT-85	NSN 7360-01-214-1176	EIC: YBT
MKT-85S	NSN 7630-01-246-4646	(AF ONLY)
MKT-90	NSN 7360-01-313-2238	EIC: YCF
MKT-95	NSN 7360-01-417-4635	EIC: YCG

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

*** This manual supersedes TM 01-7360-206-23P, dated 5 SEPTEMBER 1988, including all changes.**

**HEADQUARTERS, DEPARTMENT OF THE ARMY
AND THE AIR FORCE
17 MARCH 1992**

TECHNICAL MANUAL
NO. 10-7360-206-23P

HEADQUARTERS, DEPARTMENTS
OF THE ARMY AND AIR FORCE
WASHINGTON, D.C., 17 MARCH 1992

UNIT AND DIRECT SUPPORT
MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LIST
KITCHEN, FIELD, TRAILER MOUNTED

MKT-75	NSN 7360-00-138-7782	EIC: YBC
MKT-75A	NSN 7360-01-092-047	EIC: VYBL
MKT-82	NSN 7360-01-155-1920	C: YBM
MKT-85	NSN 7360-01-214-1176	EIC: YBT
MKT-85S	NSN 7360-01-246-4646	(AF ONLY)
MKT-90	NSN 7360-01-313-2238	SC: YCF
MKT-95	NSN 7360-01-417-4635	C: YCG

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes, or if you know of a way to improve these procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. You may also submit your recommended changes by E-mail directly to <mpmt%avma28(st-louis-emh7.army.mil)>. A reply will be furnished directly to you. Instructions for sending an electronic 2028 may be found at the back of this manual immediately preceding the hard copy 2028.

Air Force -Mail AFTO Form 22 directly to: Commander, Warner Robbins Air Logistics Center, Attn: TILTA, 420 Second St., Robbins Air Force Base, GA 31098-1640 in accordance with TO-00-5-1.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited
CURRENT AS OF 15 JUNE 1996

TABLE OF CONTENTS

		Page	Figure
Section I	INTRODUCTION		
Section II	REPAIR PARTS LIST		
Group 01	Roof Assembly.....	1-1	1
	Roof Vent Assembly	2-1	2
	Skylight Operator	2A-1	2A
Group 02	Roof Lifting Jack Assembly-P/N 5-13-4600.....	3-1	3
Group 03	Roof Canopy and Rain Trough.....	4-1	4
	End Travel Covers.....	5-1	5
	Side Travel Covers	6-1	6
	Screens.....	7-1	7
	Cover Assemblies.....	8-1	8

*This manual Supersedes TM 10-7360-206-23P/TO 35E4-172-5-4, 5 September 1988, Including all changes

TM 10-7360-206-23P
T.O. 35E4-172-5-4

		Page	Figure
Group 04	Splash Guard, Funnel and Catcher	9-1	9
	Cooking Cabinet Assembly	10-1	10
	Movable Cabinet Assembly	11-1	11
	Oven Cabinet Assembly	12-1	12
	Drop Leaf Table	13-1	13
	Storage Cabinet.....	14-1	14
	Storage Cabinet Frame	15-1	15
	Condiment Cabinet Assembly	16-1	16
	Ice Chest Assembly.....	17-1	17
Group 05	Ladder Assembly and Hand Rails	18-1	18
Group 06	Tie Down Strap Assemblies	19-1	19
Group 07	Platform Assembly.....	20-1	20
	Shock Absorber	21-1	21
	Leveling Jack Assembly Attaching Hardware.....	22-1	22
	Leveling Jack Assembly-P/N 5-B4611.....	23-1	23
	Ramp Assembly.....	24-1	24
Group 08	Tent Pole Assembly.....	25-1	25
Group 09	Corner Post and Locking Device	26-1	26
Group 11	Dispenser, Liquid, Insulated	27-1	27
Group 12	Tray-Pack Lifters and Food Warmer Adapter.....	28-1	28
Group 13	Opener, Can, Mounted	29-1	29
Section III	SPECIAL TOOLS UST (NOT APPUCABLE)		
Section IV	CROSS REFERENCE INDEXES	I-1	
	National Stock Number Index.....	I-1	
	Part Number Index	1-4	
	Figure and Item Number Index.....	1-15	

**UNIT AND DIRECT SUPPORT
MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST**

SECTION I. INTRODUCTION

1. **SCOPE.** This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit and direct support maintenance of the Kitchen, Field Trailer Mounted. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. **GENERAL.** In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown on the associated illustration(s)/figure(s).


b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. Cross-references Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item number in alphanumeric sequence and cross references NSN, CAGEC and part number.

3. **EXPLANATION OF COLUMNS (SECTIONS II AND III).**

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

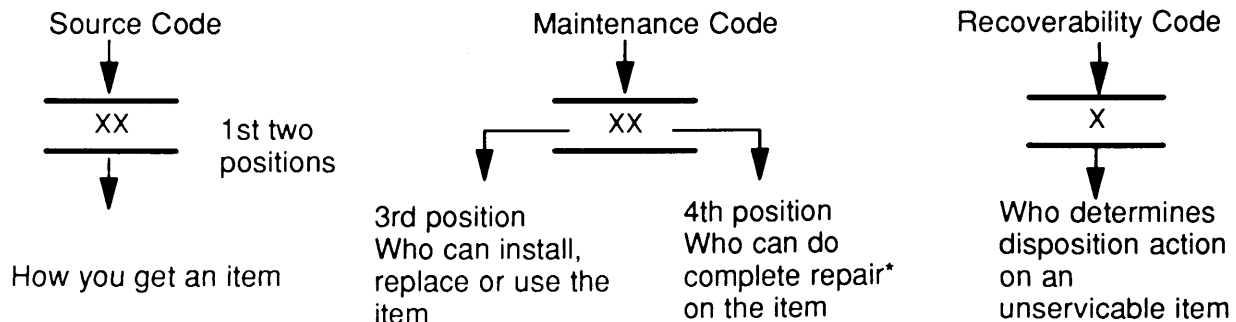

* Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

Code	Explanation
PA PB PC** PD PE PF PG	<p>Stocked items; use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3rd position of the SMR code.</p> <p>**NOTE: Items coded PC are subject to deterioration.</p>
KD KF KB	<p>Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3rd position of the SMR code. The complete kit must be requisitioned and applied.</p>
MO — (Made at org AVUM Level) MF — (Made at DS/AVUM Level) MH — (Made at GS Level) ML — (Made at Specialized Repair Activity (SRA)) MD — (Made at Depot)	<p>Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION and USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in this RPSTL. If the item is authorized to you by the 3rd position code of the SMR code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.</p>
AO — (Assembled by org/AVUM Level) AF — (Assembled by DS/AVIM Level) AH — (Assembled by GS Category) AL — (Assembled by SRA) AD — (Assembled by Depot)	<p>Items with these codes are not to be requested/requisitioned individually. The parts that make up the assembled item must be requisitioned or fabricated and assembled at the level of maintenance indicated by the source code. If the 3rd position code of the SMR code authorizes you to replace the item, but the source code indicates the items are assembled at a higher level, order the item from the higher level of maintenance.</p>
XA —	Do not requisition "XA" –coded item. Order its next higher assembly. (Also, refer to the NOTE below.)
XB —	If an "XB" item is not available from salvage, order it using the CAGEC and part number given.
XC —	Installation drawing, diagram, instruction sheet, field service drawing, that is identified by Reciprocating Compressor manufacturer's part number.
XD —	Item is not stocked. Order an "XD" –coded item through normal supply channels using the CAGEC and part number given if no NSN is available.