

TM 5-6115-376-23P

TECHNICAL MANUAL

ORGANIZATIONAL AND DIRECT SUPPORT MAINTENANCE REPAIR
PARTS AND SPECIAL TOOLS LIST

GENERATOR SET, DIESEL ENGINE, TRAILER MOUNTED:

PU-407/M, FSN 6115-702-3347,

PU-699/M, FSN 6115-132-0488

GENERATOR SET, DIESEL ENGINE, TRUCK MOUNTED:

PU-408/M, FSN 6115-706-0469,

PU-700/M, FSN 6115-125-7876

TECHNICAL MANUAL

No. 5-6115-376-23P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D. C. 22 December 1970

ORGANIZATIONAL AND DIRECT SUPPORT MAINTENANCE REPAIR
PARTS AND SPECIAL LIST

GENERATOR SET, DIESEL ENGINE, TRAILER MOUNTED:

PU-407/M, FSN 6115-702-3347,

PU-699/M, FSN 6115-132-0488

GENERATOR SET, DIESEL ENGINE, TRUCK MOUNTED:

PU-408/M, FSN 6115-706-0469,

PU-700/M, FSN 6115-125-78756

Current as of 30 November 1970

	Listing Page	Illus Figure
SECTION I. INTRODUCTION	iii	
II. PRESCRIBED LOAD ALLOWANCE	1	
III. REPAIR PARTS FOR ORGANIZATIONAL MAINTENANCE	2	
Group 01. Generators	2	1
Generator set, PU-407/M and 408/M	--	2
Generator set, PU-699/M and 700/M	--	3
02. Trailers	2	4
Trailer, M200A1, PU407/M and 699/M	--	5
03. Skid Platform	3	6
Skid platform, PU-408/M and 700/M	--	7
Skid platform retainer	--	8
Skid platform towing bracket and eyebolt	--	9
05. Brackets, Braces, Mounting Bases, Frames, and Accessory Boxes	4	10
Sledge hammer bracket assembly	--	11
Fire extinguisher bracket	--	12
Synchronizer assembly mounting frame and brackets	--	13
Gasoline cans, brackets, and accessory box	--	14
Accessory box, frame, base, and distribution box base	--	15
Cable reel mounting base and electrical connector bracket	--	16
Switch box mounting hardware	--	17
Distribution box base, brackets, and braces (PU-407/M and PU-699/M)	--	18
Reel holddown and cable	--	19
Accessory box, ladder, sling spreader, and ground rod clamps	--	20
Portable distribution box frame and bases	--	21
Accessory box brackets and turnbuckles	--	22
Distribution box base, brackets, and brace (PU-408/M and PU-700/M)	--	23
06. Distribution Boxes	14	24
Distribution box assembly	--	25
Distribution box power panel, brackets, and terminal board	--	26
Distribution box wiring harness, transformers and lug terminals	--	27
Portable distribution box	--	28
Portable distribution box electrical leads	--	29
07. Synchronizer Assembly	17	
Electrical synchronizer assembly	--	
Electrical synchronizer assembly wiring harness, connectors, and relays	--	
08. Switch box	18	
Switch box assembly	--	
Switch box assembly bus bars, insulator bars, and electrical leads	--	

	Listing Page	Illus Figure
SECTION IV. SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT FOR ORGANIZATIONAL MAINTENANCE (Not Applicable)		
V. REPAIR PARTS FOR DS MAINTENANCE	21	
Group 01. Generators	21	
Generator set, PU-407/M and 408/M	--	1
Generator set, PU-699/M and 700/M	--	2
02. Trailers	22	
Trailer, M200A1, PU-407/M and 699/M.....	--	3
03. Skid Platform	23	
Skid platform, PU-408/M and 700/M	--	4
Skid platform retainer	--	5
Skid platform towing bracket and eyebolt	--	6
04. Trucks	26	
05. Brackets, Braces, Mounting Bases, Frames, and Accessory Boxes	26	
Sledge hammer bracket assembly	--	7
Fire extinguisher bracket	--	8
Synchronizer assembly mounting frame and brackets	--	9
Gasoline cans, brackets, and accessory box	--	10
Accessory box, frame, base, and distribution box base	--	11
Cable reel mounting base and electrical connector bracket	--	12
Switch box mounting hardware	--	13
Distribution box base, brackets, and brace (PU-407/M and PU-699/M)	--	14
Reel holddown and cable	--	15
Accessory box, ladder, sling spreader, and ground rod clamps	--	16
Portable distribution box frame and bases	--	17
Accessory box brackets and turnbuckles	--	18
Distribution box base, brackets, and brace (PU-408/M and PU-700/M)	--	19
06. Distribution Boxes	36	
Distribution box assembly	--	20
Distribution box power panel, brackets, and terminal board	--	21
Distribution box wiring harness, transformers, and lug terminals	--	22
Distribution box assembly electrical wire termination chart	--	26
Portable distribution box ..	--	24
Portable distribution box electrical leads	--	25
07. Synchronizer Assembly	44	
Electrical synchronizer assembly	--	26
Electrical assembly wiring harness, connectors, and relays	--	27
Electrical synchronizer assembly, electrical leads termination chart	--	28
08. Switch box	48	
Switch box assembly	--	29
Switch box assembly bus bars, insulator bars, and electrical leads	--	30
SECTION VI. SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT FOR DS MAINTENANCE (Not applicable)		
VII. FEDERAL STOCK NUMBER AND REFERENCE NUMBER INDEX	84	

SECTION 1

INTRODUCTION

1. Scope

This manual lists repair parts, special tools, test and support equipment required for the performance of organizational and direct support maintenance of the generator sets.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Prescribed Load Allowance (PLA)-Section II. A composite listing of repair parts, special tools, test and support equipment having quantitative allowance for initial stockage at the organizational level.

b. Repair Parts -Section III. A list of repair parts authorized for the performance of maintenance at the organizational level in figure and item number sequence.

c. Special Tools, Test and Support Equipment-Section IV. (Not applicable).

d. Repair Parts-Section V. A list of repair parts authorized for the performance of maintenance at the direct support level in figure and item number sequence.

e. Special Tools, Test and Support Equipment-Section VI. (Not applicable).

f. Federal Stock Number and Reference Number Index-Section VII. A list of Federal stock numbers in ascending numerical sequence, followed by a list of reference numbers appearing in all of the listing in alpha-numeric sequence, cross-referenced to the illustration figure number and item number.

NOTE

Items not illustrated are cross-referenced to group number.

3. Explanation of Columns

The following provides an explanation of columns in the tabular lists in section II through VI.

a. Source, Maintenance, and Recoverability Codes (SMR).

NOTE

Common hardware items known to be readily

available in Army supply channels are assigned Maintenance Codes only. Source codes, Recoverability codes, and Maintenance Allowances are not assigned this category.

(1) Source code indicates the selection status and source for the listed item. Source codes used are:

Code	Explanation
P	Repair parts which are stocked in or supplied from the GSA/DSA, or Army supply system and authorized for use at indicated maintenance categories.
P2	Repair parts which are procured and stocked for insurance purposes because the combat or military essentiality of the end item dictates that a minimum quantity be available in the supply system.
M	Repair parts, special tools and test equipment which are not procured or stocked as such, in the supply system, but are to be manufactured at indicated maintenance levels.
A	Assemblies which are not procured or stocked as such, but are made up of two or more units. Such component units carry individual stock numbers and descriptions, are procured and stocked separately and can be assembled to form the required assembly at indicated maintenance categories.
X	Parts and assemblies which are not procured or stocked because the failure rate is normally below that of the applicable end item or component. The failure of such part or assembly should result in retirement of the end item from the supply system.
X1	Repair parts which are not procured or stocked. The requirement for such items will be filled by the next higher assembly or component.
X2	Repair parts, special tools and test equipment which are not stocked and have no foreseen mortality. The indicated maintenance category requiring such repair parts will attempt to obtain them through cannibalization or salvage. The item may be requisitioned with exception date, from the end item manager, for immediate use.
G	Major assemblies that are procured with PEMA funds for initial issue only as exchange assemblies at DSU and GSU level. These assemblies will not be stocked above GS and DS level or returned to depot supply level.