

TECHNICAL MANUAL

**DIRECT SUPPORT AND GENERAL SUPPORT
MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR
PARTS AND SPECIAL TOOLS)
FOR**

**CENTRAL OFFICE, TELEPHONE,
AUTOMATIC**

AN/TTC-41(V)1 (NSN 5805-01-028-8393),

AN/TTC-41(V)2 (NSN 5805-01-028-8394),

AN/TTC-41(V)3 (NSN 5805-01-028-8392),

AND

AN/TTC-41(V)4 (NSN 5805-01-044-8869)

TECHNICAL MANUAL
NO. 11-5805-693-34P



HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington DC, 10 December 1981

**DIRECT SUPPORT AND GENERAL SUPPORT
MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR
PARTS AND SPECIAL TOOLS)
FOR
CENTRAL OFFICE, TELEPHONE, AUTOMATIC
AN/TTC-41(V)1 (NSN 5805-01-028-8393),
AN/TTC-41(V)2 (NSN 5805-01-028-8394),
AN/TTC-41(V)3 (NSN 5805-01-028-8392),
AND
AN/TTC-41(V)4 (NSN 5805-01-044-8869)**

Current as of 2 July 1981

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to: Commander, US Army Communications-Electronic Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07703.

In either case, a reply will be furnished direct to you.

Table of Contents

		Page	Illus Figure
Section	I. Introduction	1	
	II. Repair Parts List.....	5	
Group	00 Central Office, Telephone, Automatic AN/TCC-41(V)1 and AN/TTC-41(V)2.....	5	1
	01 Shelter,ElectricalEquipmentS-561(V)(1)/TTC-411V).....	13	2
	Utilities and Raceway	19	3
	Bracket.....	27	4
	Air Condition Mounting Bracket, Power Entrance Cover	31	5

*This manual supersedes TM 11-5805-693-34P, 30 April 1979.

		Page	Illus Figure
	Signal Entrance and Cover Roadside.....	33	6
	Bracket, Chair Tiedown.....	35	7
	Bracket, Chair Tiedown, Lower.....	37	8
	Bracket, Axe Assembly.....	39	9
	Bracket Assembly, Ground Rod, Left.....	41	10
	Bracket, Ground Rod, Center.....	43	11
	Bracket, Sledgehammer, Upper.....	45	12
	Bracket, Sledgehammer, Lower.....	47	13
	Bracket, Wastebasket.....	49	14
	Bracket, Telephone (TA-312/PT).....	51	15
	Ladder Tiedown.....	53	16
	Reel Tiedown RC-435/U.....	55	17
	Storage Cabinet Assembly.....	57	18
	Air Conditioner Duct Assembly.....	59	19
	Power Supply Rack Assembly.....	61	20
	AC Lamp Assembly.....	63	21
	DC Lamp Assembly.....	65	22
	Fluorescent Lamp Assembly.....	67	23
	Battery Exhaust Alarm Assembly.....	69	24
	Power Entrance Box Assembly.....	71	25
	Terminal Box #1.....	73	26
	Terminal Box #2.....	75	27
	Battery Box.....	79	28
	Meter Box Assembly.....	83	29
	Cable Assemblies.....	91	30
	Patch Cords.....	95	31
	0101 Exhaust Blower Assembly.....	99	32
	0102 Power Cable (100 Feet) CX-7453A/U.....	103	33
	0103 Power Cable Stub (15 Feet) CX-7705A/U.....	105	34
	0104 Air Conditioner (See TM 5-4120-273-35P for repair parts)		
02	Switchboard, Automatic Telephone SB-3614/TT (See TM 11-5805-695-34P for repair parts)		
Group 03	Battery, Storage BB-501/U (Nickel Cadmium) (See TM 11-6140-203-34P-3 for repair parts)		
or			
	Battery, Storage BB-297/U (Lead-Acid) (No parts authorized)		
04	Intercommunication Station LS-147F/FI (See TM 11-5830-256-23P for repair parts)		
05	Telephone Set TA-938/G (No parts authorized)		
06	Telephone Set TA-312/PT (See TM 11-5805-201-34P for repair parts)		
07	Power Supply PP-6224/U (See TM 11-6130-266-15 for repair parts)		
08	Headset-Microphone H-182 (See TM 11-5965-283-34P for repair parts)		
09	Power Distribution Box.....	107	35
10	Signal Entrance Box.....	111	36
11	Patch Panel.....	115	37
Group 00	Central Office, Telephone, Automatic AN/TTC-41(V)3 and AN/TTC-41(V)4.....	121	38
01	Shelter, Electrical Equipment S-561(V)2/TTC-41(V)		
	Facility/Raceway.....	131	39
	Bracket.....	141	40
	Bracket, Chair Tiedown (See Figure 7 for repair parts)		
	Bracket, Chair Tiedown, Lower (See Figure 8 for repair parts)		
	Bracket, Axe Assembly (See Figure 9 for repair parts)		
	Bracket Assembly, Ground Rod, Left (See Figure 10 for repair parts)		
	Bracket, Ground Rod, Center (See Figure 11 for repair parts)		
	Bracket, Sledgehammer, Upper (See Figure 12 for repair parts)		
	Bracket, Sledgehammer, Lower (See Figure 13 for repair parts)		
	Bracket, Wastebasket.....	145	41
	Telephone Bracket (TA-312/PT) (See Figure 15 for repair parts)		
	Ladder Tiedown (See Figure 16 for repair parts)		
	Reel Tiedown RC-435/U (See Figure 17 for repair parts)		
	Storage Cabinet Assembly (See Figure 18 for repair parts)		
	Air Conditioner Duct Assembly (See Figure 19 for repair parts)		
	Power Supply Rack Assembly.....	147	42

	Page	Illus Figure
AC Lamp Assembly (See Figure 21 for repair parts)		
DC Lamp Assembly (See Figure 22 for repair parts)		
Fluorescent Lamp Assembly (See Figure 23 for repair parts)		
Battery Exhaust Alarm Assembly (See Figure 24 for repair parts)		
Power Entrance Box Assembly (See Figure 25 for repair parts)		
Terminal Box #1	149	43
Terminal Box #2	151	44
Battery Box	155	45
Meter Box Assembly	159	46
Cable Assemblies	169	47
Patch Cords (See Figure 31 for repair parts)		
0101 Exhaust Blower Assembly (See Figure 32 for repair parts)		
0102 Power Cable (100 Feet) CX-7453A/U (See Figure 33 for repair parts)		
0103 Power Cable Stub (15 Feet) CX-7705A/U (See Figure 34 for repair parts)		
0104 Air Conditioner (See TM 5-4120-273-35P for repair parts)		
02 Switchboard, Automatic Telephone SB-3614/TT (See TM 11-5805-695-34P for repair parts)		
03 Battery, Storage BB-501/U (See TM 11-6140-203-34P-3 for repair parts)		
or		
Battery, Storage BB-297/U (No parts authorized)		
04 Intercommunication Station LS-147F/FI (See TM 11-5830-256-23P for repair parts)		
05 Telephone Set TA-938/G (No parts authorized)		
Group 06 Telephone Set TA-312/PT (See TM 11-5805-201-34P for repair parts)		
07 Power Supply PP-6224/U (See TM 11-6130-266-15 for repair parts)		
08 Headset-Microphone H-182 (See TM 11-5965-283-34P for repair parts)		
09 Power Distribution Box (See Figure 35 for repair parts)		
10 Signal Entrance Box (See Figure 36 for repair parts)		
11 Patch Panel	175	48
12 Headset Switch Box	177	49
Section III. Special Tools List (Not applicable)		
IV. National Stock Number and Part Number Index	178	

SECTION I INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of direct support and general support maintenance of the AN/TTC-41(V)1, 2, 3, and 4. It authorizes the requisitioning and issue of spares and repair parts as indicated by the sourced and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. *Section III. Special Tools List.* Not applicable.

c. *Section IV. National Stock Number and Part Number Index.* A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. *Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. *Source, Maintenance, and Recoverability (SMR) Codes.*

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

<i>Code</i>	<i>Definition</i>
-------------	-------------------

PA—Item procured and stocked for anticipated or known usage.

PB—Item procured and stocked for insurance purpose because essentiality dictates that a minimum quantity be available in the supply system.

PD—Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.

MD—Item to be manufactured or fabricated at the depot maintenance level.

AF—Item to be assembled at direct support maintenance level.

AD—Item to be assembled at depot maintenance level.

XA—Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.

XD—A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

<i>Code</i>	<i>Application/Explanation</i>
-------------	--------------------------------

O—Support item is removed, replaced, used at the organizational level.

F—Support item is removed, replaced, used at the direct support level.

D—Support items that are removed, replaced, used at depot, mobile depot, specialized repair activity only.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e.,