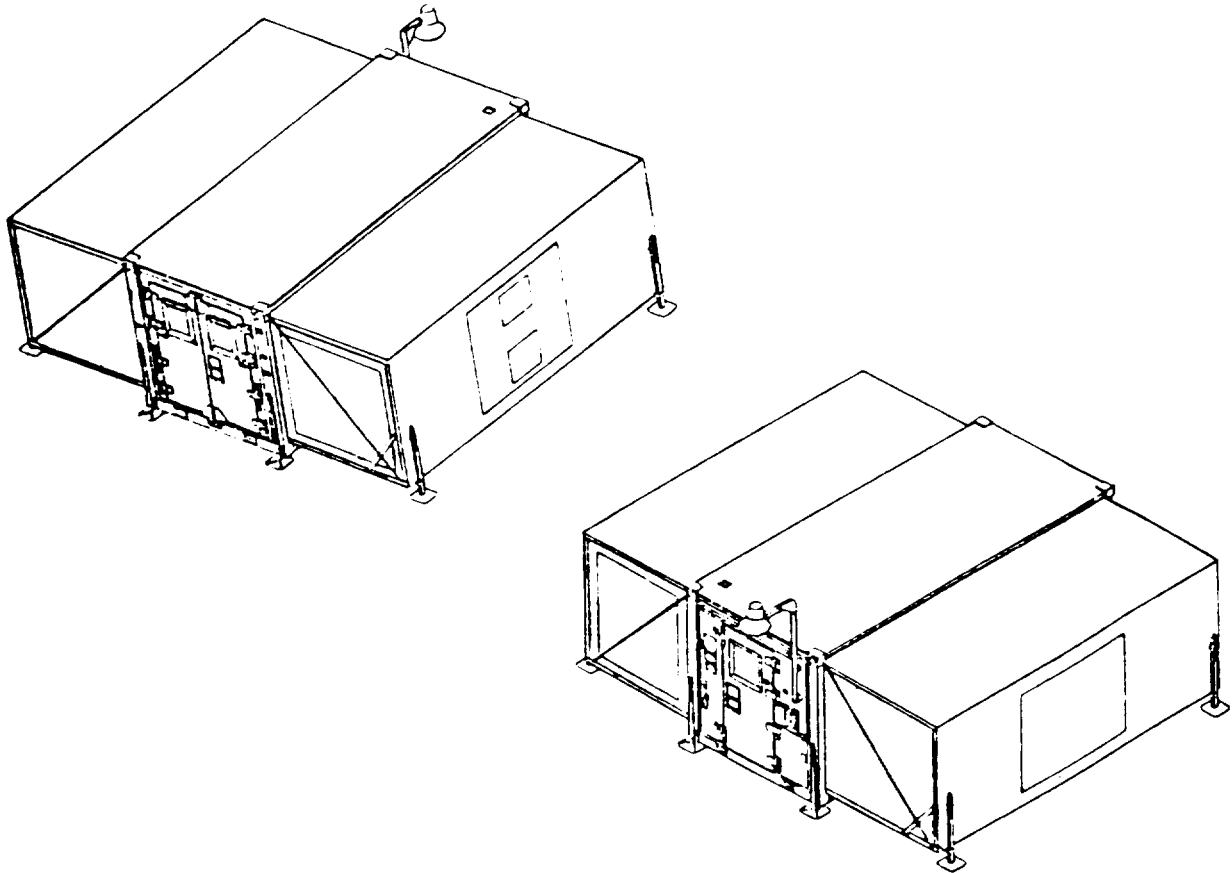

**UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST**



**SHELTER, TACTICAL,
EXPANDABLE, TWO-SIDED**

(NSN 5411-01-136-9838)

**DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.
*This manual supersedes TM 10-5411-200-24P, 8 August 1988, including all changes.**

HEADQUARTERS, DEPARTMENTS OF THE ARMY AND THE AIR FORCE

30 DECEMBER 1993

UNIT, DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
FOR
SHELTER, TACTICAL, EXPANDABLE, TWO-SIDED
(NSN 5411-01-136-9838)

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. A reply will be furnished directly to you.

For Air Force, submit AFTO Form 22 (Technical Order System Publication Improvement Report and Reply) in accordance with paragraph 6-5, Section VI, T.O. 00-5-1. Forward to Commander, San Antonio Air Logistics Center, ATTN: SA-ALC-MMDDA, Kelly Air Force Base, TX 78241-5000.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

	Page	Illus Figure
Section I. INTRODUCTION	1-1	
Section II. REPAIR PARTS LIST	2-0	
Group 01 Electrical System	2-0	
Panel board Assembly	2-0	1
Fixed Fluorescent Light Assembly	2-4	2
Movable Fluorescent Light Assembly	2-8	3
Incandescent Light Installation	2-14	4
Exterior Light Assembly	2-16	5
Power Entry Panel	2-20	6
Cable and Receptacle Assembly - Panelboard	2-24	7
Right Rear and Left Front Cable and Receptacle Assembly	2-28	8
Left Rear Cable and Receptacle Assembly	2-32	9
Light Switches and Conduit Wiring	2-36	10
Group 02 Environmental System	2-42	
Environmental Control Unit Return Panel Assembly	2-42	11
Environmental Control Unit Intake Panel Assembly	2-44	12
Closeout Panel Assembly	2-46	13
Group 03 Door Assemblies	2-48	
Personnel and Right Cargo Door Assembly	2-48	14
Door Handle and Latch Installation	2-52	15
Vent Installation	2-56	16

***This manual supersedes TM10-5411-200-24P, 8 August 1988, including all changes.**

TM10-5411-200-24P
TO35E4-177-4

TABLE OF CONTENTS - Continued

		Page	Illus Figure
	Left Cargo Door	2-60	17
	Personnel and Right Cargo Door Stop	2-68	18
	Left Cargo Door Stop	2-74	19
	Personnel Door Shear Plates Installation	2-80	20
	Cargo Doors Shear Plates Installation	2-82	21
	Closeout Panel	2-84	22
	Closeout Panel with Opening	2-86	23
Group 04	Leveling Jack Assemblies	2-90	
	Hinged Section Jack	2-90	24
	Jack Extension	2-94	25
Group 05	Folding Panel Assemblies	2-96	
	Hinged Roof	2-96	26
	Hinged Roof Support Strut	2-98	27
	Personnel Right and Cargo Left Hinged Endwall with Closeout	2-102	28
	Personnel Left and Cargo Right Hinged End Panel...	2-106	29
	Personnel Left and Cargo Right Hinged Endwall with Closeout	2-110	30
	Personnel Left and Cargo Right Hinged Endwall	2-114	31
	Closeout Hinged Sidewall	2-118	32
	Hinged Sidewall	2-122	33
	Hinged Side Panel with Opening	2-126	34
	Hinged Floor	2-128	35
	Front and Rear Brace Installation	2-132	36
Group 06	Container Lift Jack Assemblies	2-134	
	Jack Assembly - International Standard Fitting	2-134	37
Group 07	Fixed Panel Assemblies	2-138	
	Personnel End Fixed Endwall	2-138	38
	Personnel Endwall Level	2-144	39
	Cargo End Fixed Endwall	2-146	40
	Cargo Endwall Level	2-148	41
	Fixed Roof	2-150	42
	Fixed Roof Mechanism Installation	2-158	43
	Fixed Roof Left Beam...	2-162	44
	Fixed Roof Right Beam	2-166	45
	Fixed Floor	2-170	46
	Base Frame Assembly	2-174	47
Group 08	Frame Assembly	2-176	
	Inside Guide Roller	2-176	48
	Hinged Section Corner Post	2-178	49
Group 09	Equipment Container	2-182	
	Equipment Container	2-182	50
Group 10	Bulk Materials List....	2-185	
Section III.	SPECIAL TOOLS LIST.....	3-0	
	Special Tools	3-0	51
	Blind Nut Removal Tool Kit, P/N 105-60	3-2	52
	Blind Nut Removal Tool Kit, P/N 105-80	3-4	53
Section IV.	NATIONAL STOCK NUMBER AND PART NUMBER INDEX...	4-1	

**TM10-5411-200-24P
TO35E4-177-4**

**UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST**

**SHELTER, TACTICAL,
EXPANSABLE, TWO-SIDED
(NSN 5411-01-136-9838)**

Section I. INTRODUCTION

1. *Scope.* This joint Army, Navy, Air Force and Marine Corps manual lists repair parts and special tools required for the performance of organizational, intermediate (field), direct and general support maintenance of the expandable tactical shelter. The following paragraphs are keyed to applicable users. All users should read paragraph 4, Special Information, prior to using this manual.

NOTE: (Army) Repair parts listed represent those authorized for use at indicated maintenance levels and will be requisitioned on an "as required" basis until stockage is justified by demand in accordance with AR 710-2.

NOTE: (Army) Organizational Maintenance personnel are to extract the maintenance coded -O- items they require from Section II, Column (2), Third and or Fourth Position of the Direct and General Support Repair Parts and Special Tools List.

2. *General.* This Repair Parts and Special Tools List is divided into the following sections:

a. (ALL) Repair Parts -- Section II A list of repair parts authorized for the performance of maintenance at the organizational, intermediate (field), direct support, general support in figure and item number sequence.

b. (ALL) Special Tools. Test and Support Equipment -- Section III. A list of special tools, test and support equipment authorized for the performance of maintenance at the organizational, intermediate (field), (direct support and general support).

c. National Stock Number and Reference Number Index -- Section IV. A list of National stock numbers in numerical sequence, followed by a list of reference numbers appearing in all the listings in alphanumeric sequence, cross-referenced to the illustration figure number and item number.

3. *Explanation of columns.* The following provides an explanation of columns in the tabular lists in Sections II and III.

a. (ALL) Illustrations. (Column 1.) This column is divided as follows:

(1) Figure Number. Indicates the figure number of the illustration on which the item is shown.

(2) Item Number. Indicates the number used to identify the item on the illustration.

b. (ALL) Source, Maintenance, and Recoverability Codes (SMR) (Column 2.)

(1) Uniform Source Codes applicable to all Military Services. GENERAL: Source Codes are assigned to support items to indicate the manner of accounting support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

<u>CODE</u>	<u>DEFINITION</u>
PA	Item procured and stocked for anticipated or known usage.