

**ARMY  
AIR FORCE  
NAVY**

**\*TM 10-8340-224-23P  
TO 35E5-6-4  
NAVFAC-P-337.A**

---

## **TECHNICAL MANUAL**

### **UNIT AND DIRECT SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST FOR TENT, EXTENDABLE, MODULAR, PERSONNEL (TEMPER)**

TYPE I, 64X20 SURGICAL WORK, GREEN, NSN: 8340-01-185-2616  
TYPE II, 64X20 MEDICAL, GREEN, NSN: 8340-01-185-2617  
TYPE III, 48X20 UTILITY, GREEN, NSN: 8340-01-185-2615  
TYPE IV, 32X20 PERSONNEL, GREEN, NSN: 8340-01-196-6272  
TYPE V, 16X20 MEDICAL, GREEN, NSN: 8340-01-185-2614  
TYPE VI, 16X20 CENTRAL MED SUPPLY, GREEN, NSN: 8340-01-185-2618  
TYPE VII, 16X20 UTILITY, GREEN, NSN: 8340-01-185-2613  
TYPE VIII, 96X20 MEDICAL WARD, GREEN, NSN: 8340-01-257-8468  
TYPE IX, 80X20 MEDICAL SURGICAL, GREEN, NSN: 8340-01-257-8469  
TYPE X, 64X20 MEDICAL SUPPORT, GREEN, NSN: 8340-01-257-8470  
TYPE XI, 32X20 MEDICAL SUPPORT, GREEN, NSN: 8340-01-257-8471  
TYPE XII, 16X20 CS SUPPORT, GREEN, NSN: 8340-01-257-8472  
TYPE XIII, 96X20 MEDICAL WARD TROP., GREEN, NSN: 8340-01-257-8473  
TYPE XIV, 32X20 MEDICAL SUPPORT TROP., GREEN, NSN: 8340-01-257-8474  
TYPE XV, 48X20 KITCHEN, GREEN, NSN: 8340-01-325-0131  
TYPE XVI, 32X20 SANITATION CENTER, GREEN, NSN: 8340-01-324-7971  
TYPE I, 64X20 SURGICAL WORK, TAN, NSN: 8340-01-212-9468  
TYPE II, 64X20 MEDICAL, TAN, NSN: 8340-01-212-9469  
TYPE III, 48X20 UTILITY, TAN, NSN: 8340-01-212-9470  
TYPE IV, 32X20 PERSONNEL, TAN, NSN: 8340-01-185-2628  
TYPE V, 16X20 MEDICAL, TAN, NSN: 8340-01-212-9471  
TYPE VI, 16X20 CENTRAL MED SUPPLY, TAN, NSN: 8340-01-212-9472  
TYPE VII, 16X20 UTILITY, TAN, NSN: 8340-01-212-9473  
TYPE VIII, 96X20 MEDICAL WARD, TAN, NSN: 8340-01-257-8475  
TYPE IX, 80X20 MEDICAL SURGICAL, TAN, NSN: 8340-01-257-8476  
TYPE X, 64X20 MEDICAL SUPPORT, TAN, NSN: 8340-01-257-8477  
TYPE XI, 32X20 , MEDICAL SUPPORT, TAN, NSN: 8340-01-257-8478  
TYPE XII, 16X20 CS SUPPORT, TAN, NSN: 8340-01-257-8479  
TYPE XIII, 96X20 MEDICAL WARD TROP., TAN, NSN: 8340-01-258-6482  
TYPE XIV, 32X20 MEDICAL SUPPORT TROP., TAN, NSN: 8340-01-257-8480  
TYPE XV, 48X20 KITCHEN, TAN, NSN: (UNASSIGNED)  
TYPE XVI, 32X20 SANITATION CENTER, TAN, NSN: (UNASSIGNED)

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

\* This manual supersedes TM 10-8340-224-13&P/T035E5-6-1/NAVFAC P 337, dated 28 February 1986.

---

**HEADQUARTERS, DEPARTMENTS OF THE ARMY, AIR  
FORCE AND NAVY  
31 OCTOBER 1994**

TECHNICAL MANUAL  
NO. 10-8340-224-23P

HEADQUARTERS, DEPARTMENTS OF THE ARMY  
AIR FORCE AND NAVY  
WASHINGTON D.C., 31 October 1994

**TECHNICAL MANUAL**

**UNIT AND DIRECT  
SUPPORT MAINTENANCE  
REPAIR PARTS AND SPECIAL TOOLS LIST  
FOR  
TENT, EXTENDABLE, MODULAR, PERSONNEL  
(TEMPER)**

Current as of 1 August 1994

**REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS**

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. A reply will be furnished directly to you.

For Air Force, submit AFTO Form 22 (Technical Order System Publication Improvement Report and Reply) to Commander, ATTN: WR-ALC/TILTA, Robins, Air Force Base, GA31088-1637. Questions concerning technical content, should be directed to: LVRDR.

Marine Corps users submit NAVMC 10772 Form to Commanding General, Marine Corps Logistics Base (Code 850) Albany, GA 31704-5000.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

**TABLE OF CONTENTS**

	PAGE	ILLUS/ FIGURE
Section I.		
INTRODUCTION . . . . .	1	
TEMPER Type Quantities Matrix . . . . .	8	
Section II.		
REPAIR PARTS LIST . . . . .	1-1	
Group 00 Tent, Extendable, Modular, Personnel (TEMPER)		
Group 01 Tent Sections (Fabric)		
End Section . . . . .	1-1	1
Door Section . . . . .	2-1	2
Window Section . . . . .	3-1	3
Tent Fly(16feet) . . . . .	4-1	4
End Section Liner . . . . .	5-1	5
Intermediate Liner . . . . .	6-1	6
Floor Single Ply (8 feet) . . . . .	7-1	7
Vestibule . . . . .	8-1	8
Extenable, EndWall and Side Entrance Plenum . . . . .	9-1	9
Modesty Curtain . . . . .	10-1	10

This manual supersedes TM 10-8340-224-13&P/T035E5-6-1/NAVFAC P 337, dated 28 February 1986.

	PAGE	I L L U S / FIGURE
	Partition . . . . .	11-1 11
	Accessories . . . . .	12-1 12
Group 02	Frame Sections	
	Arch Assembly . . . . .	13-1 13
	Header Assembly . . . . .	14-1 14
	Purlin Assembly . . . . .	15-1 15
	Eave Extender Assembly . . . . .	16-1 16
	Ridge Extender Assembly . . . . .	17-1 17
	Door Sill Assembly . . . . .	18-1 18
	Vestibule Frame Assembly . . . . .	19-1 19
	Frame Sections Cover Assembly . . . . .	20-1 20
Group 03	Bump Through Doors	
	Double Bump Through Doors Assembly . . . . .	21-1 21
Group 04	Power Control	
	Type III Power Control . . . . .	22-1 22
	Type IV Power Control . . . . .	23-1 23
	TypeIII/IV Convenience Outlet... . . . .	24-1 24
	Power Panel Stand Assembly.. . . . .	25-1 25
	TypeIII/IV Extension Cable . . . . .	26-1 26
Group 05	Light Set Type1	
	Type I Portable Fluorescent Light Set Assembly . . . . .	27-1 27
Group 06	Bulk Materials List . . . . .	Bulk-1 BULK
Section III.	SPECIAL TOOLS LIST (not applicable) . . . . .	
Section IV.	CROSS-REFERENCE INDEXES . . . . .	I-1

**UNIT AND DIRECT SUPPORT  
 MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST**

Section I. INTRODUCTION

1. SCOPE. This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit and direct support maintenance of the Tent, Extendable, Modular, Personnel (TEMPER). It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the Source, Maintenance and Recoverability (SMR) codes.

2. GENERAL. In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:


a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. This list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Items are shown in the associated illustration(s)/figure(s).

b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. section IV. Cross-Reference Index. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National Stock Numbers and Part Numbers are cross referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross references NSN, CAGEC and Part Number.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III)

- a. ITEM No. (COLUMN (1)). Indicates the number used to identify items called out in the illustration.
- b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

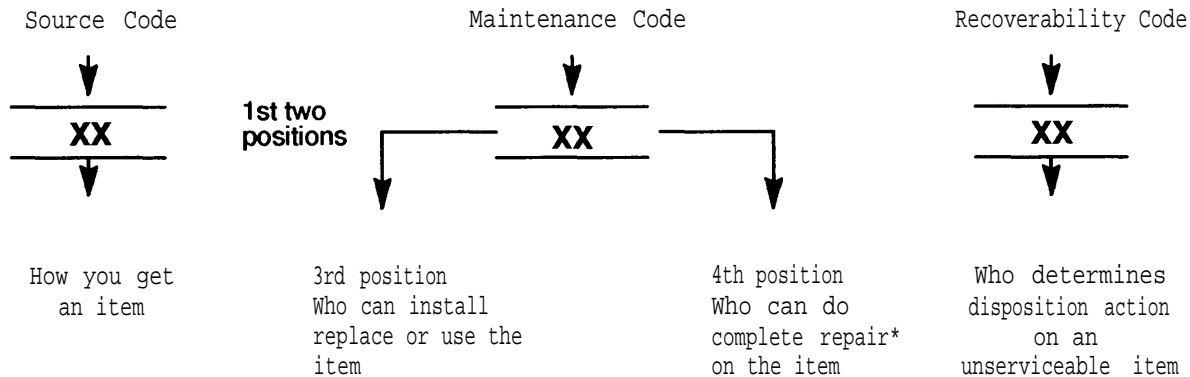

\* Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

**TENT, EXTENDABLE, MODULAR, PERSONNEL (TEMPER)  
TYPE I THROUGH TYPE XVI CLASS I AND CLASS II <sup>1</sup>**

<b>COMPONENT DESCRIPTION</b>	<b>I</b>	<b>II</b>	<b>III</b>	<b>IV</b>	<b>V</b>	<b>VI</b>	<b>VII</b>	<b>VIII</b>	<b>IX</b>	<b>X</b>	<b>XI</b>	<b>XII</b>	<b>XIII</b>	<b>XIV</b>	<b>XV</b>	<b>XVI</b>
<b>TENT SECTIONS</b>																
END SECTION	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
WINDOW SECTION (TEMPERATE)	5	7	6	4	1	1	1	10	8	6	3	2			3	2
DOOR SECTION (TEMPERATE)	3	1						2	2	2	1					
WINDOW SECTION (DESERT/TROPICAL)													10	3		
DOOR SECTION (DESERT/TROPICAL)							1						2	1	3	2
TENT FLY (16 FEET)	4	4	3	2	1	1	1	6	5	4	2	1	6	2	3	2
TENT FLY (8 FEET) <sup>2</sup>																
END SECTION LINER (TEMPERATE)	2	2	2	2	2	2	1	2	2	2	2	2				
END SECTION LINER (DESERT/TROPICAL)													2	2	2	2
INTERMEDIATE LINER (TEMPERATE)	6	6	4	2				10	8	6	2				3	2
INTERMEDIATE LINER (DESERT/TROPICAL)													10	2	1	
TENT FLOOR (SINGLE PLY) 8 FEET	8	8		4	2	2		12	10	8	4	2	12	4		
TENT FLOOR (SINGLE PLY) 24 FEET -1 OR -2 <sup>2</sup>																
TENT FLOOR (SINGLE PLY) 40 FEET -1 OR -2 <sup>2</sup>																
TENT FLOOR (INSULATED)	8	8			2	2		12	10	8	4	2	12	4		
VESTIBULE WITH DOOR	8	3		1	2	2	2	6	6	6	3	1	6	3	6	4
VESTIBULE FLOOR (SINGLE PLY)	8	3		1	2	2	2	6	6	6	3	1	6	3		
VESTIBULE FLOOR (INSULATED)	8	3			2	2	2	6	6	6	3	1	6	3		
VESTIBULE CONTAINER	8	3		1	2	2	2	6	6	6	3	1	6	3	6	4
VESTIBULE DOOR CAP																
PARTITION	3	3			1	1										
TENT COVER	11	11	3	2	3	3	1	12	10	8		2	12		3	2
TENT PIN CONTAINER	4	4	3	4	1	1	1	8	8	4	4	1	8	4	4	3
MODESTY CURTAIN								11	9	7	1		11	1		
VESTIBULE DOOR SLIDING BLACKOUT CURTAIN																

TM 10-8340-224-23P  
TO 35E5-6-4  
NAVFAC-P-337.A