

TM 9-4910-719-14&P

TECHNICAL MANUAL

OPERATOR'S ORGANIZATIONAL, DIRECT SUPPORT
AND GENERAL SUPPORT MAINTENANCE MANUAL
INCLUDING REPAIR PARTS LIST

BEAD BREAKER, PNEUMATIC
MODEL IMT 200HP
(IOWA MOLD TOOLING CO., INC.)
(NSN 4910-01-015-7667)

HEADQUARTERS, DEPARTMENT OF THE ARMY
JANUARY 1982

TECHNICAL MANUAL }
No. 9-4910-719-14&P }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 25 January 1982

OPERATORS, ORGANIZATIONAL, DIRECT SUPPORT
AND GENERAL SUPPORT MAINTENANCE MANUAL
INCLUDING REPAIR PARTS LIST

**BEAD BREAKER, PNEUMATIC
MODEL IMT 200HP
(NSN 4910-01-015-7667)**

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended changes to Publications and Blank Forms), or DA Form 2028-2, located in the back of this manual direct to: Commander, US Army Armament Materiel Readiness Command, ATTN: DRSAR-MAS, Rock Island, IL 61299. A reply will be furnished direct to you.

NOTE

This manual is published for the purpose of identifying an authorized commercial manual for the use of the personnel to whom this bead breaker is issued.

Manufactured by: Iowa Mold Tooling Co., Inc.
500 Highway 18 West
Garner, IA 50438

Procured under Contract No. DAAA09-79-F-6125

This technical manual is an authentication of the manufacturers' commercial literature and does not conform with the format and content specified in AR 310-3, Military Publications. This technical manual does, however, contain available information that is essential to the operation and maintenance of the equipment.

TABLE OF CONTENTS

Paragraph	Title	Page
SECTION 1. GENERAL		
1-1.	INTRODUCTION	1
SECTION 2. OPERATION		
2-1.	OPERATION	1
SECTION 3. SERVICE		
3-1.	INTRODUCTION	3
3-2.	DISASSEMBLY	3
	3-2-1. Bead Breaker	3
	3-2-1-1. Clamping Cylinder	3
	3-2-1-2. Breaker Cylinder	5
	3-2-1-3. Bead Breaker Purging	6
	3-2-2. Air/Hydraulic Pump	7
3-3.	CLEANING	8
3-4.	STORAGE	8
3-5.	TROUBLESHOOTING	8
SECTION 4. PARTS		
4-1.	INTRODUCTION	9
4-2.	CONVERSION KITS	10
4-3.	INTERMEDIATE SERIES B.	10
SECTION 5. OIL SPECIFICATIONS		
5-1.	OIL SELECTION	14

LIST OF ILLUSTRATIONS

Figure	Title	Page
1	Sequence of Operation	2
2	Bead Breaker	4
3	U Cup Installation	5
4	Jaw Conversion	10
5	Bead Breaker Parts Drawing	11
6	Air/Hydraulic Pump Parts Drawing	12

LIST OF TABLES

Table	Title	Page
1.	Troubleshooting Chart	8
2.	Revision	9
3.	Internal Conversion Kit	9
4.	Jaw Conversion Kit	10
5.	Hydraulic Oil Specifications	14

LIST OF TABLES

Table	Title	Page
1.	Troubleshooting Chart	8
2.	Revisions	9
3.	Internal Conversion Kit	9
4.	Jaw Conversion Kit.	10

IMT 200HP Bead Breaker (Series B)

(part number 92900140) Consisting of the following:
Bead Breaker Tool (part number 79075030)
Air/Hydraulic Pump (part number 73051010)

