

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

ORGANIZATIONAL MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LISTS
SPECTRUM ANALYZER AN/UPM-58
FSN 6625-523-8576

Headquarters, Department of the Army, Washington, D.C.

28 September 1973

Current as of February 1973

SECTION		Paragraph	Page
I.	INTRODUCTION		
	Scope	1-1	2
	General.....	1-2	2
	Explanation of columns	1-3	2
	Special information	1-4	4
	Location of repair parts	1-5	4
	Abbreviations (Not applicable).....	1-6	4
	Reporting of equipment publication improvements	1-7	4
II.	PRESCRIBED LOAD ALLOWANCE (Not applicable)		
III.	REPAIR PARTS LIST.....		6
IV.	SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT (Not applicable)		
V.	INDEX-FEDERAL STOCK NUMBER AND REFERENCE NUMBER. CROSS-REFERENCE TO FIGURE AND ITEM NUMBER		9

*This manual supersedes TM 11-6625-232-20P, 20 March 1959, including all changes

SECTION I

INTRODUCTION

1-1. Scope

This manual lists repair parts and special tools required for the performance of organizational maintenance of the AN/UPM-58. The PCCN for the AN/UPM-58 is GTEAAM for all models.

1-2. General

This repair parts and special tools list is divided into the following sections:

a. *Prescribed Load Allowance (PLA)-Section II.* Not applicable.

b. *Repair Parts List-Section III.* A list of repair parts authorized for the performance of maintenance at the organizational level. This repair parts list is arranged in alphabetical order.

c. *Special Tools, Test and Support Equipment-Section IV.* Not applicable.

d. *Index-Federal Stock Number and Reference Number Cross-Reference to Figure and Item Number-Section V.* A list, in ascending numerical sequence, of all Federal stock numbers appearing in the listings, followed by a list, in alphameric sequence, of all reference numbers appearing in the listings. Federal stock number and reference numbers are cross-referenced to each illustration figure and item number or reference designation appearance.

1-3. Explanation of Columns

The following provides an explanation of columns in the tabular lists-

a. *Source, Maintenance, and Recoverability Codes (SMR).*

(1) *Source code.* Indicates the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are-

Code	Explanation
------	-------------

PA-Item procured and stocked for anticipated or known usage.

PB-Item procured and stocked for insurance purposes because essentiality dictates that a minimum quantity be available in the supply system.

PC-Item procured and stocked and which otherwise would be coded PA except that it is deteriorative in nature.

PD- Support item, excluding support equipment, pro-

Code

Explanation

cured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfitting. Not subject to automatic replenishment.

PE-Support equipment procured and stocked for initial issue or outfitting to specified maintenance repair activities.

PF-Support equipment which will not be stocked but which will be centrally procured on demand.

PG-Item procured and stocked to provide for sustained support for the life of the equipment. It is applied to an item peculiar to the equipment which because of probable discontinuance or shutdown of production facilities would prove uneconomical to reproduce at a later time.

KD-An item of depot overhaul/repair kit and not purchased separately. Depot kit defined as a kit that provides items required at the time of overhaul or repair.

KF-An item of a maintenance kit and not purchased separately. Maintenance kit defined as a kit that provides an item that can be replaced at organizational or direct support or general support levels of maintenance.

KB-Item included in both a depot overhaul/repair kit and a maintenance kit.

MO-Item to be manufactured or fabricated at organizational level

MF-Item to be manufactured or fabricated at direct support maintenance level.

MH-Item to be manufactured or fabricated at general support maintenance level.

MD-Item to be manufactured or fabricated at depot maintenance level

AO-Item to be assembled at organizational level.

AF-Item to be assembled at direct support maintenance level

AH-Item to be assembled at general support maintenance level.

AD-Item to be assembled at depot maintenance level

XA-Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.

XB-Item is not procured or stocked. If not available through salvage, requisition.

XC-Installation drawing, diagram instruction sheet, field service drawing, that is identified by manufacturers' part number.

XD-Support items can be requisitioned with justification.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code Format as follows-

(a) *Use (third position).* The maintenance code entered in the third position indicates the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position indicates one of the following levels of maintenance.

<i>Code</i>	<i>Application/Explanation</i>
O-	Support item is removed, replaced, used at the organizational level of maintenance.

NOTE

A code "C" may be used in this position to denote crew or operator maintenance performed within organizational maintenance.

F-	Support item is removed, replaced, used at the direct support maintenance level.
H-	Support item is removed, replaced, used at the general support maintenance.
D-	Support items that are removed, replaced, used at depot only.

(b) *Repair (fourth position).* The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i. e., all authorized maintenance functions). When a maintenance code is not used a dash (-) sign is entered. For multi-service equipment/systems or when a code is entered, this position will contain one of the following maintenance codes as assigned by the service(s) that require the code-

<i>Code</i>	<i>Application/Explanation</i>
O-	The lowest maintenance level capable of complete repair of the support item is the organizational level.
F-	The lowest maintenance level capable of complete repair of the support item is direct support.
H-	The lowest maintenance level capable of complete repair of the support item is general support.
D-	The lowest maintenance level capable of complete repair of the support item is the depot level.

<i>Code</i>	<i>Application/Explanation</i>
L-	Repair restricted to designated Specialized Repair Activity.
Z-	Non-repairable. No return is authorized.
B-	No repair is authorized. The item may be reconditioned by adjusting, lubricating, etc. , at the user level. No parts or special tools are procured for the maintenance of this item.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the uniform SMR Code Format as follows-

<i>Code</i>	<i>Explanation</i>
Z-	Nonrepairable item. When unserviceable, condemn and dispose at the level indicated in the first digit of the maintenance code.
O-	Repairable item. When uneconomically repairable, condemn and dispose at organizational level.
F-	Repairable item. When uneconomically repairable, condemn and dispose at the direct support level.
H-	Repairable item. When uneconomically repairable, condemn and dispost at the general support level.
D-	Repairable- item. When beyond lower level repair capability, return to depot. Condemnation and disposal not authorized below depot level.
L-	Repairable item. Repair, condemnation, and disposal not authorized below depot/Specialized Repair Activity level.
A-	Item requires special handling or condemnation procedures because of specific reasons (i.e., precious metal content, high dollar value, critical material or hazardous material).

b. Federal Stock Number. Indicates the Federal stock number assigned to the item and will be used for requisitioning purposes.

c. Description. Indicates the Federal item name and a minimum description required to identify the item. The last line indicates the reference number followed by the applicable Federal Supply Code for Manufacturer (FSCM) in parentheses. The FSCM is used as an element in item identification to designate manufacturer or distributor or Government agency, etc. , and is identified in SB 708-42.

d. Unit of Measure (U/M). Indicates the standard or basic quantity by which the listed item is used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation; e.g., ea, in, pr, etc., and is the basis used to indicate quantities and allowances in subsequent columns. When the unit of measure differs from the unit of issue, the lowest unit of issue

that will satisfy the required units of measure will be requisitioned.

e. *Quantity Incorporated in Unit.* This column indicates the quantity of the item used in the equipment. Subsequent appearances of the same item in the same assembly are indicated by the letters "REF".

f. *15-Day Organizational Maintenance Allowance.*

(1) The repair parts indicated by an asterisk in the allowance column represent those authorized for use at the organizational category, and will be requisitioned on an "as required" basis, until stockage is based on demand in accordance with AR 710-2.

(2) Major Army commanders are authorized to approve reduction in the range of support items authorized for use in units within their commands. Recommendations for increase in range of items authorized for use will be forwarded to Commander, US Army Electronics Command, ATTN: AMSELMA-CRA, Fort Monmouth, N. J. 07703. Any changes approved will be reflected in a revision to the RPSTL.

(3) Allowance quantities are indicated in the special tools list section for special tools, TMDE, and other equipment.

g. *Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown in TM 11-5099.

(2) *Item number.* Indicates the item number or reference designation used to reference the item in the illustration.

1-4. Special Information

a. Usable on codes are included in column 3. Uncoded items are applicable to all models. Identification of the usable on codes used in this publication are-

<i>Code</i>	<i>Used on</i>
AFN	AN/UPM-58

b. The following publication pertains to the AN/UPM-58 and its components:
TM 11-5099 Spectrum Analyzer AN/UPM-58.

1-5. Location of Repair Parts

a. This manual contains one cross-reference index (sec V) to be used to locate a repair part when either the Federal stock number or reference number (manufacturer's part number) is known. The first column in the index is prepared in numerical or alphanumeric sequence in ascending order. The reference numbers (manufacturer's part numbers) are listed immediately following the last listed Federal stock number in the index of Federal stock numbers.

b. When the Federal stock number or reference number is known, follow the procedures given in (1) and (2) below.

(1) Refer to the index of Federal stock numbers (sec V) and locate the Federal stock number or reference number. The FSN and reference number are cross-referenced to the applicable figure and item number or reference designation.

(2) Refer to the repair parts list (sec III) and locate the figure number (col 7a) and item number or reference designation (col 7b) as noted in the FSN index.

c. When the figure and item number or reference designation are known, scrutinize columns 7a and 7b of the repair parts list (sec III) until the item is located.

d. When the FSN, reference number, figure number, item number and reference designation are not known, scrutinize column 3 of the repair parts list (sec III), which is arranged in alphabetical order.

1-6. Abbreviations

Not applicable.

1-7. Reporting of Equipment Publication Improvements

The reporting of errors, omissions, and recommendations for improving this publication by the individual user is encouraged. Reports should be submitted on DA Form 2028 (Recommended Changes to Publications) and forwarded direct to Commander, US Army Electronics Command, ATTN: AMSEL,MA-CRA, Fort Monmouth, N.J. 07703.

(Net printed page is 6)

SECTION III

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION USABLE ON CODE REF NUMBER & MFR CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUS- TRATION	
					(A)	(B)	(C)	(D)	(A)	(B)
					1-5	6-20	21-50	51-100	FIG. NO.	ITEM NO.
PAOZZ	6625-502-6085	CABLE, POWER, ELECTRICAL NO-REF-DESIG CX3072U (80058)	EA	1	*	*	*	*	1	
PAOZZ	5935-149-4066	CONNECTOR, PLUG, ELECTRICAL UG-88C/U P5	EA	4	*	*	*	*	3	P5
PAOZZ	5935-149-4066	CONNECTOR, PLUG, ELECTRICAL UG-88C/U P6	EA	REF	*	*	*	*	3	P6
PAOZZ	5935-149-4066	CONNECTOR, PLUG, ELECTRICAL UG-88C/U P7	EA	REF	*	*	*	*	3	P7
PAOZZ	5935-149-4066	CONNECTOR, PLUG, ELECTRICAL UG-88C/U P8	EA	REF	*	*	*	*	3	P8
PAOZZ	5935-549-9271	CONNECTOR, PLUG ELECTRICAL P9..... 7084 (74545)	EA	1	*	*	*	*		P9
PAOZZ	5935-283-3392	CONNECTOR, PLUG, ELECTRICAL UP-120M P10..... UP120M (80058)	EA	1	*	*	*	*		P10
PAOZZ	6625-284-9089	HORN, WAVEGUIDE AT-531/UPM E40..... AT531UPM (80058)	EA	1	*	*	*	*	6	E40
PAOZZ	5985-501-0832	WAVEGUIDE ASSEMBLY CG-539/U W7	EA	1	*	*	*	*	5	W7
PAOZZ	5935-295-6343	CAP, ELECTRICAL 026..... 9760-36-8C (02660)	EA	1	*	*	*	*	17	026
PAOZZ	5955-577-1540	CAP, ELECTRICAL 029 (USE ON ORDER 36225-PH-57 ONLY)	EA	1	*	*	*	*	17	029
PAOZZ	5935-570-5501	CAP, ELECTRICAL 029..... AP11053 (82199)	EA	1	*	*	*	*	17	029
PAOZZ	5920-244-5150	CAP, ELECTRICAL 031..... HKPR (10133)	EA	4	*	*	*	*	17	031
PAOZZ	5920-244-5150	CAP, ELECTRICAL 032..... HKPR (10133)	EA	REF	*	*	*	*	17	032
PAOZZ	5920-244-5150	CAP, ELECTRICAL 033..... HKPR (10133)	EA	REF	*	*	*	*	17	033
PAOZZ	5920-244-5150	CAP, ELECTRICAL 034..... HKPR (10133)	EA	REF	*	*	*	*	17	034
PAOZZ	6210-578-3982	CAP, ELECTRICAL 035..... 50327B7 (72619)	EA	2	*	*	*	*	17	035
PAOZZ	6210-578-3982	CAP, ELECTRICAL 036..... 50327B7 (72619)	EA	REF	*	*	*	*	17	036
PAOZZ	5935-252-6340	CAP, ELECTRICAL 040..... CW123AU (81349)	EA	2	*	*	*	*	17	040
PAOZZ	5935-252-6340	CAP, ELECTRICAL 041..... CW123AU (81349)	EA	REF	*	*	*	*	17	041
PAOZZ	5935-149-4066	CONNECTOR, PLUG, ELECTRICAL UG-88C/U P1	EA	2	*	*	*	*	50	P1
PAOZZ	5935-149-4066	CONNECTOR, PLUG, ELECTRICAL UG-88C/U P2	EA	REF	*	*	*	*	50	P2
PAOZZ	5961-194-9409	SEMI-CONDUCTOR DEVICE, DIODE CR1..... 1N26 (81349)	EA	1	*	*	*	*	50	CR1
PAOZZ	5960-262-0152	ELECTRON TUBE V2..... 6AU6WA (81349)	EA	7	*	*	*	*	43	V2
PAOZZ	5960-262-0152	ELECTRON TUBE V3..... 6AU6WA (81349)	EA	REF	*	*	*	*	43	V3
PAOZZ	5960-262-0152	ELECTRON TUBE V4..... 6AU6WA (81349)	EA	REF	*	*	*	*	43	V4
PAOZZ	5960-262-0152	ELECTRON TUBE V6..... 6AU6WA (81349)	EA	REF	*	*	*	*	43	V6
PAOZZ	5960-262-0152	ELECTRON TUBE V7..... 6AU6WA (81349)	EA	REF	*	*	*	*	43	V7
PAOZZ	5960-262-0152	ELECTRON TUBE V20..... 6AU6WA (81349)	EA	REF	*	*	*	*	45	V20
PAOZZ	5960-262-0152	ELECTRON TUBE V22..... 6AU6WA (81349)	EA	REF	*	*	*	*	45	V22
PAOZZ	5960-188-0806	ELECTRON TUBE V5..... 6BA7 (81349)	EA	1	*	*	*	*	43	V5
PAOZZ	5960-262-0167	ELECTRON TUBE V8..... 12AT7WA (81349)	EA	6	*	*	*	*	43	V8
PAOZZ	5960-262-0167	ELECTRON TUBE V10..... 12AT7WA (81349)	EA	REF	*	*	*	*	43	V10
PAOZZ	5960-262-0167	ELECTRON TUBE V11..... 12AT7WA (81349)	EA	REF	*	*	*	*	43	V11
PAOZZ	5960-262-0167	ELECTRON TUBE V12..... 12AT7WA (81349)	EA	REF	*	*	*	*	43	V12
PAOZZ	5960-262-0167	ELECTRON TUBE V13..... 12AT7WA (81349)	EA	REF	*	*	*	*	43	V13
PAOZZ	5960-262-0167	ELECTRON TUBE V15..... 12AT7WA (81349)	EA	REF	*	*	*	*	43	V15
PAOZZ	5960-166-7667	ELECTRON TUBE V9..... 6AH6 (81349)	EA	3	*	*	*	*	43	V9
PAOZZ	5960-166-7667	ELECTRON TUBE V14..... 6AH6 (81349)	EA	REF	*	*	*	*	43	V14