


## TECHNICAL MANUAL

**OPERATOR'S, UNIT, DIRECT SUPPORT, AND  
GENERAL SUPPORT MAINTENANCE MANUAL (INCLUDING  
REPAIR PARTS AND SPECIAL TOOLS LIST)**

**FOR  
TRAILER, CARGO, 3/4-TON, 2-WHEEL  
M101 A2 (2330-01-102-4697)  
M101 OIA3 (2330-01-372-5641)**

**TRAILER, CHASSIS, 3/4-TON, 2-WHEEL  
M116A2 (2330-01-101-8434)  
M116A2E1 (2330-01-333-9773)**

**TRAILER, CHASSIS, 1-TON, 2-WHEEL  
M116A3 (2330-01-359-0080)**

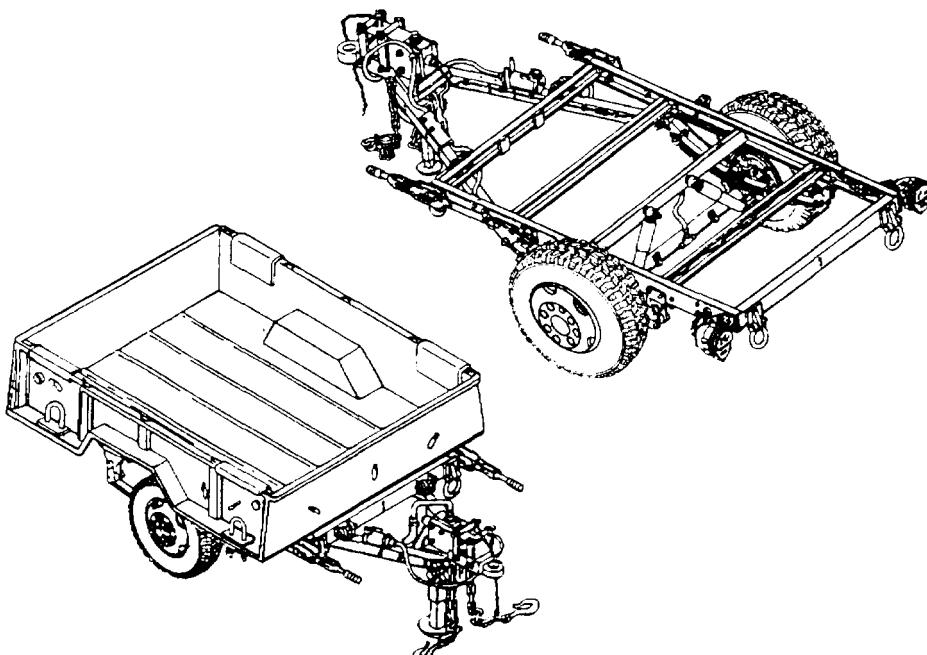

**INTRODUCTION** 1-1

**OPERATING  
INSTRUCTIONS** 2-1

**OPERATOR/CREW  
PMCS** 2-3

**OPERATOR/CREW  
TROUBLESHOOTING  
PROCEDURES** 3-2

**UNIT  
PMCS** 4-3

**UNIT  
TROUBLESHOOTING  
PROCEDURES** 4-7

**DIRECT SUPPORT AND  
GENERAL SUPPORT  
MAINTENANCE** 5-1

**MAINTENANCE  
ALLOCATION CHART** B-1

**REPAIR PARTS AND  
SPECIAL TOOLS LIST** E-1

**LUBRICATION  
INSTRUCTIONS** I-1

**INDEX** INDEX-1

Approved for public release; distribution is unlimited.

TECHNICAL MANUAL  
NO. 9-2330-202-14&P

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
Washington D.C., 12 May 1997

OPERATOR'S, UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT  
MAINTENANCE MANUAL (INCLUDING REPAIR PARTS  
AND SPECIAL TOOLS LIST)

FOR

TRAILER, CARGO, 3/4-TON, 2-WHEEL  
M101A2 (2330-01-102-4697)  
M101 A3 (2330-01-372-5641)

TRAILER, CHASSIS, 3/4-TON, 2-WHEEL  
M116A2 (2330-01-101-8434)  
M116A2E1 (2330-01-333-9773)

TRAILER, CHASSIS, 1-TON, 2-WHEEL  
MI 116A3 (2330-01-359-0080)

**REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS**

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2, located in the back of this manual, directly to: Commander, U.S. Army Tank-automotive and Armaments Command, ATTN: AMSTA-IM-OPIT, Warren, MI 48397-5000. A reply will be furnished to you.

You may also provide DA Form 2028-2 information to TACOM via datafax or e-mail:

- TACOM's fax number is DSN 786-6323 or (810) 574-6323
- TACOM's e-mail address is amsta-mmaa@cc.tacom.army.mil

Approved for public release; distribution is unlimited.

**TABLE OF CONTENTS**

	Page
HOW TO USE THIS MANUAL .....	vi
CHAPTER      1      INTRODUCTION	
Section I. General Information .....	1-1

\*This publication supersedes TM 9-2330-202-14&P dated 7 October 1993.

## TABLE OF CONTENTS (continued)

<b>CHAPTER</b>	<b>1 INTRODUCTION (continued)</b>	<b>Page</b>
Section	II. Equipment Description and Data .....	1-4
Section	III. Principles of Operation .....	1-17
<b>CHAPTER</b>	<b>2 OPERATING INSTRUCTIONS</b>	
Section	I. Description and Use of Operator's Controls and Indicators .....	2-1
Section	II. Operator/Crew Preventive Maintenance Checks and Services (PMCS).....	2-3
Section	III. Operation Under Usual Conditions.....	2-11
Section	IV. Operation Under Unusual Conditions.....	2-26
<b>CHAPTER</b>	<b>3 OPERATOR/CREW MAINTENANCE INSTRUCTIONS</b>	
Section	I. Lubrication Instructions.....	3-1
Section	II. Operator/Crew Troubleshooting Procedures .....	3-2
<b>CHAPTER</b>	<b>4 UNIT MAINTENANCE</b>	
Section	I. Repair Parts; Tools; Special Tools; Test, Measurement, and Diagnostic Equipment (TMDE); and Support Equipment.....	4-1
Section	II. Service upon Receipt.....	4-2
Section	III. Unit Preventive Maintenance Checks and Services (PMCS) .....	4-3
Section	IV. Unit Troubleshooting Procedures .....	4-7
Section	V. General Maintenance Instructions.....	4-34
Section	VI. Electrical System Maintenance .....	4-39
Section	VII. Brake System Maintenance.....	4-49
Section	VIII. Wheels, Hubs, and Brakedrums Maintenance .....	4-83
Section	IX. Frame and Towing Attachments Maintenance .....	4-92
Section	X. Springs and Shock Absorbers Maintenance .....	4-104
Section	XI. Body Maintenance .....	4-110
Section	XII. Accessory Items Maintenance .....	4-116
Section	XIII. Special Purpose Kits Maintenance .....	4-119
Section	XIV. Painting and Identification Marking .....	4-121
Section	XV. Preparation for Storage and Shipment.....	4-122

## TABLE OF CONTENTS (continued)

<b>CHAPTER</b>	<b>5</b>	<b>DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE</b>	<b>Page</b>	
Section	I.	Axle Maintenance .....	5-1	
Section	II.	Brakedrum and Tire Maintenance .....	5-3	
Section	III.	Frame Assembly Maintenance .....	5-6	
Section	IV.	Accessory Items Maintenance.....	5-7	
<b>APPENDIX</b>	<b>A</b>	<b>REFERENCES .....</b>	<b>A-1</b>	
<b>APPENDIX</b>	<b>B</b>	<b>MAINTENANCE ALLOCATION CHART</b>		
Section	I.	Introduction .....	B-1	
Section	II.	Maintenance Allocation Chart for M101 and M116 Series Trailers .....	B-4	
Section	III.	Tool and Test Equipment Requirements .....	B-7	
Section	IV.	Remarks .....	B-7	
<b>APPENDIX</b>	<b>C</b>	<b>COMPONENTS OF END ITEM AND BASIC ISSUE ITEMS LISTS .....</b>	<b>C-1</b>	
<b>APPENDIX</b>	<b>D</b>	<b>ADDITIONAL AUTHORIZATION LIST</b>		
Section	I.	Introduction .....	D-1	
Section	II.	Additional Authorization List (AAL) .....	D-2	
<b>APPENDIX</b>	<b>E</b>	<b>REPAIR PARTS AND SPECIAL TOOLS LIST</b>		
Section	I.	Introduction .....	E-1	
Section	II.	Repair Parts List		
<b>GROUP</b>	<b>06</b>	<b>ELECTRICAL SYSTEM</b>	<b>Page</b>	<b>Illus/ Figure</b>
0609	-	LIGHTS.....	1-1	
		COMPOSITE STOPLIGHT-TAILLIGHT .....	1-1	1
0613	-	HULL OR CHASSIS WIRING HARNESS .....	2-1	
		CHASSIS WIRING HARNESS (COMPOSITE STOPLIGHT-TAILLIGHT) ...	2-1	2
		INTERVEHICULAR CABLE .....	3-1	3
		WIRING HARNESS AND INTERVEHICULAR CABLE ATTACHMENTS....	4-1	4

## TABLE OF CONTENTS (continued)

			Page	Illus/ Figure
GROUP	11	REAR AXLE		
1100	-	REAR AXLE ASSEMBLY .....	5-1	
		REAR AXLE ASSEMBLY .....	5-1	5
GROUP	12	BRAKES		
1201	-	HANDBRAKES.....	6-1	
		CABLE AND CONDUIT ASSEMBLY.....	6-1	6
		HANDBRAKE LEVER.....	7-1	7
1202	-	SERVICE BRAKES .....	8-1	
		BRAKE ASSEMBLY .....	8-1	8
1204	-	HYDRAULIC BRAKE SYSTEM.....	9-1	
		WHEEL CYLINDER.....	9-1	9
		HYDRAULIC BRAKE ACTUATOR ASSEMBLY.....	10-1	10
		HYDRAULIC BRAKE LINES .....	11-1	11
GROUP	13	WHEELS AND TRACKS		
1311	-	WHEEL ASSEMBLY .....	12-1	
		WHEEL AND HUB ASSEMBLY .....	12-1	12
		WHEEL AND RUNFLAT ASSEMBLY (M101A3 and M116A3).....	13-1	13
1313	-	TIRES, TUBES, AND TIRE CHAINS.....	14-1	
		TIRE AND VALVE .....	14-1	14
GROUP	15	FRAME, TOWING ATTACHMENTS, DRAWBARS, AND ARTICULATION SYSTEMS		
1501	-	FRAME ASSEMBLY.....	15-1	
		CHASSIS FRAME ASSEMBLY .....	15-1	15
1503	-	PINTLES AND TOWING ATTACHMENTS .....	16-1	
		DRAWBAR ASSEMBLY AND SAFETY CHAINS.....	16-1	16
1507	-	LANDING GEAR, LEVELING JACKS .....	17-1	
		FRONT SUPPORT LEG.....	17-1	17
GROUP	16	SPRINGS AND SHOCK ABSORBERS		
1601	-	SPRINGS.....	18-1	
		SPRING ASSEMBLY.....	18-1	18
1604	-	SHOCK ABSORBER EQUIPMENT .....	19-1	
		SHOCK ABSORBER .....	19-1	19
GROUP	18	BODY, CAB, HOOD, AND HULL		
1810	-	CARGO BODY .....	20-1	
		CARGO BODY, RACK, AND TAILGATE ASSEMBLY (M101A2 and ..... M101A3)	20-1	20
GROUP	22	BODY, CHASSIS, AND HULL ACCESSORY ITEMS		
2201	-	CANVAS, RUBBER, OR PLASTIC ITEMS .....	21-1	
		CANVAS COVER ASSEMBLY AND BOWS (M101A2 and M101A3).....	21-1	21

**TABLE OF CONTENTS (continued)**

			Page	Illus/ Figure
2202	-	ACCESSORY ITEMS .....	22-1	
		REFLECTOR (M101A2 and M101A3).....	22-1	22
2210	-	DATA PLATES AND INSTRUCTION HOLDERS .....	23-1	
		DATA PLATES .....	23-1	23
<b>GROUP 33 SPECIAL PURPOSE KITS</b>				
3307	-	SPECIAL PURPOSE KITS.....	24-1	
		REAR STABILIZER KIT .....	24-1	24
<b>GROUP 95 GENERAL USE STANDARDIZED PARTS</b>				
9501	-	BULK MATERIAL .....	BULK-1	
		BULK .....	BULK-1	BULK
Section	III	Special Tools List (If Applicable)		
Section	IV	Cross-Reference Indexes		
		PART NUMBER INDEX .....	I-1	
<b>APPENDIX F EXPENDABLE AND DURABLE ITEMS LIST</b>				
Section	I	Introduction.....	F-1	
Section	II	Expendable and Durable Items List.....	F-2	
<b>APPENDIX G ILLUSTRATED LIST OF MANUFACTURED ITEMS</b>				
Section	I	Introduction.....	G-1	
Section	II	Manufacturing Instructions .....	G-3	
<b>APPENDIX H TORQUE VALUES FOR THREADED FASTENERS .....</b>				
<b>APPENDIX I LUBRICATION INSTRUCTIONS .....</b>				
<b>INDEX .....</b>			<b>INDEX-1</b>	

## HOW TO USE THIS MANUAL

---

### **SCOPE.**

---

This technical manual provides you with the information you will need to operate and maintain the M101 Series and M116 Series trailers.

The information contained in this manual is presented in five chapters and nine appendixes, one of which is a repair parts and special tools list (RPSTL). Each chapter is divided into sections covering operating procedures and/or other information for specific systems or components.

Note that Appendix A of this manual gives the full title of every manual, form, pamphlet, or other document referenced in this manual.

### **INDEXING.**

---

Four indexing procedures are used to help you locate information quickly:

- Cover index. Lists chapter titles and important parts of the manual, with corresponding page numbers. Each chapter or part listed is boxed in, with a black outer edge that is in line with the first page of that chapter or part.
- Table of contents. The table of contents, which follows the summary of warnings, lists all chapters and sections numerically, with corresponding page numbers.
- Section indexes. Each section starts with a numerical listing of all paragraphs in that section.
- Alphabetical index. The alphabetically arranged subject index starts on page Index-1.

### **WARNINGS, CAUTIONS, AND NOTES.**

---

You must read and understand this manual BEFORE operating the M101 Series and M116 Series trailers.

Throughout this manual you will see WARNING, CAUTION, and NOTE headings. There are good reasons for every one of these notices.

#### **WARNING**

A **WARNING** is used to alert the user to hazardous operating and maintenance procedures, practices, or conditions that could result in injury or death. **WARNINGs must be strictly observed.**

#### **CAUTION**

A **CAUTION** is used to alert the user to hazardous operating and maintenance procedures, practices, or conditions that could result in damage to, or destruction of, equipment or mission effectiveness. **Captions must be strictly observed.**

---

**WARNINGS, CAUTIONS, AND NOTES (continued).**

---

**NOTE**

A NOTE highlights an essential operating or maintenance procedure, condition, or statement.

WARNINGS and CAUTIONS appear immediately preceding the step to which they pertain. It is important to read and thoroughly understand the WARNINGS and/or CAUTIONS before beginning maintenance.

NOTES may precede or follow the steps to which they pertain, depending on what makes the most sense.

vii/(viii blank)

## CHAPTER 1 INTRODUCTION

### Section I. GENERAL INFORMATION

Paragraph Number	Paragraph Title	Page Number
1-1	Scope .....	1-1
1-2	Maintenance Forms, Records, and Reports .....	1-1
1-3	Destruction of Army Materiel To Prevent Enemy Use .....	1-1
1-4	Preparation for Storage or Shipment .....	1-1
1-5	Quality Assurance .....	1-2
1-6	Reporting Equipment Improvement Recommendations (EIRs) .....	1-2
1-7	List of Abbreviations and Acronyms.....	1-2
1-8	Warranty Information .....	1-3
1-9	Safety, Care, and Handling.....	1-3
1-10	Corrosion Prevention and Control.....	1-3

---

#### **1-1. SCOPE.**

---

- a. This manual describes Operator's, Unit, Direct Support, and General Support maintenance and contains the repair parts and special tools list for the following:
  - Trailer, Cargo: 3/4-Ton, 2-Wheel, M101A2 and M101A3;
  - Trailer, Chassis: 3/4-Ton, 2-Wheel, M116A2 and M116A2E1; and
  - Trailer, Chassis: 1-Ton, 2-Wheel, M116A3.
- b. All M101 Series cargo trailers use the M116 Series chassis.
- c. Throughout this manual, the terms "curb side" and "road side" are used to describe views of the trailer. As viewed from the rear, curb side is the right side and road side is the left side.
- d. The trailers are used to carry payloads over highway or cross-country.

---

#### **1-2. MAINTENANCE FORMS, RECORDS, AND REPORTS.**

---

Department of the Army forms and procedures used for equipment maintenance will be those prescribed by DA Pam 738-750, The Army Maintenance Management System (TAMMS).

---

#### **1-3. DESTRUCTION OF ARMY MATERIEL TO PREVENT ENEMY USE.**

---

Refer to TM 750-244-6 for procedures on the destruction of military vehicles to prevent enemy use.

---

#### **1-4. PREPARATION FOR STORAGE OR SHIPMENT.**

---

For information on preparing the trailers for storage or shipment, refer to Chapter 4, Section XV.