


TM 9-2330-326-14&P

TECHNICAL MANUAL

**OPERATOR'S, UNIT, DIRECT SUPPORT,
AND GENERAL SUPPORT MAINTENANCE MANUAL
(INCLUDING REPAIR PARTS AND SPECIAL TOOLS LIST)
FOR
SEMITRAILER, TACTICAL,
DROP DECK BREAKBULK/CONTAINER
TRANSPORTER, 22-1/2 TON, M871A3**

NSN 2330-01-458-6865

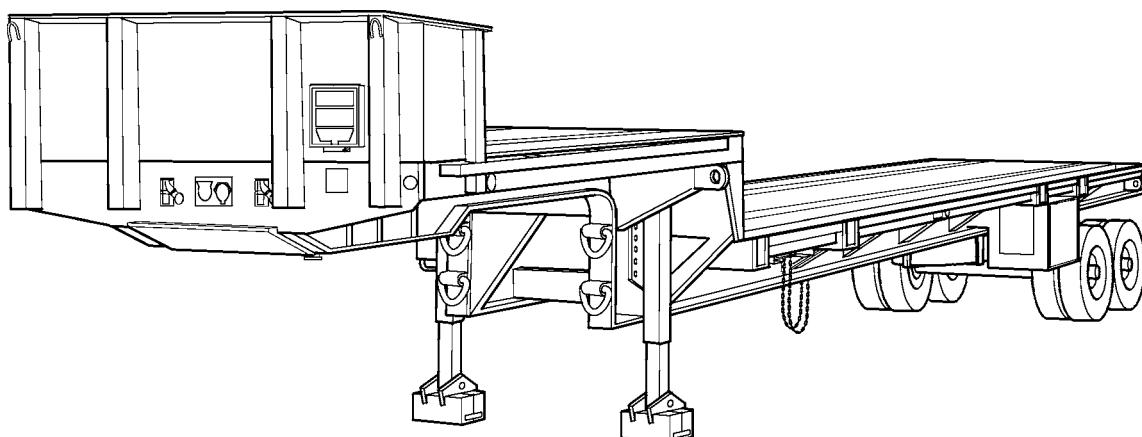

DISTRIBUTION STATEMENT A—Approved for public release; distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY

20 May 2003

TM 9-2330-326-14&P

TECHNICAL MANUAL

**OPERATOR'S, UNIT, DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE MANUAL
(INCLUDING REPAIR PARTS AND SPECIAL TOOLS LIST)**

FOR

**SEMITRAILER, TACTICAL,
DROP DECK BREAKBULK/CONTAINER
TRANSPORTER, 22-1/2 TON, M871A3**

NSN 2330-01-458-6865

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this publication. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Submit your DA Form 2028 (Recommended Changes to Publications and Blank Forms), through the Internet, on the Army Electronic Product Support (AEPS) website. The Internet address is <http://aebs.ria.army.mil>. If you need a password, scroll down and click on "ACCESS REQUEST FORM". The DA Form 2028 is located in the ONLINE FORMS PROCESSING section of the AEPS. Fill out the form and click on SUBMIT. Using this form on the AEPS will enable us to respond quicker to your comments and better manage the DA Form 2028 program. You may also mail, fax or E-mail your letter, DA Form 2028 direct to: AMSTA-LC-CI/TECH PUBS, TACOM-RI, 1 Rock Island Arsenal, Rock Island, IL 61299-7630. The email address is TACOM-TECH-PUBS@ria.army.mil. The fax number is DSN 793-0726 or Commercial (309) 782-0726.

DISTRIBUTION STATEMENT A—Approved for public release; distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY

20 May 2003

TABLE OF CONTENTS

	Page
How To Use This Manual.....	vi
Chapter 1 Introduction	
1-1. Type of Manual	1-1
1-2. Model Number and Equipment Name	1-1
1-3. Transportability	1-1
1-4. Operating Under Unusual Conditions.....	1-2
1-5 General Instructions for Corrosion Protection of the M871A3 Semitrailer	1-4
1-6. Equipment Data	1-6
1-7. Warranty Coverage.....	1-9
1-8. Equipment Capabilities and Features.....	1-9
1-9. Tie-downs and Twistlock Quantites and Capacities.....	1-9
1-10..ROWPU (Reverse Osmosis Water Purification Unit)	1-10
1-11. LADS (Laundry Advanced System).....	1-10
Chapter 2 Operator Instructions	
2-1 Landing Legs	2-1
2-2. Float Pads (Ground Board Assemblies).....	2-2
2-3. Nose Plate	2-2
2-4. Service Lights	2-3
2-5. Kingpin	2-4
2-6. Side Boards and Stakes	2-5
2-7. Side Board Assembly	2-7
2-8. Location and Description of Major Components	2-10
Chapter 3 Operator/Crew PMCS.....	3-1
Chapter 4 Unit PMCS.....	4-1
Chapter 5 Unit Troubleshooting.....	5-1
Chapter 6 Unit Maintenance	
6-1. General Maintenance Instructions	6-1
6-1A. Electrical Schematic for M871A3.....	6-6
6-2. Blackout Lights Replacement	6-7
6-3. Clearance Lights Replacement	6-9
6-4. LED Taillights Replacement	6-11
6-5. Receptacle Converter Box Replacement	6-13
6-6. Trailer Wiring Harnesses Replacement.....	6-15
6-7. Service Brakes — S-Camshaft Replacement.....	6-19
6-8. Service Brakes — Shoes and Lining Replacement.....	6-23
6-9. Hubs and Drums Replacement	6-25
6-10. Automatic Slack Adjusters Replacement.....	6-29
6-11. ECU Valve Replacement	6-31
6-12. ABS Brake Power Connections Replacement.....	6-33
6-13. Air Lines and Fittings Replacement.....	6-37
6-14. Air Brake Chambers Replacement	6-41
6-15. Air Reservoirs Replacement.....	6-43
6-16. Air Brake Chamber Control Valve Replacement	6-45
6-17. Service and Emergency Swivel Couplings (Gladhands) Replacement.....	6-47

Chapter 6 Unit Maintenance (Cont.)	Page	
6-18. Wheel Assemblies Replacement.....	6-49	
6-19. Dock Bumpers and Suspension Stops Replacement.....	6-53	
6-20. Retractable Twist Locks Replacement	6-55	
6-21. Tiedown Rings Replacement.....	6-57	
6-22. Spare Tire Carrier Replacement.....	6-59	
6-23. Landing Gear Replacement.....	6-61	
6-24. Ground Boards Replacement.....	6-65	
6-25. Bulkhead and Stowage Rack Assembly Replacement	6-67	
6-26. Corner and Side Stakes Replacement	6-71	
6-27. Mud Flaps Replacement.....	6-73	
6-28. Floor Deck Boards Replacement.....	6-75	
6-29. Stowage Box Replacement	6-79	
6-30. Manifest Box Replacement.....	6-81	
6-31. Reflectors Replacement	6-83	
6-32. Data Plates Replacement.....	6-85	
6-33. ABS Warning Light Replacement	6-87	
6-34. Hubodometer Replacement.....	6-89	
6-35. Conspicuity Tape Replacement.....	6-91	
Chapter 7 Direct Support and General Support Maintenance		
7-1. General Maintenance Instructions.....	7-1	
7-2. Suspension Replacement.....	7-7	
7-3. Tire Repair	7-9	
7-4. D-Rings Replacement	7-13	
7-5. Rear Bumper Assembly Replacement	7-15	
7-6. Kingpin Replacement	7-17	
7-7. Tire Repair	7-21	
Appendix A	References	A-1
Appendix B	MAC.....	B-1
Appendix C	Lubrication Instructions	C-1
Appendix D	COEI/BII	D-1
Appendix E	AAL	E-1
Appendix F	Expendable and Durable Items List.....	F-1
Appendix G	Receptacle Converter Box Maintenance.....	G-1
Appendix H	Supplemental Information	
H-1. Scope	H-1	
H-2. 10/20 Inspection Checklist.....	H-2	
H-3. Maintenance Expenditure Limits (MEL).....	H-8	
H-4. Wood Decking	H-9	
H-5. What's a "Board Foot"?.....	H-12	
H-6. Torque Table.....	H-14	
H-7. Fastener Size and Thread Pattern	H-17	
H-8. Fastener Grade.....	H-18	
H-9. Metric Fasteners	H-19	
H-10. Converting Pound-Feet To Newton-Meters.....	H-19	
H-11. Converting Fractions (inches) To Decimals (inches) and Metric Equivalents	H-20	
H-12. Conversion Factors.....	H-21	

TM 9-2330-326-14&P

Appendix H Supplemental Information (Cont.)	Page
H-13. Kingpin Maintenance and Replacement Recommendations	H-23
H-14. Fifth Wheel and Upper Coupler Connections	H-25
H-15. Coupling Instructions	H-27
H-16. Technical Information for LED and Filament Bulb Lighting LED	H-31
H-17. 10 Tire Tips	H-32
H-18. Landing Gear Operating, Maintenance, and Repair Procedures.....	H-33
H-19. How To Identify Anchorlok Spring Brakes	H-37
H-20. Sealed Brake Installation and Service.....	H-38
H-21. Axles	H-49
H-22. Hub Piloted Disc Wheels	H-51
H-23. Troubleshooting Hubs.....	H-52
H-24. Troubleshooting Wheel Problems	H-54
H-25. Brake Drum Re-Bore Limits and/or Maximum Wear Diameter.....	H-60
H-26. Brake Drum Data Sheet.....	H-61
H-27. Brake Drum Service Information	H-61
H-28. Troubleshooting Brake Drums	H-64
H-29. Troubleshooting Spring Parking Brake.....	H-70
H-30. CR Scotseal	H-73
H-31. Bearings.....	H-76
H-32. 10 Wheel Studs.....	H-86
H-33. Enhanced Easy-Stop Trailer ABS with PLC	H-87
H-34. Service Brakes S-Camshafts- and Shoes	H-133
H-35. Pro-Torq Spindle Nut	H-135
H-36. Hubodometer	H-143
H-37. Automatic Slack Adjusters	H-147
H-38. Suspension Configurations and Parts Identification.....	H-151

Appendix I RPSTL	Figure	Page
Group 06 Electrical System		
0609 Blackout Light.....	1	I-6
0609 Clearance Lights	2	I-8
0609 LED Taillight.....	3	I-10
0613 Converter Box	4	I-12
0613 Wiring Harnesses.....	5	I-16
Group 11 Rear Axle		
1101 Axle Assembly.....	6	I-18
Group 12 Brakes		
1202 Brake Camshaft	7	I-20
1202 Service Brake.....	8	I-22
1206 Slack Adjuster	9	I-24
1207 ECU Valve Assembly	10	I-26
1207 ABS Brake Power Connections	11	I-28
1208 Air Lines and Fittings	12	I-30
1208 Air Brake Chamber	13	I-32
1208 Air Reservoirs.....	14	I-34
1208 Air Brake Chamber Control Valve.....	15	I-36
1208 Gladhands	16	I-38

Appendix I	RPSTL (Cont.)		Figure	Page
Group 13 Wheels, Hubs, and Drums\				
1311	Hub and Drum.....		17	I-40
1311	Wheel Assembly		18	I-42
1313	Tire		19	I-44
Group 15 Frame, Towing Attachments				
1501	Retractable Twist Lock.....		20	I-46
1501	Tiedown Ring		21	I-48
1503	Kingpin		22	I-50
1504	Spare Tire Carrier		23	I-52
1507	Landing Gear		24	I-54
1507	Ground Board Assembly.....		25	I-56
Group 16 Springs and Shock Absorbers				
1601	Suspension		26	I-58
1601	Suspension Stops		27	I-60
Group 18 Body				
1801	Bulkhead and Stowage Rack Assembly		28	I-62
1801	Corner and Side Stakes.....		29	I-64
1801	Side Board Assembly.....		30	I-66
1801	Mud Flap		31	I-68
1805	Floor Deck Boards		32	I-70
1808	Stowage Box		33	I-72
1808	Manifest Box		34	I-74
Group 21 Bumpers and Guards				
2101	Rubber Dock Bumpers.....		35	I-76
2101	Run Under Protection		36	I-78
Group 22 Body, Chassis, and Hull Accessory Items				
2202	Reflectors		37	I-80
2202	Conspicuity Tape		38	I-82
2210	Data Plates.....		39	I-84
Group 33 Special Purpose Kits				
3307	Kits (No Illustration).....		40	I-87
Group 42 Electrical Equipment (Not contained in other groups)				
4209	ABS Warning Light.....		41	I-88
Group 47 Gages (Non-Electrical)				
4701	Hubodometer		42	I-90
CAGE Codes and Vendor List				I-94

HOW TO USE THIS MANUAL

SCOPE

This manual provides you with the information you will need to operate and maintain the M871A3 Semitrailer.

MANUAL CONTENT

Front Matter

There are general warnings that start on the first right-hand page immediately after the cover that should be read before performing any maintenance on the Semitrailer.

The title block page includes the reporting of errors and recommending improvements statement.

The table of contents lists the chapters and appendixes in this manual.

Chapters/Applications

- Chapter 1: provides general information, location and description of major components, equipment data, and warranty coverage.
- Chapter 2: provides Operator instructions.
- Chapter 3: provides Operator/Crew PMCS.
- Chapter 4: provides Unit PMCS.
- Chapter 5: provides Unit troubleshooting.
- Chapter 6: provides Unit maintenance instructions.
- Chapter 7: provides Direct Support and General Support maintenance instructions.
- Appendix A: provides the publications referenced in this manual.
- Appendix B: provides the MAC.
- Appendix C: provides lubrication instructions.
- Appendix D: provides the COEI and BII lists.
- Appendix E: provides the AAL.
- Appendix F: provides the expendable and durable items.
- Appendix G: provides converter box maintenance instructions.
- Appendix H: provides supplemental information.
- Appendix I: provides the RPSTL, CAGE codes, vendor list, NSN cross-reference index, and part number cross-reference index.

Alphabetical Index

An index is located at the end of this manual that provides an alphabetical listing of information and components/assemblies contained in this manual.

DA Form 2028-2

DA Form 2028-2 is used to report errors and to recommend improvements for the tasks in this manual.

Chapters/Appendices (Cont.)

Metric Conversion Chart

The metric conversion chart converts English measurements to metric equivalents. Measurements in this manual are provided in both English and metric units.

Warnings, Cautions, and Notes

You must read and understand this manual BEFORE operating the M871A3 Semitrailer.

Throughout this manual you will see **WARNING**, **CAUTION**, and **NOTE** headings. There are good reasons for every one of these notices:

WARNING

A warning is used to alert the user to hazardous operating and maintenance procedures, practices, or conditions that could result in injury or death. Warnings must be strictly observed.

CAUTION

A caution is used to alert the user to hazardous operating and maintenance procedures, practices, or conditions that could result in damage to, or destruction of, equipment or mission effectiveness. Cautions must be strictly observed.

NOTE

A note highlights an essential operating or maintenance procedure, condition, or statement.

Warnings and cautions appear immediately preceding the step to which they pertain. It is important to read and thoroughly understand the warnings and/or cautions before beginning maintenance. Notes may precede or follow the steps to which they pertain, depending on what makes the most sense.

CHAPTER 1

INTRODUCTION

1-1. TYPE OF MANUAL

This manual is a Commercial Off-The-Shelf (COTS) Technical Manual (TM).

1-2. MODEL NUMBER AND EQUIPMENT NAME

M871A3 22-1/2 Ton, Drop Deck Breakbulk/Container Transporter Tactical Semicrailer.

1-3. TRANSPORTABILITY

NOTE

Specific tiedown transportability data for rail, truck, and fixed wing air movement can be found in MTMCTEA Pam 55-19, MTMCTEA Pam 55-20, and MTMCTEA Pam 55-24, respectively.

1. The M871A3 is transportable in a C-141 at the load master's discretion dependant on bulkhead height and height of cargo.

NOTE

The bulkhead is removable.

2. The M871A3, loaded/unloaded, is transportable by C-5 and C-5A fixed wing aircraft.
3. The M871A3, loaded/unloaded, is transportable by C-17 fixed wing aircraft.
4. The M871A3, loaded/unloaded, is transportable by rail and with ISO container (CONUS).
5. The M871A3, loaded/unloaded, is transportable by ship.
6. The M871A3, loaded/unloaded, is able to be loaded/off loaded onto roll-on/roll-off ships using 15 degree ramps.
7. The M871A3, loaded/unloaded, is transportable by barge as dictated by the length of the semitrailer and barge load capacity.
8. The M871A3, unloaded, is transportable by rotary wing aircraft. Reference FM 10-450-5.
9. The M871A3, unloaded, is transportable in C-130 fixed wing aircraft,

1-4. OPERATING UNDER UNUSUAL CONDITIONS

1. Extreme Cold.

Startup:

- a. Be careful when placing the semitrailer in motion after a shutdown. Congealed lubricants can cause part failure.
- b. Tires may freeze to the ground or have a flat spot if under inflated.
- c. Brake shoes may freeze to the brake drums and need to be heated to prevent damage to mating surfaces.
- d. Refer to FM 9-207 and FM 21-305 for special instructions on driving hazards in snow and ice that may be encountered during extreme cold weather conditions.

Shutdown:

- a. For short periods, park in a sheltered spot out of the wind; for longer shutdown periods, if high, dry ground is not available, prepare a footing of planks or brush.
- b. Remove all buildup of ice and snow as soon as possible after shutdown.
- c. Cover and shield the semitrailer with canvas covers if available. Keep the ends of covers off the ground to keep them from freezing to the ground. Drain air/moisture from air tanks.

2. Extreme Heat.

- a. Refer to TB 43-0239 and FM 90-3 for maintenance and operations, respectively, under desert conditions.
- b. Do not park the semitrailer in the sun for long periods of time. Heat and sunlight shorten the life of tires.
- c. Park the semitrailer where it will get maximum protection from heat, sun, and dust.

3. Rainy or Humid Conditions.

Frequently inspect, clean, and lubricate inactive equipment to prevent rust and fungus accumulation.

4. Operation in Salt Water Areas.

Salt water will cause rapid corrosion of metal parts. After operation, wash the semitrailer with fresh water. Clean, inspect, and lubricate equipment frequently.

5. Operation in Snow.

Refer to FM 21-305 for special instructions on operation in snow.