

TM 9-2330-330-14&P


TECHNICAL MANUAL

**OPERATOR'S, ORGANIZATIONAL, DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE MANUAL
(INCLUDING REPAIR PARTS AND SPECIAL TOOLS LIST)**

FOR

**SEMITRAILER, FUEL TANKER: 5000-GALLON,
FUEL-DISPENSING, AUTOMOTIVE,
M969A3**

(NSN 2330-01-495-0043)

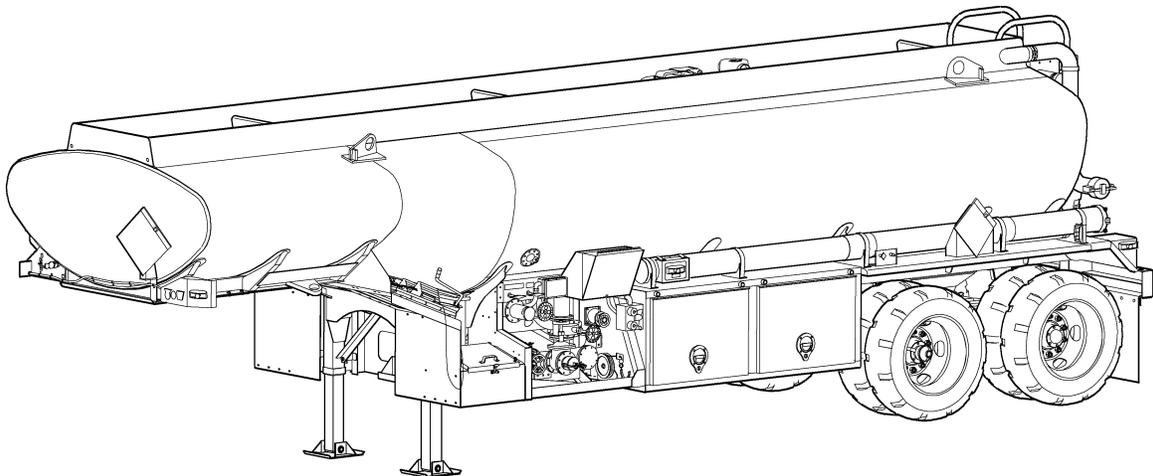

DISTRIBUTION STATEMENT A—Approved for public release; distribution is unlimited.

**HEADQUARTERS, DEPARTMENT OF THE ARMY
DECEMBER 2003**

TM 9-2330-330-14&P

TECHNICAL MANUAL

OPERATOR'S, ORGANIZATIONAL, DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE MANUAL
(INCLUDING REPAIR PARTS AND SPECIAL TOOLS LIST)

FOR

SEMITRAILER, FUEL TANKER: 5000-GALLON
FUEL-DISPENSING, AUTOMOTIVE,
M969A3

(NSN 2330-01-495-0043)

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this publication. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Submit DA Form 2028 (Recommended Changes to Publications and Blank Forms), through the Internet, on the Army Electronic Product Support (AEPS) website. The internet address is <http://aeeps.ria.army.mil>. If you need a password, scroll down and click on "ACCESS REQUEST FORM." The DA Form 2028 is located in the ON-LINE FORMS PROCESSING section of the AEPS. Fill out the form and click on SUBMIT. Using this form on the AEPS will enable us to respond quicker to your comments and better manage the DA Form 2028 program. You may also mail, fax, or email your letter, or DA Form 2028 direct to: Technical Publication Information Office, TACOM-RI, 1 Rock Island, IL 61299-7630. The email address is TACOM-TECH-PUBS@ria.army.mil. The fax number is DSN 793-0726 or Commercial (309) 782-0726. A reply will be furnished to you.

DISTRIBUTION STATEMENT A—Approved for public release: distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY

17 DECEMBER 2003

TABLE OF CONTENTS

	<u>WP Sequence No.</u>
Semitrailer General Information	0001 00
CHAPTER 1: INTRODUCTORY INFORMATION WITH THEORY OF OPERATION	
Semitrailer Equipment Description and Data	0002 00
Electrical System Theory of Operation.....	0003 00
Engine and Pump Theory of Operation.....	0004 00
Antilock Brake System (ABS) Theory of Operation.....	0005 00
CHAPTER 2: OPERATOR INSTRUCTIONS	
Description and Use of Controls and Indicators.....	0006 00
Operation Under Usual Conditions.....	0007 00
Operation Under Unusual Conditions.....	0008 00
CHAPTER 3: OPERATOR TROUBLESHOOTING	
Introduction.....	0009 00
Malfunction/Symptom Index.....	0010 00
Engine Troubleshooting	0011 00
Electrical System Troubleshooting	0012 00
Brake System Troubleshooting	0013 00
Fuel System Troubleshooting.....	0014 00
Tires Troubleshooting	0015 00
Landing Gear Troubleshooting.....	0016 00
CHAPTER 4: ORGANIZATIONAL TROUBLESHOOTING	
Introduction.....	0017 00
Malfunction/Symptom Index.....	0018 00
Light Systems Troubleshooting.....	0019 00
Brake System Troubleshooting	0020 00
Landing Gear Troubleshooting.....	0021 00
Manhole Cover Troubleshooting	0022 00
Engine Troubleshooting	0023 00
Centrifugal Pump Troubleshooting.....	0024 00
Battery Troubleshooting	0025 00
Alternator and Charging Circuit Troubleshooting	0026 00
Filter/Separator Troubleshooting.....	0027 00
Piping Control Components Troubleshooting	0028 00
Fuel System Troubleshooting.....	0029 00
CHAPTER 5: DIRECT SUPPORT/GENERAL SUPPORT TROUBLESHOOTING	
Introduction.....	0030 00
Malfunction/Symptom Index.....	0031 00
Engine Troubleshooting	0032 00
Alternator and Charging Circuit Troubleshooting	0033 00
CHAPTER 6: OPERATOR MAINTENANCE INSTRUCTIONS	
Operator/Crew Preventive Maintenance Checks and Services (PMCS)	0034 00
Operator/Crew Lubrication Instructions.....	0035 00
Batteries, Terminals, and Cables Service	0036 00
Air Reservoir Maintenance.....	0037 00
Storage Box Maintenance	0038 00

TABLE OF CONTENTS—Continued

	<u>WP Sequence No.</u>
CHAPTER 6: OPERATOR MAINTENANCE INSTRUCTIONS—Continued	
Engine Air Filter Cleaner Maintenance.....	0039 00
Filter/Separator Sump Maintenance	0040 00
Fuel-Dispensing Nozzle and Pump Strainer Maintenance and Manual Pump Priming	0041 00
CHAPTER 7: ORGANIZATIONAL MAINTENANCE INSTRUCTIONS	
Service Upon Receipt.....	0042 00
Organizational Preventive Maintenance Checks and Services (PMCS)	0043 00
Organizational Lubrication Instructions	0044 00
General Maintenance Instructions	0045 00
Electrical Schematics	0046 00
24–12 V Converter Replacement.....	0047 00
Overflow Protection Monitor Panel Replacement	0048 00
Overflow Protection Sensor Replacement	0049 00
Overflow Protection Optic Socket Boxes Replacement	0050 00
Control Panel Light Replacement.....	0051 00
Marker Light LEDs Replacement	0052 00
Marker Light Receptacles Replacement	0053 00
Composite Stoplights Replacement	0054 00
Batteries Replacement.....	0055 00
Battery Cables Replacement.....	0056 00
Main Wiring Harness Maintenance	0057 00
Front Marker Lights Wiring Harness Maintenance.....	0058 00
Side Marker Lights Wiring Harness Maintenance	0059 00
Water Detection Switch and Harness Maintenance.....	0060 00
Composite Stoplight Harness Maintenance	0061 00
Intervehicular Wiring Harnesses Maintenance	0062 00
Conduits Replacement.....	0063 00
NATO Slave Receptacle Replacement	0064 00
Electrical Wiring Repair.....	0065 00
Brake Actuating Camshaft Replacement	0066 00
Brakeshoes Replacement.....	0067 00
Hubs, Brakedrums, and ABS Sensor Maintenance	0068 00
Slack Adjusters Maintenance.....	0069 00
ABS Diagnostics/ECU Valve Replacement.....	0070 00
Air Brake Chambers Maintenance	0071 00
Brake Interlock Valves Maintenance.....	0072 00
Air Reservoir Replacement	0073 00
Spring Brake Control Valve Maintenance	0074 00
Parking Brake Control Valve Maintenance	0075 00
Air Tubing and Fittings Maintenance.....	0076 00
Air Brake Hoses Maintenance.....	0077 00
Fail-Safe Chamber Brakes Release.....	0078 00
Service and Emergency Couplings (Gladhands) Maintenance.....	0079 00
Tire Maintenance.....	0080 00
Kingpin Coupler Replacement.....	0081 00
Kingpin Spacer Replacement.....	0082 00
Landing Gear Ground Boards Replacement.....	0083 00

TABLE OF CONTENTS—Continued

	<u>WP Sequence No.</u>
CHAPTER 7: ORGANIZATIONAL MAINTENANCE INSTRUCTIONS—Continued	
Curbside Landing Leg Replacement.....	0084 00
Roadside Landing Leg and Handcrank Replacement.....	0085 00
Mudflaps Replacement	0086 00
Static Reels and Electrical Clips Replacement	0087 00
Tool Box Replacement.....	0088 00
Grounding Rod Storage Tube Retaining Pin Replacement	0089 00
Hose Reel Cabinet Door Lock Release Levers Replacement	0090 00
Hose Reel Cabinet Door Latches Replacement	0091 00
Hose Reel Cabinet Door Springs Replacement.....	0092 00
Grounding Studs Replacement	0093 00
Hose Tubes Replacement.....	0094 00
Hose Tubes Access Covers Replacement	0095 00
Spare Tire Lifting Device (Winch) Replacement	0096 00
Drain Pipes Replacement	0097 00
Manhole Cover Maintenance	0098 00
Vent Cap Replacement	0099 00
Reflectors Replacement.....	0100 00
ID/Instruction Plates Replacement.....	0101 00
Hazardous Materials Placard Holders/Brackets Replacement	0102 00
Glow Plugs Replacement	0103 00
Engine Oil Filter and Oil Pressure Switch Replacement	0104 00
Engine Exhaust Manifold Replacement	0105 00
Intake Manifold Replacement.....	0106 00
Fuel Pump Replacement.....	0107 00
Engine Fuel Tank Replacement.....	0108 00
Engine Fuel Lines Replacement	0109 00
Engine Fan Belt Replacement.....	0110 00
Engine Intake Air Cleaner Replacement	0111 00
Air Cleaner Restriction Indicator Replacement	0112 00
Air Duct Hose Replacement.....	0113 00
Engine Throttle Cable Replacement	0114 00
Muffler and Exhaust Pipe Replacement.....	0115 00
Alternator and Mounting Bracket Maintenance	0116 00
Alternator Drive Belt Replacement.....	0117 00
Engine Electrical Box Replacement	0118 00
Starter Replacement	0119 00
Engine Control Panel Maintenance.....	0120 00
Fuel Level Sensor and Sensor Tube Maintenance	0121 00
Vapor Recovery System Replacement	0122 00
Hubodometer Replacement	0123 00
Filter/Separator Replacement	0124 00
Filter/Separator Filter Elements Maintenance.....	0125 00
Fluid Regulating (Relief) Valve Replacement.....	0126 00
Volumetric Meter and Piping Replacement.....	0127 00
G and M Valves Replacement	0128 00
P and R Valves Replacement	0129 00
Emergency Valve Maintenance.....	0130 00
High Level Shutoff Sensor Replacement	0131 00

TABLE OF CONTENTS—Continued

	<u>WP Sequence No.</u>
CHAPTER 7: ORGANIZATIONAL MAINTENANCE INSTRUCTIONS—Continued	
F, E, and B Valves and Handwheels Replacement.....	0132 00
Discharge Manifold Replacement	0133 00
Bottom Loading Valve Replacement.....	0134 00
Manifold Valve Replacement.....	0135 00
K Valve Replacement.....	0136 00
J and N Ball Valves Replacement.....	0137 00
Cabinet Piping Assembly Replacement	0138 00
Emergency Valve A Control Handle Maintenance	0139 00
Control Cable Replacement.....	0140 00
Fire Extinguisher Brackets Replacement.....	0141 00
Decontamination Apparatus Bracket Replacement	0142 00
Fill Gage Storage Tube Cap Replacement	0143 00
Engine Oil Filter Head Replacement.....	0144 00
Engine Oil Cooler Replacement.....	0145 00
Fuel Injection Lines and Fittings Replacement	0146 00
Engine Shroud Replacement	0147 00
Pump Tubing Replacement.....	0148 00
Preparation For Storage Or Shipment	0149 00
CHAPTER 8: DIRECT SUPPORT/GENERAL SUPPORT MAINTENANCE INSTRUCTIONS	
General Maintenance Instructions	0150 00
Specific Maintenance Instructions.....	0151 00
Trunnion Tube and Hangers Replacement.....	0152 00
Axles Replacement	0153 00
Leaf Springs Replacement.....	0154 00
Hose Reel Cabinet Replacement.....	0155 00
1-1/4 Inch Hose Reels Replacement	0156 00
Engine and Pump Cabinet Frame Replacement.....	0157 00
Engine Heat Shield Replacement	0158 00
Engine Fan Shroud Replacement	0159 00
Alternator Maintenance	0160 00
4-Inch Pump Maintenance	0161 00
Piping Frame Assembly Replacement.....	0162 00
G, M, P, and R Valves Maintenance	0163 00
Emergency Valve Maintenance.....	0164 00
F, E and B Valves Repair	0165 00
D Valve and Lines Replacement.....	0166 00
Vapor Integrity Test.....	0167 00
Intentionally Blank	0168 00
Intentionally Blank	0169 00
CHAPTER 9: SUPPORTING INFORMATION	
References.....	0170 00
Maintenance Allocation Chart (MAC).....	0171 00
Basic Issue Items (BII) List.....	0172 00
Additional Authorization List (AAL)	0173 00
Expendable and Durable Items List	0174 00
Mandatory Replacement Parts List	0175 00
Torque Values For Threaded Fasteners.....	0176 00

TABLE OF CONTENTS—Continued

	<u>WP Sequence No.</u>
CHAPTER 9: SUPPORTING INFORMATION—Continued	
RPSTL Introduction.....	0177 00
Figure 1. Liberty Onboard Monitor	0178 00
Figure 2. Liberty Optic Sensor.....	0179 00
Figure 3. Socket Box.....	0180 00
Figure 4. Electrical Converter.....	0181 00
Figure 5. Clearance Lights	0182 00
Figure 6. Stop, Tail and Blackout Lights	0183 00
Figure 7. Control Panel Light Assemblies	0184 00
Figure 8. Battery, Cover and Cables	0185 00
Figure 9. Slave Start Receptacle.....	0186 00
Figure 10. Chassis Wiring Harness	0187 00
Figure 11. Brake Light and Marker Light Harnesses.....	0188 00
Figure 12. Brake Light, Marker Light, and 3-In-Line Wiring Harnesses.....	0189 00
Figure 13. Intervehicular and Side Marker Light Wiring Harnesses.....	0190 00
Figure 14. Wiring Harness Conduit Components	0191 00
Figure 15. Rear Axle Assembly.....	0192 00
Figure 16. Shoe and Lining Assembly.....	0193 00
Figure 17. Brake Camshafts	0194 00
Figure 18. Slack Adjuster	0195 00
Figure 19. Anti-Lock Braking System.....	0196 00
Figure 20. Air Brake Chambers.....	0197 00
Figure 21. Air Brake Control Valve.....	0198 00
Figure 22. Air Couplings.....	0199 00
Figure 23. Brake Lines/Air Reservoirs	0200 00
Figure 24. Hub and Drum.....	0201 00
Figure 25. Wheel Assembly	0202 00
Figure 26. Tires	0203 00
Figure 27. Ladder Assembly	0204 00
Figure 28. Coupler Assembly.....	0205 00
Figure 29. Spare Wheel Carrier and Hoist.....	0206 00
Figure 30. Ground Board Assembly.....	0207 00
Figure 31. Landing Gear Assembly.....	0208 00
Figure 32. Suspension	0209 00
Figure 33. Mud Flaps and Splash Guards	0210 00
Figure 34. Fenders.....	0211 00
Figure 35. Static Reel Assembly	0212 00
Figure 36. Hose Tubes.....	0213 00
Figure 37. Hose Reel Assemblies.....	0214 00
Figure 38. Hose Reel Cabinet.....	0215 00
Figure 39. Hose Reel Cabinet Door Assembly.....	0216 00
Figure 40. Storage Box	0217 00
Figure 41. Engine Housing and Frame Assembly.....	0218 00
Figure 42. Manhole Cover Assembly	0219 00
Figure 43. Miscellaneous Body Parts.....	0220 00
Figure 44. Reflectors.....	0221 00
Figure 45. Vehicle I.D., Instruction Plates, and Mounting Hardware.....	0222 00
Figure 46. Vehicle I.D., Instruction Plates, and Mounting Hardware.....	0223 00
Figure 47. Hazardous Material Placards	0224 00

TABLE OF CONTENTS—Continued

	<u>WP Sequence No.</u>
CHAPTER 9: SUPPORTING INFORMATION—Continued	
Figure 48. Engine Assembly	0225 00
Figure 49. Engine Block Assembly.....	0226 00
Figure 50. Engine Oil Systems Group.....	0227 00
Figure 51. Engine Intake Manifold.....	0228 00
Figure 52. Engine Fuel Injector System	0229 00
Figure 53. Nozzle and Holder Assembly	0230 00
Figure 54. Engine Fuel Pump Assembly.....	0231 00
Figure 55. Air Cleaner Assembly.....	0232 00
Figure 56. Engine Fuel Lines	0233 00
Figure 57. Fuel Tank Assembly	0234 00
Figure 58. Engine Fuel Filter Assembly	0235 00
Figure 59. Engine Throttle Assembly	0236 00
Figure 60. Muffler Assembly	0237 00
Figure 61. Exhaust Pipe	0238 00
Figure 62. Exhaust Manifold.....	0239 00
Figure 63. Engine Shrouds.....	0240 00
Figure 64. Engine Cooling System	0241 00
Figure 65. Engine Shrouding.....	0242 00
Figure 66. Alternator Mounting Parts	0243 00
Figure 67. Alternator Component Parts	0244 00
Figure 68. Starting Motor and Mounting Hardware	0245 00
Figure 69. Engine Electrical Box	0246 00
Figure 70. Glow Plug Wiring	0247 00
Figure 71. Alternator Wiring	0248 00
Figure 72. Starter Wiring	0249 00
Figure 73. Oil Pressure Switch and Wiring	0250 00
Figure 74. Control Panel Assembly.....	0251 00
Figure 75. Radar Fuel Level Sensor	0252 00
Figure 76. Engine Control Panel Wiring.....	0253 00
Figure 77. Vapor Recovery Kit	0254 00
Figure 78. Electrical Assembly for Hose Reel Cabinet	0255 00
Figure 79. Hubodometer	0256 00
Figure 80. Gage Assembly, In-Tank	0257 00
Figure 81. Control Panel Gages.....	0258 00
Figure 82. Filter Separator	0259 00
Figure 83. Separator Mounting Assembly	0260 00
Figure 84. Drain Valve Assembly	0261 00
Figure 85. Filter Separator Tubing Assembly.....	0262 00
Figure 86. Pump Assembly	0263 00
Figure 87. Pump Coupling Parts	0264 00
Figure 88. Meter Assembly	0265 00
Figure 89. Piping Frame Assembly	0266 00
Figure 90. Emergency Valve Piping	0267 00
Figure 91. Manifold and Flange Assembly	0268 00
Figure 92. Pump Piping Assembly	0269 00
Figure 93. Cabinet Piping.....	0270 00
Figure 94. Hose Reel Piping	0271 00
Figure 95. Float Installation	0272 00

TABLE OF CONTENTS—Continued

	<u>WP Sequence No.</u>
CHAPTER 9: SUPPORTING INFORMATION—Continued	
Figure 96. Valve Assembly, Emergency	0273 00
Figure 97. Valve Assembly, “B, E, and F”	0274 00
Figure 98. “D” Valve and Tubing Assembly.....	0275 00
Figure 99. High Level Shutoff Valve.....	0276 00
Figure 100. Valve Assembly, “G”	0277 00
Figure 101. Valve Assembly, “R and P”	0278 00
Figure 102. Valve Assembly, “M”	0279 00
Figure 103. Control Cable Assemblies.....	0280 00
Figure 104. Miscellaneous Parts	0281 00
Figure 105. Fire Extinguisher Brackets	0282 00
Figure 106. Decontamination Apparatus Bracket	0283 00

HOW TO USE THIS MANUAL

SCOPE

This manual provides you with the information you will need to operate and maintain the semitrailer.

MANUAL CONTENT

The front matter in this manual consists of general warnings, title block page, and table of contents.

The information contained in this manual is presented in nine chapters. Each chapter is divided into Work Packages (WPs) that cover operating procedures, maintenance procedures, troubleshooting procedures, and other information for specific systems or components. Each WP starts on a right-hand page. Page number consists of the WP number followed by a dash and another number. For example "0007 00-9" means WP 0007 00, page 9.

At the end of this manual are an alphabetical index, DA Form 2028-2, and metric conversion chart.

Front Matter

There are general warnings that start on the first right-hand page immediately after the cover that should be read before performing any maintenance on the semitrailer.

The title block page includes the reporting of errors and recommending improvements statement.

The table of contents lists the chapters and WPs in the manual.

Chapters

Chapter 1 provides general information, equipment descriptions, and theory of operation.

Chapter 2 provides the description and use of controls and indicators, and operating instructions.

Chapter 3 provides Operator troubleshooting procedures.

Chapter 4 provides Organizational troubleshooting procedures.

Chapter 5 provides Direct Support and General Support troubleshooting.

Chapter 6 provides Operator maintenance instructions.

Chapter 7 provides Organizational maintenance instructions.

Chapter 8 provides Direct Support and General Support maintenance instructions.

Chapter 9 provides supporting information, including the publications referenced in this manual, Maintenance Allocation Chart (MAC), Basic Issue Items (BII) list, expendable and durable items list, torque limits, and Repair Parts and Special Tools List (RPSTL).

Alphabetical Index

An index is located after the last WP in this manual that provides an alphabetical listing of information and components/assemblies contained in this manual.

HOW TO USE THIS MANUAL—Continued

DA Form 2028-2

DA Form 2028-2 is used to report errors and to recommend improvements for the tasks in this manual.

Metric Conversion Chart

This metric conversion chart converts English measurements to metric equivalents. Measurements in this manual are provided in both English and metric units.

WARNINGS, CAUTIONS, AND NOTES

You must read and understand this manual BEFORE operating the semitrailer.

Throughout this manual, you will see **WARNING**, **CAUTION**, and **NOTE** headings. There are good reasons for every one of these notices:

WARNING

A warning is used to alert the user to hazardous operating and maintenance procedures, practices, or conditions that could result in injury or death. Warnings must be strictly observed.

CAUTION

A caution is used to alert the user to hazardous operating and maintenance procedures, practices, or conditions that could result in damage to, or destruction of, equipment or mission effectiveness. Cautions must be strictly observed.

NOTE

A note highlights an essential operating or maintenance procedure, condition, or statement.

Warnings and cautions appear immediately preceding the step to which they pertain. It is important to read and thoroughly understand the warnings and/or cautions before beginning maintenance. Notes may precede or follow the steps to which they pertain, depending on what makes the most sense.

INITIAL SETUPS

Before starting a task, you must obtain all the tools, supplies, and personnel listed in the initial setup. Be sure to read the task before performing the maintenance. If any other tasks are referenced, you must go to the initial setup page for each of these tasks to find out what tools, supplies, and personnel will be needed.

INDEXING

Three indexing procedures are used in this manual to help you locate information quickly:

- Table of contents
- Controls and indicators index in WP 0006 00
- Alphabetical index at the back of this manual

SEMITRAILER GENERAL INFORMATION

0001 00

TYPE OF MANUAL


TM 9-2330-330-14&P is an Operator's, Organizational, Direct Support, and General Support Maintenance Manual including a RPSTL.

EQUIPMENT NAME AND MODEL NUMBER

This manual covers: Semitrailer, Fuel Tanker: 5000-Gallon, Fuel-Dispensing, Automotive, M969A3.

PURPOSE OF EQUIPMENT

The purpose of this semitrailer is to haul and dispense fuel.

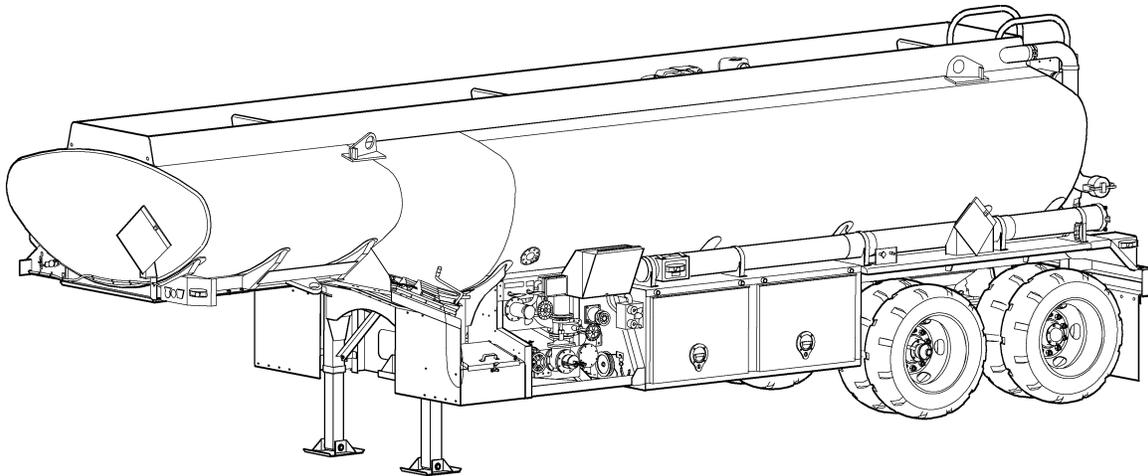

M969A3 Semitrailer

MAINTENANCE FORMS, RECORDS, AND REPORTS

Department of the Army forms and procedures used for equipment maintenance will be those prescribed by DA PAM 738-750, Functional Users Manual for the Army Maintenance Management System (TAMMS) or AR 700-138, Army Logistics Readiness and Sustainability.

REPORTING EQUIPMENT IMPROVEMENT RECOMMENDATIONS (EIRs)

If your semitrailer needs improvement let us know. Send us an EIR. You, the user, are the only one who can tell us what you do not like about your equipment. Let us know why you do not like the design. Put it on an SF 368 (Product Quality Deficiency Report). Mail it to the address specified in DA PAM 738-750, Functional Users Manual for TAMMS, or as specified by the contracting activity. We will send you a reply.

CORROSION PREVENTION AND CONTROL (CPC)

CPC of Army material is a continuing concern. It is important that any corrosion problems with this item be reported so that the problem can be corrected and improvements can be made to prevent the problem in future items.

SEMITRAILER GENERAL INFORMATION—Continued0001 00

While corrosion is typically associated with rusting of metals, it can also include deterioration of other materials, such as rubber and plastic. Unusual cracking, softening, swelling, or breaking of these materials may be a corrosion problem.

If a corrosion problem is identified, it can be reported using SF 368, Product Maintenance Deficiency Report. Use of key words such as "corrosion," "rust," "deterioration," or "cracking" will ensure that the information is identified as a CPC problem.

The form should be submitted to the address specified in DA PAM 738-750, TAMMS.

DESTRUCTION OF ARMY MATERIEL TO PREVENT ENEMY USE

For destruction of Army materiel to prevent enemy use, refer to TM 750-244-6.

WARRANTY STATEMENT

Heil Trailer International warrants its Tank Trailer Equipment to be free from defects in material and workmanship under normal use, when proper service and maintenance as described in its Service Bulletins and Operation Manuals are performed, for a period of 12 months from the date when these products are delivered to the first purchaser.

This warranty is expressly limited to the repair or replacement of any component or part thereof, of any such unit manufactured by Heil Trailer International, that is proven to Heil's satisfaction to have been defective in material or workmanship. Such components or parts thereof shall be repaired or replaced without cost to the first purchaser for parts and labor provided such unit is returned for such repair or replacement to an authorized Heil Distributor, or such other place as may be designated by Heil, within 12 months from the date on which the unit was delivered to such first purchaser.

Heil Trailer International neither warrants, nor does it accept liability for products manufactured by others and installed by Heil. Purchaser and/or end user must pursue any claims of any nature whatsoever, including warranties with the manufacturer of said product.

Heil Trailer International makes no other warranty, expressed or implied, and makes no warranty of merchantability or of fitness for any particular purpose.

Heil Trailer International does not assume any other liability of any nature whatsoever, including but not limited to, any direct or indirect or consequential loss, transportation charges, loss of profits, damages, or delays. Any improper use, operation beyond rated capacity, substitution of parts not approved by us, or any alteration or repair by others in such manner as in our judgment affects the product materially and adversely, shall void this warranty.

Other than extension of the warranty period under Heil's Extended Warranty Program, no employee or representative is authorized to change this warranty in any way or grant any other warranty.

Heil Trailer International warrants that this trailer is manufactured in accordance with the specifications on the order. Heil Trailer International does not warranty this piece of equipment for use in hauling any specific product. Heil Trailer International accepts no responsibility for damage to the equipment, or for cargo losses, due to an adverse effect on the equipment caused by the incompatibility of the product being hauled in the trailer. Where tanks are prepared for lining, all agreements that concern the tank

SEMITRAILER GENERAL INFORMATION—Continued

0001 00

barrel lining will be the responsibility of the customer and the lining company. In this connection, Heil Trailer International makes no warranty of products, including lining manufactured and/or installed by others, the same being subject to warranties, if any, of their respective manufacturers or installers. The customer shall bear the risk for damage or loss to the tank or injury to property or person, while the tank is either at or in transit to or from the lining company. In those instances where the lining application is performed by a Heil Trailer International facility, no warranty will be provided to the installation or application of those lining materials.

Heil Trailer International does not assume any liability for interior cleanliness and finish requirements of trailers due to different operations and circumstances. As such, Heil Trailer International does not certify that trailers are ready to be placed in service for product upon delivery. The trailer must be inspected, cleaned, washed, and otherwise prepared for its intended service by the user to the requirements of the customer prior to placing into service.

The above warranty supersedes and is in lieu of all other warranties expressed or implied.

LIST OF ABBREVIATIONS/ACRONYMS

AAL	Additional Authorization List
ABS	Antilock Brake System
Bil	Basic Issue Items
CAGEC	Commercial and Government Entity Code
cm	centimeters
CPC	Corrosion Prevention and Control
dc	direct current
DS	Direct Support
EA	each
ECU	Electronic Control Unit
EIR	Equipment Improvement Recommendation
EPA	Environmental Protection Agency
FMTV	Family of Medium Tactical Vehicles
gal.	gallons
GL	gallons
gpm	gallons per minute
GS	General Support
in	inches
kg	kilograms
km/h	kilometers per hour
kPa	kilopascals
L	liters
LB	pound
lb-ft	pound-feet
Lpm	liters per minute
MAC	Maintenance Allocation Chart
m	meters
mm	millimeters
mph	miles per hour
MWO	Modification Work Order
NATO	North Atlantic Treaty Organization
NSN	National Stock Number

SEMITRAILER GENERAL INFORMATION—Continued

0001 00

N•m Newton-meters
P/N Part Number
PMCS Preventive Maintenance Checks and Services
psi pounds per square inch
PT pint
QT quart
RO roll
ROM Refuel on the Move
RPSTL Repair Parts and Special Tools List
SC Supply Catalog
SMR Source, Maintenance, and Recoverability
SRA Specialized Repair Activity
TAMMS The Army Maintenance Management System
TAMMS-A The Army Maintenance Management System—Aviation
TB Technical Bulletin
TM Technical Manual
TMDE Test, Measurement, and Diagnostic Equipment
V volts
WC Water Column
WP Work Package

END OF TASK