


TECHNICAL MANUAL

OPERATOR, ORGANIZATIONAL, AND
DIRECT SUPPORT MAINTENANCE MANUAL

AIR CONDITIONER,
HORIZONTAL,
9,000 BTU/HR

A.R.E. MANUFACTURING CO., INC.
MODEL FM9000
NSN 4120-01-125-3947

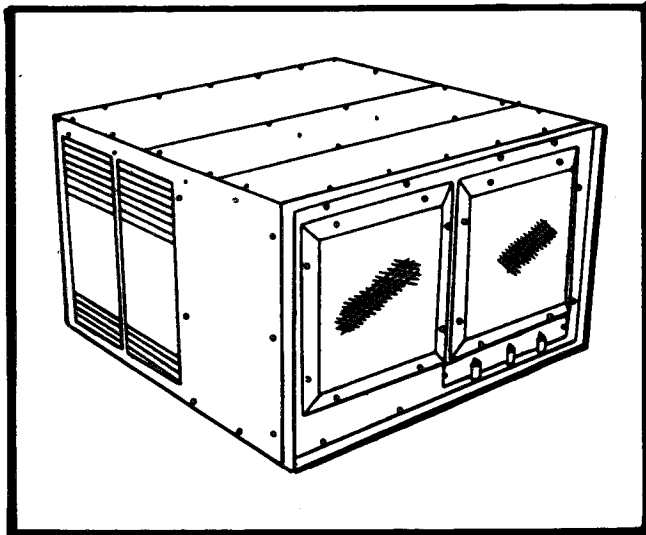

| | PAGE |
|--------------------------------|------|
| INTRODUCTION | 1-1 |
| OPERATING INSTRUCTION | 2-1 |
| OPERATOR'S TROUBLESHOOTING | 3-2 |
| ORGANIZATIONAL MAINTENANCE | 4-1 |
| ORGANIZATIONAL TROUBLESHOOTING | 4-17 |
| DS MAINTENANCE | 5-1 |
| INDEX | 1 |

TECHNICAL MANUAL
No. 5-4120-374-13

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D. C., 7 October 1983

Operator's Organizational, and Direct Support
Maintenance Manual

AIR CONDITIONER, HORIZONTAL
9,000 BTU/HR

(A.R.E. MFG.CO.INC. MODEL FM9000)

(41 20-01-125-3947)

REPORTING OF ERRORS

You can help to improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms) directly to Commander, U.S. Army Troop Support & Aviation Material Readiness Command, ATTN: DRSTS-MPSD, 4300 Goodfellow Boulevard, St. Louis, Missouri 63120. A reply will be furnished to you.

Table of Contents

| | | Page |
|------------------|---|------|
| CHAPTER 1 | INTRODUCTION | 1-1 |
| | CHAPTER OVERVIEW | 1-1 |
| Section I | GENERAL INFORMATION | 1-1 |
| 1-1 | Scope | 1-1 |
| 1-2 | Maintenance Forms and Records | 1-1 |
| 1-3 | Destruction of Army Materiel to Prevent Enemy Use | 1-1 |
| 1-4 | Reporting Equipment Improvement Recommendations (E I R'S) | 1-1 |
| 1-5 | List of Abbreviations | 1-2 |
| 1-6 | Hand Receipt | 1-2 |
| Section II | EQUIPMENT DESCRIPTION | 1-3 |
| 1-7 | Purpose of Air Conditioner | 1-3 |
| 1-8 | Location and Description of Major Components | 1-3 |
| 1-9 | Performance Data (Organizational Maintenance) | 1-4 |
| 1-10 | Performance Data (Direct Support Maintenance) | 1-5 |
| Section III | TECHNICAL PRINCIPLES OF OPERATION | 1-6 |
| 1-11 | General | 1-6 |
| 1-12 | Cooling | 1-6 |
| 1-13 | Ventilation | 1-7 |
| CHAPTER 2 | OPERATING INSTRUCTIONS | 2-1 |
| | CHAPTER OVERVIEW | 1-1 |
| Section I | PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS) | 2-1 |
| 2-1 | General | 2-1 |
| 2-2 | Operator/Crew Preventive Maintenance Checks and Services (PMCS) | 2-1 |
| 2-3 | Starting and Operating Instructions for Cooling | 2-3 |
| 2-4 | Fresh Air Mode | 2-4 |
| 2-5 | Stopping Instructions | 2-4 |
| 2-6 | Operating Instructions on Decals and Instruction Plates | 2-5 |

Table of Contents (Cont)

| | | Page |
|-------------|--|------|
| Section II | OPERATION UNDER UNUSUAL CONDITIONS | 2-6 |
| 2-7 | Operation in Extreme Heat | 2-6 |
| 2-8 | Operation in Dusty or Sandy Areas | 2-6 |
| 2-9 | Operation Under Rainy or Humid Conditions | 2-6 |
| 2-10 | Operation in Salt Water Areas. | 2-6 |
| CHAPTER 3 | OPERATOR'S MAINTENANCE INSTRUCTIONS | 3-1 |
| | CHAPTER OVERVIEW | 3-1 |
| Section I | LUBRICATION INSTRUCTIONS | 3-1 |
| 3-1 | Fan Motor Lubrication | 3-1 |
| Section II | OPERATOR TROUBLESHOOTING | 3-2 |
| 3-2 | General | 3-2 |
| 3-3 | Troubleshooting Table | 3-2 |
| Section III | OPERATOR MAINTENANCE PROCEDURES | 3-3 |
| 3-4 | Housing Panels | 3-3 |
| 3-5 | Air Diffuser and Return Air Grills | 3-6 |
| 3-6 | Drains | 3-7 |
| 3-7 | Control Panel Switches | 3-8 |
| CHAPTER 4 | ORGANIZATIONAL MAINTENANCE INSTRUCTIONS | 4-1 |
| | CHAPTER OVER VIEW | 4-1 |
| Section I | REPAIR PARTS, SPECIAL TOOLS, TM DE, AND SUPPORT EQUIPMENT | 4-1 |
| 4-1 | Maintenance Repair Parts | 4-1 |
| 4-2 | Common Tools and Equipment | 4-1 |
| 4-3 | Special Tools and Test Equipment | 4-1 |
| 4-4 | Consumable Materials | 4-1 |
| Section II | SERVICE UPON RECEIPT | 4-2 |
| 4-5 | Service Upon Receipt Checklist | 4-2 |
| 4-6 | Assembly and Preparation for Typical Use | 4-3 |
| 4-7 | Position the Unit | 4-3 |
| 4-8 | Mount the Unit | 4-3 |
| 4-9 | Connect the Power Source | 4-4 |
| 4-10 | Initial Adjustments, | 4-4 |
| 4-11 | Fan Rotation Check. | 4-4 |
| 4-12 | Return Air Grill Check | 4-4 |
| Section III | ORGANIZATIONAL PREVENTIVE MAINTENANCE CHECKS AND SERVICES(PMCS), | 4-5 |
| 4-13 | General | 4-5 |
| 4-14 | Preventive Maintenance Checks and Services (PMCS) | 4-5 |
| Section IV | ORGANIZATIONAL TROUBLESHOOTING | 4-16 |
| 4-15 | General | 4-16 |
| 4-16 | Organizational Troubleshooting Table | 4-16 |
| Section V | ORGANIZATIONAL MAINTENANCE PROCEDURES. | 4-20 |
| 4-17 | Housing Panels and Grills | 4-20 |
| 4-18 | Air Filter | 4-25 |
| 4-19 | Fan Motor | 4-27 |
| 4-20 | Condenser Fan | 4-33 |

| | | Page |
|-------------------|--|------------|
| 4-21 | Circulating Fan | 4-37 |
| 4-22 | Selector Switch | 4-41 |
| 4-23 | Thermostat Switch | 4-44 |
| 4-24 | Motor Capacitor | 4-48 |
| 4-25 | Start Capacitor | 4-50 |
| 4-26 | Run Capacitor | 4-53 |
| 4-27 | Start Relay | 4-55 |
| 4-28 | Wiring | 4-58 |
| 4-29 | Compressor | 4-62 |
| 4-30 | Refrigerant Piping | 4-64 |
| 4-31 | Evaporator Coil | 4-69 |
| 4-32 | Condenser Coil | 4-72 |
| 4-33 | Sight Glass | 4-74 |
| 4-34 | Expansion Valve | 4-76 |
| 4-35 | Preparation for Storage or Shipment | 4-78 |
| CHAPTER 5 | DIRECT SUPPORT MAINTENANCE INSTRUCTIONS. | 5-1 |
| | CHAPTER OVER VIEW | 5-1 |
| Section I | REPAIR PARTS, SPECIAL TOOLS, TMDE, AND SUPPORT EQUIPMENT | 5-1 |
| 5-1 | Maintenance Repair Parts | 5-1 |
| 5-2 | Common Tools and Equipment | 5-1 |
| 5-3 | Special Tools and Test Equipment | 5-1 |
| 5-4 | Consumable Materials | 5-1 |
| Section II | DIRECT SUPPORT TROUBLESHOOTING | 5-2 |
| 5-5 | General | 5-2 |
| 5-6 | Direct Support Troubleshooting Table. | 5-2 |
| Section III | DIRECT SUPPORT MAINTENANCE PROCEDURES | 5-4 |
| 5-7 | Refrigerant Servicing | 5-4 |
| 5-8 | Compressor | 5-10 |
| 5-9 | Refrigerant Piping and Service Valves | 5-15 |
| 5-10 | Evaporator | 5-22 |
| 5-11 | Condenser | 5-28 |
| 5-12 | Dehydrator | 5-32 |
| 5-13 | Sight Glass | 5-34 |
| 5-14 | Expansion Valve | 5-35 |
| | APPENDICES | |
| APPENDIX A | REFERENCES | A-1 |
| APPENDIX B | MAINTENANCE ALLOCATION CHART | B-1 |
| APPENDIX C | COMPONENTS OF END ITEMS LIST | C-1 |
| APPENDIX D | ADDITIONAL ORGANIZATION LIST | D-1 |
| APPENDIX E | EXPANDABLE SUPPLIES AND MATERIALS LIST | E-1 |
| APPENDIX F | DIAGRAMS | F-1 |
| | INDEX | I-1 |

CHAPTER 1

INTRODUCTION

CHAPTER OVERVIEW

The purpose of this chapter is two-fold:

- a. To provide you with the standard data required in all manuals (i.e., forms and record data).
- b. To acquaint you with the air conditioner. This is done by giving you a physical and functional description of those major equipment parts that you are likely to come in contact with.

Section I. GENERAL INFORMATION

1-1. SCOPE

Type of Manual: Operator's, Organizational, Direct Support and General Support Maintenance

Model Number and Equipment Name: FM9000 Air Conditioner: Floor Mounted, Air Cooled, Electric Motor Driven, 3/4 HP, 60 Hertz AC, Single Phase, 9,000 BTU/HR, Horizontal

Purpose of Equipment: Provide filtered, cooled air to a desired predetermined range and circulating the air to provide cooling of equipment or personnel within the air conditioned area.

1-2. MAINTENANCE FORMS AND RECORDS

Department of the Army forms and procedures used for equipment maintenance will be those prescribed by TM 38-750, the Army Maintenance Management Systems (TAMMS).

1-3. DESTRUCTION OF ARMY MATERIEL TO PREVENT ENEMY USE

Refer to TM 750-244-3, Procedures for Destruction of Equipment to Prevent Enemy Use, for information about destruction.

1-4. REPORTING EQUIPMENT IMPROVEMENT RECOMMENDATIONS (EIRs)

If your air conditioner needs improvement, let us know. Send us an E I R. You, the user, are the only one who can tell us what you don't like about your equipment. Let us know why you don't like the design. Tell us why a procedure is hard to perform. Put it on an SF 368 (Quality Deficiency Report), Mail it directly to Commander, U.S. Army Troop and Aviation Materiel Readiness Command, ATTN: DRSTS-MPSD, 4300 Goodfellow Boulevard, St. Louis, Missouri 63120.

1-5. LIST OF ABBREVIATIONS

| | | | |
|-------------------|--------------------------------|-----|---------------------------|
| a | Ampere | l | liter |
| BTU/HR | British Thermal Units per Hour | lb | pound |
| C | Celcius | OD | Outside Diameter |
| COMPR | Compressor | psi | pounds per square inch |
| DB | Dry Bulb | pt | pint |
| F | Farenheit | rpm | revolutions per minute |
| hpr | Horsepower | SHR | Sensible Heat Ratio |
| in | inch | v | volts |
| kg | kilogram | vac | volts alternating current |
| kg/m ² | kilograms per square meter | vdc | volts direct current |

1-6. HAND RECEIPT

Hand receipts for Components of End Item (COEI), Basic Issue Items (BII), and Additional Authorization List (AAL) items are published in a Hand Receipt manual, TM 5-4120-374-14-HR. This manual is published to aid in property accountability and is available through Commander, U.S. Army Adjutant General, 2800 Eastern Boulevard, Baltimore, Maryland 21220.

Section II. EQUIPMENT DESCRIPTION

1-7. PURPOSE OF AIR CONDITIONER

The air conditioner is used primarily in van type enclosures. The units provide filtered, cooled air, as required, to maintain the service conditions necessary for the efficient operation of electronic equipment in the vans. The air conditioners also provide for the comfort of operating personnel housed within the vans.

Capabilities and Features

Floor mounted and air cooled

Electric motor driven and designed for continuous operation under varying loads

Furnishes 9,000 BTU/HR for cooling

- Air conditioner housing and panels
- Fan motor and fans
- Control panel
- Compressor
- Evaporator coil, expansion valves, and piping
- Condenser coil, dehydrator, valves and piping

1-8. LOCATION AND DESCRIPTION OF MAJOR COMPONENTS

1. Return Air Grill – Adjustable and controls the amount of air passing through the air conditioner.
2. Condenser Inlet – Directs flow of air condenser
3. Air Diffuser Grill – Directs flow of evaporator outlet air.
4. Control Panel – Contains all control switches.
5. Power Cable – For connection to 115 volts, 60 Hz, single phase power source.

